

- Manuals.plus /
- > BOMOVA /
- > BOMOVA Heated Electric Throw Blanket (Model XLDY-5060) User Manual

BOMOVA XLDY-5060

BOMOVA Heated Electric Throw Blanket User Manual

Model: XLDY-5060

1. PRODUCT OVERVIEW

This manual provides instructions for the safe and efficient use of your BOMOVA Heated Electric Throw Blanket. This electric throw blanket features 10 heating levels and an 8-hour auto-off function, designed for comfort and warmth. The blanket is made from soft polyester material, with a fleece and flannel fill.



Image 1.1: BOMOVA Heated Electric Throw Blanket (Moss, Throw size).

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this electric blanket. Failure to follow these instructions may result in fire, electric shock, or injury.

- Do not use with an infant, child, incapacitated person, or anyone insensitive to heat.
- Do not use if the blanket is wet.
- Do not dry clean this product. Cleaning solvents may damage the insulation of the heating element.
- Do not use pins or other metallic objects with this blanket. They may damage electrical wiring.
- Do not use if the power cord or controller is damaged. Contact customer support for assistance.
- Always unplug the blanket from the electrical outlet when not in use.
- Do not tuck in, pinch, or fold the power cord.
- Ensure the blanket is spread flat and not bunched or folded when in use to prevent overheating.
- This blanket is for household use only.

3. SETUP GUIDE

1. Carefully unpack the heated blanket and its controller. Ensure all components are present and free from damage.
2. Locate the power inlet on the blanket and securely connect the controller cable to it. Ensure a firm connection.

3. Plug the power cord from the controller into a standard 120V AC electrical outlet.
4. Spread the blanket evenly on your desired surface (e.g., bed, couch) ensuring there are no folds or creases that could trap heat.

4. OPERATING YOUR HEATED BLANKET

The BOMOVA Heated Electric Throw Blanket is operated using the attached LED controller. The controller allows you to power the blanket on/off, adjust heating levels, and set an automatic shut-off timer.



Image 4.1: Controller for the Heated Electric Throw Blanket.

4.1 Power On/Off

- To turn the blanket **ON**, press the power button (O/I) on the controller. The LED display will illuminate.
- To turn the blanket **OFF**, press the power button again.

4.2 Adjusting Heating Levels

- The blanket offers 10 heating levels, ranging from 83°F to 113°F.
- Use the temperature adjustment buttons (⬆ and ⬇) to increase or decrease the heat setting.
- The current heating level will be displayed on the LED screen.

4.3 Setting the Auto-Off Timer

- The blanket features an automatic shut-off function for safety and energy saving.
- Press the timer adjustment button (**clock icon**) to cycle through available timer settings: 1, 2, 4, 6, or 8 hours.
- If no specific timer is set, the blanket will automatically power off after 8 hours of continuous use.

5. CARE AND MAINTENANCE

Proper care will extend the life of your heated blanket. Always disconnect the power cord from the wall outlet and the controller from the blanket before cleaning.

5.1 Cleaning Instructions

- **Hand Wash Only:** Gently hand wash the blanket in lukewarm water with mild detergent.
- Do not machine wash, tumble dry, bleach, iron, or dry clean. These actions can damage the internal wiring and fabric.
- Rinse thoroughly and gently squeeze out excess water.
- **Drying:** Hang the blanket to air dry completely. Ensure it is fully dry before reconnecting the controller or storing.

5.2 Storage

- Ensure the blanket is completely dry before folding.
- Gently fold or roll the blanket. Avoid sharp creases that could damage the internal wires.
- Store in a cool, dry place, away from direct sunlight and moisture.

6. TROUBLESHOOTING

If you experience issues with your BOMOVA Heated Electric Throw Blanket, please refer to the following common solutions:

- **Blanket not heating:**
 - Check that the power cord is securely plugged into both the blanket's inlet and a functional wall outlet.
 - Ensure the controller is powered on and a heating level has been selected.
- **Controller display not working:**
 - Verify the power connection to the wall outlet and the blanket.
 - If the issue persists after checking connections, contact customer support.
- **Blanket feels too hot in one area:**
 - Immediately turn off and unplug the blanket.
 - Inspect the blanket for any folds, bunches, or damage. Ensure it is spread flat during use.

For problems not addressed here, or if troubleshooting steps do not resolve the issue, please contact BOMOVA customer

support.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	BOMOVA
Model Number	XLDY-5060
ASIN	B0F3JL9W65
UPC	759242535749
Material	100% Polyester (Fleece, Flannel)
Color	Moss
Size (L x W)	50" x 62" (Throw)
Heating Levels	10 (83°F - 113°F)
Auto-Off Timer	1, 2, 4, 6, or 8 hours (default 8 hours)
Power Cord Length	7.87 ft
Product Care	Hand Wash Only



Image 7.1: Available sizes for BOMOVA Heated Electric Blankets.

8. WARRANTY AND CUSTOMER SUPPORT

For information regarding the product warranty, or for technical assistance and support, please contact BOMOVA customer service through the retailer where the product was purchased or visit the official BOMOVA website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F3JL9W65>

More documents and user manuals: <https://manuals.plus/>