

[Manuals.plus](#) /

› [Furry Touch](#) /

› Furry Touch Dog Paw Trimmer - Electric Cordless Pet Clippers User Manual

Furry Touch B0F3KDJLRP

Furry Touch Dog Paw Trimmer - Electric Cordless Pet Clippers User Manual

Model: B0F3KDJLRP

INTRODUCTION

Thank you for choosing the Furry Touch Electric Cordless Pet Clippers. This device is designed for precise and gentle grooming of your pet's sensitive areas, such as paws, ears, and face. Please read this manual thoroughly before first use to ensure safe and optimal performance.

PRODUCT OVERVIEW

Package Contents

- Furry Touch Electric Cordless Pet Clippers
- USB-C Charging Cable
- Grooming Comb
- Cleaning Brush
- Drawstring Travel Bag
- User Manual

Key Features

- **Precision Ceramic Blade:** Ultra-small rounded ceramic blade for safe trimming in delicate areas.
- **Dual-Speed Operation:**
 - *Quiet Mode:* For sensitive pets and fine fur, reducing anxiety during grooming.
 - *Strong Mode:* For thicker fur and more challenging areas like paw pads.
- **Cordless & Rechargeable:** USB-C charging with an LED battery display for convenience.
- **Built-in LED Light:** Enhances visibility for precise trimming.
- **Portable Design:** Lightweight and travel-ready with an included storage bag.



Image: The Furry Touch Dog Paw Trimmer, its packaging, a USB-C cable, a grooming comb, a cleaning brush, and a drawstring travel bag.

Designed for Pet Safety & Comfort

furry touch




Rounded Blade for
Safe Trimming



Built-in LED for
Visibility



Battery Display

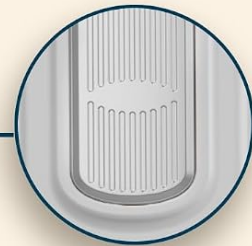

Dual Modes



Image: A detailed diagram of the trimmer, pointing out its rounded blade for safety, built-in LED for visibility, battery display, and dual mode switch.

SETUP

Charging the Device

1. Connect the provided USB-C charging cable to the charging port on the trimmer.
2. Plug the other end of the USB-C cable into a compatible USB power adapter (not included) or a computer's USB port.
3. The LED display will show the battery percentage during charging.
4. A full charge typically takes approximately 2-3 hours. The display will indicate 100% when fully charged.
5. Disconnect the charger once fully charged to preserve battery life.

Note: For optimal battery longevity, avoid completely draining the battery before recharging.

OPERATING INSTRUCTIONS

Preparing Your Pet

- Ensure your pet is calm and comfortable. Introduce the trimmer slowly, allowing them to sniff and get used to the sound.
- Brush your pet's fur with the included grooming comb to remove any tangles or mats before trimming. This prevents pulling and discomfort.

Trimming Procedure

1. **Power On:** Press the power button to turn on the trimmer. The LED light will illuminate.
2. **Select Speed:** Press the power button again to switch between Quiet Mode (lower speed, less noise) and Strong Mode (higher speed, more power). Choose the appropriate mode based on your pet's sensitivity and fur thickness.



furry touch

2 Power Modes

Strong Mode

Extra cutting power for tougher jobs like the thicker coats.

Cuts through dense or coarse fur with ease

Best For:
Heavy-duty trimming, thicker fur types





Quiet Mode

Designed for Sensitive Pets
Perfect for trimming around delicate areas

Operates quietly to reduce stress and help pets stay calm during grooming.

Best For:
Small trims, thin hair, young or elderly pets.





Image: Illustration of the two power modes: Quiet Mode for sensitive pets and Strong Mode for thicker fur, with corresponding dog images.

3. **Grooming Technique:**

- Hold the trimmer at a slight angle against the fur.
- Gently pull the skin taut with your free hand to create a flat surface for trimming.
- Move the trimmer slowly and steadily in the direction of hair growth.
- For sensitive areas like paws, ears, and around the face, use short, careful strokes. The small ceramic blade is designed for precision.



Image: A close-up view of the trimmer being used to carefully trim hair around a dog's ear, demonstrating precision grooming.



Image: The trimmer being used to trim hair between a dog's paw pads, highlighting its lightweight and travel-ready design.

- Take frequent breaks to check your pet's comfort and to clean the blade if necessary.

4. **Power Off:** Press and hold the power button to turn off the trimmer when finished.

MAINTENANCE

Cleaning the Blade

1. Ensure the trimmer is turned off and disconnected from any power source.
2. Use the included cleaning brush to gently remove any trapped hair from the blade area.
3. For a more thorough cleaning, the blade head can be carefully detached by gently pushing it forward from the trimmer body. Rinse the blade head under running water.
4. Allow the blade head to air dry completely before reattaching it to the trimmer.
5. Apply a small drop of clipper oil (not included) to the blade teeth after cleaning to maintain sharpness and smooth operation.

Storage

Store the trimmer and its accessories in the provided drawstring travel bag in a cool, dry place, away from direct sunlight

and moisture. Keep out of reach of children and pets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer using the USB-C cable.
Trimmer is not cutting effectively or pulls hair.	Blade is clogged with hair. Blade is dull. Battery is low. Incorrect speed setting for fur type.	Clean the blade thoroughly with the cleaning brush. Apply clipper oil to the blade. Ensure the trimmer is fully charged. Switch to Strong Mode for thicker fur.
Trimmer makes unusual noise.	Blade needs lubrication or cleaning.	Clean the blade and apply clipper oil.

SPECIFICATIONS

- **Model:** B0F3KDJLRP
- **Brand:** Furry Touch
- **Power Source:** Battery Powered (1 Nonstandard Battery included)
- **Charging:** USB-C
- **Blade Type:** Rounded Ceramic Blade
- **Modes:** Quiet Mode, Strong Mode
- **Item Weight:** 147 Grams (approximately 5.19 ounces)
- **Dimensions:** 7.48 x 4.57 x 1.97 inches (Package Dimensions)
- **Recommended Uses:** Body, Ear, Eyes, Face, Paw Pads, Rump
- **Color:** White

WARRANTY AND SUPPORT

The Furry Touch Electric Cordless Pet Clippers come with a full**12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures your peace of mind.

As an American brand, Furry Touch is committed to providing excellent customer support. If you encounter any issues or have questions regarding your product, please contact our customer service team through the retailer where you purchased the product or visit the official Furry Touch website for support information.

For more information, visit the[Furry Touch Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question