

## SLIDE Touch Screen Smartwatch

# SLIDE Touch Screen Smartwatch User Manual

Model: Touch Screen Smartwatch

## 1. INTRODUCTION

---

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your SLIDE Touch Screen Smartwatch. Please read this manual thoroughly before using your device to ensure proper function and longevity.

## 2. PACKAGE CONTENTS

---

- SLIDE Touch Screen Smartwatch
- USB Charging Cable
- User Manual (this document)

## 3. DEVICE OVERVIEW

---

The SLIDE Touch Screen Smartwatch features a 1.54-inch full touch screen and a responsive interface for various functions.



Image: The SLIDE Touch Screen Smartwatch, white color variant, displaying an incoming call notification with options to accept or decline. The watch features a silver-colored casing and a light gray silicone strap.

Key components include the touch screen display, a side button, and a digital crown for navigation and interaction.

## 4. SETUP

### 4.1 Initial Charging

Before first use, fully charge your smartwatch. Connect the provided USB charging cable to the charging port on the watch and a compatible USB power source. The watch display will indicate charging status.

### 4.2 Pairing with Your Smartphone

1. Ensure your smartphone's Bluetooth is enabled.
2. Turn on your SLIDE Smartwatch.

3. Download and install the companion application for your SLIDE Smartwatch from your phone's app store. Refer to the packaging or device screen for the app name.
4. Open the app and follow the on-screen instructions to search for and pair with your smartwatch.
5. Once paired, the smartwatch will automatically sync to your phone's language setting.

## 5. OPERATING INSTRUCTIONS

---

### 5.1 Touch Screen Navigation

- **Tap:** Select an item or confirm an action.
- **Swipe:** Navigate through menus, notifications, or different screens.
- **Press and Hold:** Access additional options or customize watch faces.

### 5.2 Wrist Gestures

The smartwatch supports intuitive wrist movements for quick actions:

- **Mute Incoming Calls:** Move your wrist to mute an incoming call.
- **Answer Calls:** A specific wrist movement can answer an incoming call.
- **Mute Alarm:** Perform a wrist gesture to mute an active alarm.
- **Wake Screen:** Raise your wrist to automatically wake the screen.

### 5.3 Core Functions

- **Communication:** Access messages, view incoming calls, and manage other phone features directly from your wrist.
- **Fitness Tracking:** Monitor your heart rate, track steps with the pedometer, and measure oxygen levels.
- **Remote Control:** Control music playback on your smartphone and remotely trigger your phone's camera shutter.

## 6. MAINTENANCE

---

### 6.1 Cleaning

Wipe the smartwatch regularly with a soft, dry, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

### 6.2 Charging Best Practices

Use only the provided USB charging cable. Avoid exposing the charging port to moisture. Do not leave the device charging for extended periods after it is fully charged.

### 6.3 Storage

Store the smartwatch in a cool, dry place away from direct sunlight and extreme temperatures when not in use for prolonged periods.

## 7. TROUBLESHOOTING

---

### 7.1 Device Not Turning On

- Ensure the device is fully charged. Connect it to the charger for at least 30 minutes.

- Press and hold the side button for 10-15 seconds to attempt a forced restart.

## 7.2 Pairing Issues

- Verify Bluetooth is active on your smartphone.
- Ensure the smartwatch is within range of your phone.
- Restart both your smartphone and the smartwatch.
- Clear existing Bluetooth pairings on your phone and attempt to pair again.

## 7.3 Inaccurate Sensor Readings

Ensure the smartwatch is worn snugly on your wrist, but not too tight, to allow proper contact for heart rate and oxygen level sensors.

## 8. SPECIFICATIONS

---

<b>Product Dimensions</b>	2.01 x 4.96 x 7.72 inches
<b>Item Weight</b>	11.5 ounces
<b>Display</b>	1.54" Full Touch Screen
<b>ASIN</b>	B0F3M4BDRC
<b>UPC</b>	643620041376

## 9. WARRANTY AND SUPPORT

---

### 9.1 Manufacturer Warranty

Your SLIDE Touch Screen Smartwatch is covered by a 1-year limited manufacturer warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

### 9.2 Customer Support

For technical assistance, warranty claims, or further inquiries, please refer to the contact information provided with your product packaging or visit the official SLIDE website.