

[Manuals.plus](#) /

> [Kids Licensing](#) /

> Kids Licensing SPD4753 Spiderman Digital Watch Instruction Manual

Kids Licensing SPD4753

Kids Licensing SPD4753 Spiderman Digital Watch


INSTRUCTION MANUAL

Product Overview

This manual provides instructions for the Kids Licensing SPD4753 Spiderman Digital Watch. This watch is designed for children and features a digital clock, alarm, stopwatch, and interactive games, all presented within a Spiderman-themed design. It is intended for informational purposes to guide users through the watch's functions and care.





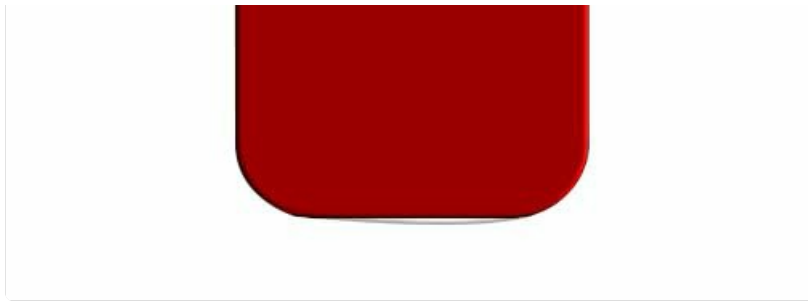

The image shows the Kids Licensing SPD4753 Spiderman Digital Watch. It features a blue square watch face with a Spiderman web design on the screen, displaying '10:10 AM'. The watch has red buttons on the side and a red plastic strap with a Spiderman logo embossed on one side.

Initial Setup

Setting Time and Date

To set the time and date on your SPD4753 watch, locate the control buttons on the side of the watch face. Typically, a 'Mode' or 'Set' button is used to cycle through settings, and 'Adjust' or 'OK' buttons are used to change values. Press the 'Mode' button repeatedly until the time or date setting flashes. Use the 'Adjust' buttons to change the values, then press 'Mode' again to confirm and move to the next setting. Refer to the specific button labels on your watch for precise operation.

Customizing Watch Faces

The watch offers 10 different faces for customization. Access the watch face selection menu by pressing the appropriate button, usually indicated by an icon or label related to 'Display' or 'Face'. Cycle through the available options using the adjustment buttons and confirm your selection with the 'OK' or 'Mode' button.

Operating Your Watch

Digital Clock Functions

The primary display shows the current time in a digital format. The watch automatically updates the time once set.

Alarm Function

To set an alarm, navigate to the alarm setting mode using the mode button. Adjust the hour and minute using the adjustment buttons. Confirm your alarm setting to activate it. An alarm icon will typically appear on the screen when active.

Stopwatch Function

Activate the stopwatch mode from the main menu. Use the designated buttons to start, stop, and reset the stopwatch timer. One button usually starts/stops, and another resets.

Interactive Games

The watch includes 5 interactive games. To access them, navigate to the games menu using the mode button. Select your desired game from the list using the navigation buttons and press 'OK' to start. The included games are:

- Maths games
- Three in a row (Tic-Tac-Toe)
- Memory game

- Car games
- Time teachers

Sound Options

The watch provides 5 sound options. These can typically be adjusted in the settings menu to personalize alerts and game sounds. Look for a 'Sound' or 'Volume' option within the settings.

Care and Maintenance

Cleaning

Clean the watch with a soft, dry cloth. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the watch's finish, screen, and strap.

Water Resistance

Important: This watch is **Not Water Resistant**. Avoid exposing the watch to water, including rain, splashes, showering, bathing, or swimming, to prevent damage to internal components. Water exposure will void the warranty.

Battery Information

This is a digital watch. For battery replacement or service, it is recommended to contact a qualified technician or the manufacturer's support. Attempting to replace the battery yourself may damage the watch and void the warranty.

Troubleshooting

Watch Not Turning On

Ensure the watch has sufficient power. If the screen remains blank, the battery may need to be replaced or recharged. Consult the manufacturer's guidelines for battery service.

Incorrect Time Display

If the time displayed is incorrect, follow the 'Setting Time and Date' instructions in the 'Initial Setup' section to reset the time.

Buttons Unresponsive

If buttons are not responding, try restarting the watch if a reset option is available (often by holding down a specific button combination). Ensure no debris is obstructing the buttons. If the issue persists, contact customer support.

Product Specifications

Feature	Detail
Model Number	SPD4753
Brand Name	Kids Licensing
Character	Spiderman
Display Type	Digital

Feature	Detail
Watch Movement Type	Automatic
Additional Features	Interactive Games, Digital Watch, Alarm, Stopwatch
Strap Type	Plastic Tape
Clasp Type	Buckle
Water Resistance Level	Not Water Resistant
Band Material Type	Plastic
Case Material Type	Paper (Protective Case)
Crystal Material	Plastic
Band Color	Multicolor (Red/Blue)
Dial Color	Black
Shape	Square
Age Range Description	Kid

Warranty and Support

Warranty Information

This product includes warranty information. Please refer to the documentation provided in the product packaging for details regarding warranty coverage, terms, and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For further assistance, technical support, or inquiries regarding your Kids Licensing SPD4753 Spiderman Digital Watch, please contact Kids Licensing customer service. Contact details can typically be found on the product packaging, the included warranty card, or the manufacturer's official website.