

PRIXTON 10006168

PRIXTON Xplorer DV900 Digital Camera User Manual

Model: DV900 (10006168)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty &
Support](#)

INTRODUCTION

This manual provides instructions for the PRIXTON Xplorer DV900 Digital Camera. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its performance.



Image: The PRIXTON Xplorer DV900 Digital Camera, featuring its 3.0-inch IPS LCD flip screen in an upright position, displaying a vibrant sunset. The camera body is black with a prominent lens and flash.

PACKAGE CONTENTS

Verify that all items are present in the package:

- PRIXTON Xplorer DV900 Digital Camera
- Rechargeable Battery (1150 mAh)
- User Manual

SETUP

1. Charging the Battery

1. Locate the battery compartment on the camera.
2. Insert the provided 1150 mAh rechargeable battery.
3. Connect the camera to a power source using the appropriate charging cable (not explicitly

listed but implied).

4. Allow 3-4 hours for a full charge. The charging indicator light will typically change color or turn off when charging is complete.



Image: Top view of the PRIXTON Xplorer DV900 Digital Camera, showing the compact design with the screen folded down. This view highlights the camera's top controls and lens.

2. Inserting an SD Card

- The camera supports SD cards up to 128 GB.
- Open the SD card slot cover, usually located on the side of the camera.
- Insert the SD card with the metal contacts facing the correct direction until it clicks into place.
- Close the cover securely.

Note: An SD card is required to store photos and videos. The card is not included with the camera.

OPERATION

Powering On/Off

- To power on, press and hold the power button until the screen illuminates.
- To power off, press and hold the power button again until the screen shuts down.

Using the Flip Screen

The 3.0-inch IPS LCD screen can be rotated to various angles, including forward-facing for selfies and vlogging. Gently pivot the screen from its hinge to adjust its position.



Image: The PRIXTON Xplorer DV900 Digital Camera with its LCD screen articulated outwards, demonstrating its flexible viewing capabilities.

Capturing Photos and Videos

The camera offers 9 predefined functions for various shooting scenarios:

- **Photo:** Standard still image capture.
- **Auto:** Automatic settings for general use.
- **Timed:** Self-timer function for photos.
- **Burst:** Captures multiple photos in quick succession.
- **Video:** Standard video recording.
- **Slowly:** Slow-motion video recording.
- **Lapse:** Time-lapse video recording.
- **Loop:** Loop recording for video.
- **Video+Photo:** Captures both video and still images simultaneously.

Use the mode dial (if present, or menu navigation) to select the desired function.



Image: A close-up of a hand rotating the mode dial on the PRIXTON Xplorer DV900 Digital Camera, indicating selection of shooting modes.

Zoom Functionality

The camera features a 4X optical zoom and an 18X total zoom. Use the zoom controls (typically 'W' for wide and 'T' for telephoto) to adjust the focal length. The integrated flash can be activated for improved lighting in low-light conditions.

WiFi and ZERO CAM App

The camera can connect to a mobile device via Wi-Fi for remote control and file transfer using the ZERO CAM application. Download the ZERO CAM app from your device's app store and follow the in-app instructions to pair with your camera.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens and screen, use a specialized lens cleaning cloth and solution. Avoid abrasive materials or harsh chemicals.
- **Battery Care:** Store the battery in a cool, dry place when not in use. If the camera will not be used for an extended period, remove the battery.
- **Storage:** Store the camera in a protective case to prevent scratches and damage from dust or moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Ensure the battery is inserted correctly.
Cannot take photos/videos.	SD card is full, not inserted, or corrupted.	Insert a valid SD card. Delete unnecessary files or format the card (this will erase all data).
Poor image/video quality.	Lens is dirty, insufficient lighting, or incorrect settings.	Clean the lens. Use the flash in low light. Adjust shooting mode or resolution settings.
Wi-Fi connection issues.	Incorrect Wi-Fi settings or app issues.	Ensure Wi-Fi is enabled on the camera and mobile device. Restart both devices. Reinstall the ZERO CAM app.

SPECIFICATIONS

Feature	Detail
Model Number	10006168 (DV900)
Video Resolution	4K-30fps, 2.7K-30fps, 1080P-60/30fps, 720P-120/60/30fps
Photo Resolution	Up to 64 Megapixels (10 options from 3M to 64M)
Screen	3.0-inch IPS LCD Flip Screen
Optical Zoom	4X
Total Zoom	18X
Connectivity	Wi-Fi (with ZERO CAM App)
Storage	SD Card up to 128 GB (not included)
Battery	1150 mAh Rechargeable, Removable
Battery Life	Up to 90 minutes continuous use
Charging Time	3-4 hours
Video Format	MP4
Color	Black
Country of Origin	China

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official PRIXTON website or contact their customer service directly. Details are typically provided on the product packaging or a separate warranty card.

Manufacturer: PRIXTON

For further assistance, visit the [PRIXTON Brand Store on Amazon](#).


© 2025 PRIXTON. All rights reserved.

Related Documents - 10006168

	<p>Prixton Xplorer DV900 Digital Camera User Manual</p> <p>User manual for the Prixton Xplorer DV900 digital camera, covering setup, operation, features, and connectivity.</p>
	<p>Manual de Usuario Prixton Xplorer DV900 Cámara Digital</p> <p>Guía completa de la cámara digital Prixton Xplorer DV900. Aprenda a usar todas las funciones, desde la configuración básica hasta la conexión con su smartphone.</p>
	<p>Prixton DV800 Action Cam Dual Screen 5K User Manual</p> <p>Comprehensive user manual for the Prixton DV800 Action Cam Dual Screen 5K, covering setup, features, modes, system configuration, and connectivity.</p>
	<p>Prixton 10" Prado Marco Digital Wifi - Manual de Usuario</p> <p>Guía completa para el marco de fotos digital Prixton 10" Prado con Wi-Fi. Aprenda a configurar, conectar amigos y gestionar sus recuerdos a través de la aplicación Frameo.</p>
	<p>Prixton Prado XL Digital WiFi Frame User Manual</p> <p>User guide for the Prixton Prado XL Digital WiFi Frame, covering setup, photo sharing, app usage, settings, and troubleshooting.</p>

PRIXTON

PRADO S

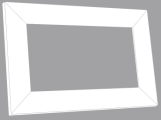

MARCO WIRE DIGITAL DIGITAL WIFI FRAME

[Prixtion Prado S Digital WiFi Frame User Manual](#)

User manual and guide for the Prixtion Prado S Digital WiFi Frame, covering setup, photo sharing, settings, and features.