

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SOOPYK](#) /

› [SOOPYK BYCZ581WT Top Load Water Cooler Dispenser with Ice Maker User Manual](#)

SOOPYK BYCZ581WT

SOOPYK BYCZ581WT Top Load Water Cooler Dispenser with Ice Maker User Manual

Model: BYCZ581WT

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance to ensure safe operation and to prevent injury or damage. Retain this manual for future reference.

- **Electrical Safety:** Ensure the power outlet matches the voltage requirements of the dispenser. Do not use extension cords. Always unplug the unit before cleaning or maintenance.
- **Child Safety Lock:** The hot water spout is equipped with a child safety lock. Always engage this lock when not in use to prevent accidental burns.
- **Placement:** Place the dispenser on a flat, stable surface. Ensure adequate ventilation around the unit (at least 4 inches from walls). Do not place in direct sunlight or near heat sources.
- **Water Quality:** Use only potable water. This appliance is designed for use with standard 3 or 5-gallon water bottles.
- **Certifications:** This SOOPYK water dispenser is UL/ETL Approved, indicating compliance with recognized safety standards.

2. PRODUCT OVERVIEW

The SOOPYK BYCZ581WT is a versatile top-load water cooler dispenser featuring three temperature settings (hot, cold, and room temperature) and an integrated ice maker. It is designed for convenience and safety in home or office environments.





Image: Front view of the SOOPYK BYCZ581WT water cooler dispenser, showing the water spouts, control panel, and the ice maker compartment with ice visible.

Key Features:

- **3 Temperature Settings:** Provides hot, cold, and room temperature water.
- **Built-in Ice Maker:** Produces 9 bullet-shaped ice cubes per cycle in approximately 7-9 minutes, with a daily capacity of up to 27 lbs. Note: The unit does not keep ice frozen; ice should be used promptly or transferred to a freezer.
- **Nightlight Feature:** Illuminates the water spouts and drip tray for visibility in low-light conditions.
- **Child Safety Lock:** Located on the hot water spout to prevent accidental dispensing.
- **Auto Shut-off System:** Automatically stops ice production when the water level is low or the ice storage is full.
- **Durable Construction:** Features a stainless steel weld tank for long-lasting performance.



Image: The SOOPYK BYCZ581WT water cooler dispenser with dimensions indicated (41.4 inches height, 12.1 inches width, 14 inches depth). Icons highlight features such as silent operation, fast ice making, touch operation, and ice full indicator.

3. SETUP INSTRUCTIONS

3.1 Unpacking

1. Carefully remove the dispenser from its packaging.
2. Remove all packing materials, including any tape or protective film.
3. Inspect the unit for any signs of damage. If damaged, do not operate and contact customer support.

3.2 Placement

- Place the dispenser on a firm, level surface capable of supporting its weight when full.
- Ensure there is at least 4 inches (10 cm) of clearance from walls on all sides to allow for proper ventilation.
- Avoid placing the unit in direct sunlight or near heat-generating appliances.

3.3 Water Bottle Installation



Image: The SOOPYK BYCZ581WT water cooler dispenser positioned in a living room, with a 5-gallon water bottle correctly placed on top of the unit.

1. Clean the neck of a new 3 or 5-gallon water bottle.
2. Remove the protective cap from the water bottle.
3. Carefully invert the water bottle and place it onto the water cooler's top-loading smart water barrel seat.

Ensure it is seated firmly and water begins to flow into the dispenser's reservoirs.



Image: Close-up of the smart water barrel seat on top of the dispenser, designed for easy and secure bottle placement.

3.4 Initial Flushing and Power Connection

1. Before plugging in, dispense at least 1 liter of water from each of the cold and hot spouts to ensure the reservoirs are filled and to flush any air from the lines.
2. Plug the power cord into a grounded electrical outlet.
3. Allow approximately 15-30 minutes for the water to reach desired temperatures before initial use.

4. OPERATING INSTRUCTIONS

4.1 Dispensing Water

- **Cold Water:** Place a cup under the cold water spout and press the cold water button/lever.
- **Hot Water:** To dispense hot water, first push the child safety lock button, then press the hot water button/lever. Release the safety lock after dispensing.
- **Room Temperature Water:** Place a cup under the room temperature water spout and press the corresponding button/lever.



Image: Close-up of the removable drip water tray located below the dispensing spouts, designed to catch spills and drips.

4.2 Ice Making Function

The built-in ice maker automatically produces bullet-shaped ice cubes.



7 Mins

Fast Ice-making

9 PCS

Ice per cycle

27 Lbs

Daily capacity



Make Ice In 7 Mins

NOT KEEP ICE FROZEN

Image: Graphic illustrating the ice making capabilities: 7 minutes for fast ice making, 9 pieces per cycle, and 27 lbs daily capacity. A note emphasizes that the unit does not keep ice frozen.

- **Operation:** The ice maker will begin producing ice automatically once the unit is powered on and the water reservoir is filled.
- **Ice Production:** Expect 9 bullet ice cubes in approximately 7-9 minutes, depending on ambient temperature.
- **Storage:** The ice storage compartment has a capacity of 5.3 lbs. **Important:** This unit does NOT keep ice frozen. Ice should be removed and used or transferred to a freezer to prevent melting.
- **Auto Shut-off:** The system will automatically stop ice production if there is insufficient water or if the ice storage compartment is full.



Image: Close-up view of the ice maker's interior, showing the ice production mechanism and newly formed bullet ice cubes in the collection bin.

4.3 Nightlight Feature

The integrated nightlight illuminates the dispensing area, making it easier to use the dispenser in low-light conditions and providing clear visibility of the removable drip tray.

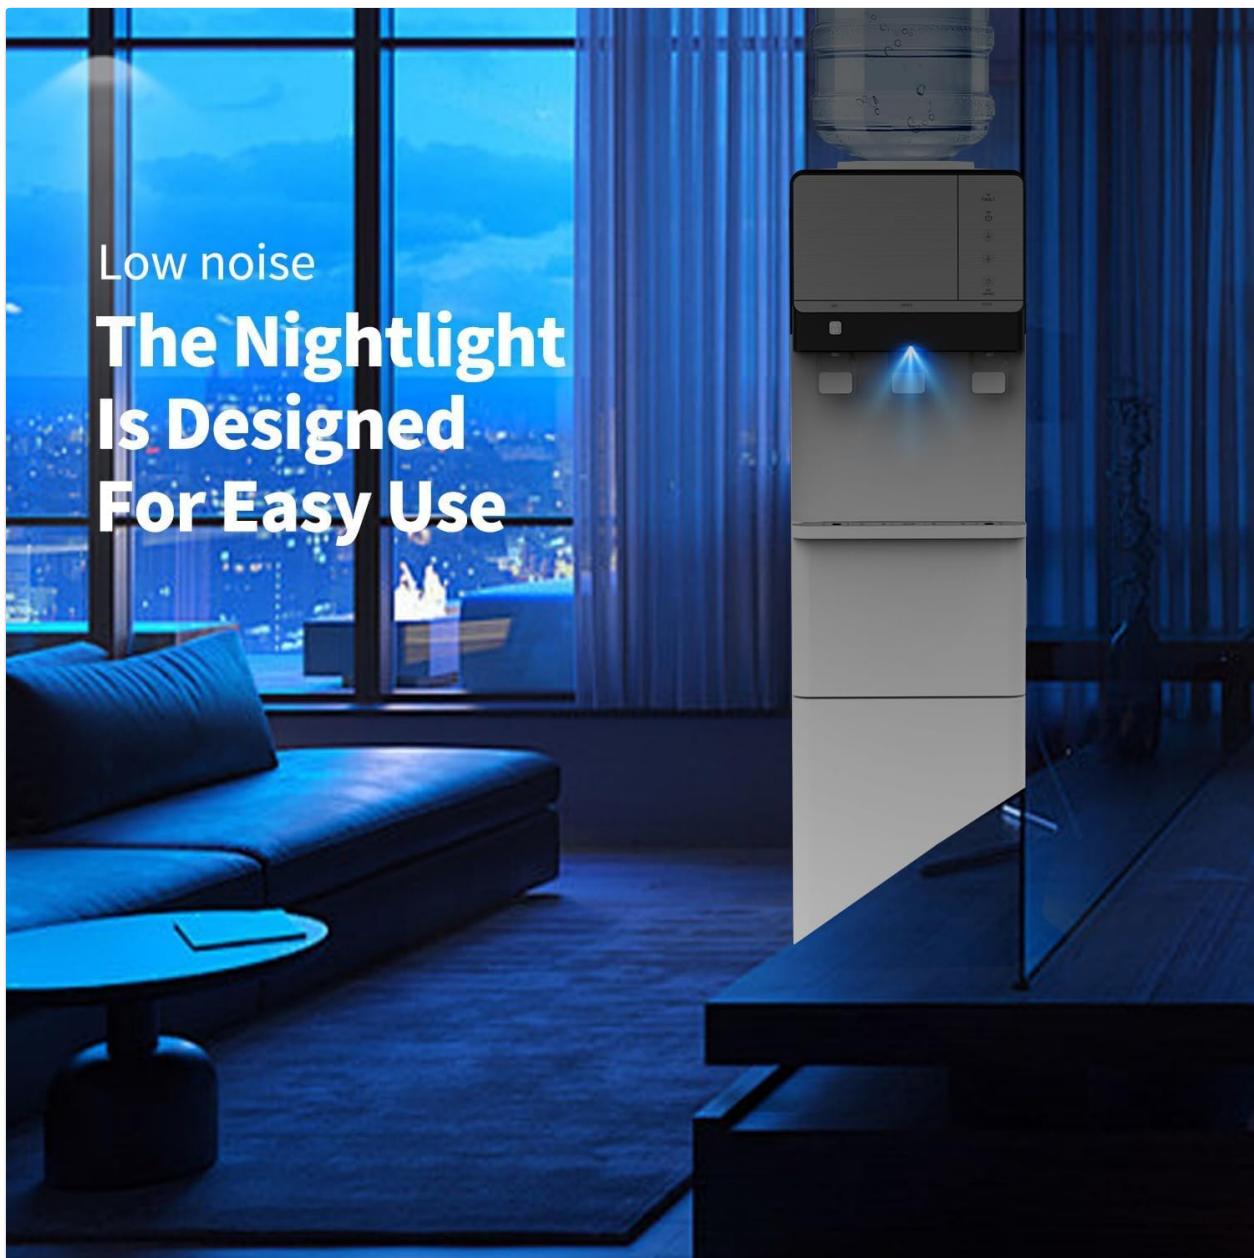


Image: The SOOPYK water cooler dispenser in a dimly lit room, with its nightlight feature illuminating the dispensing area, highlighting its ease of use at night.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your water cooler dispenser.

5.1 Cleaning the Drip Tray

- The drip tray is removable for easy cleaning.
- Periodically remove the drip tray, empty any collected water, and wash it with mild soap and water. Rinse thoroughly and dry before replacing.

5.2 General Cleaning

- **Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

- **Interior (Water Contact Parts):** For thorough cleaning of water contact parts, it is recommended to periodically drain the unit and clean the reservoirs with a food-grade sanitizing solution. Follow the solution manufacturer's instructions for use and rinsing.

5.3 Draining the Unit

- Unplug the dispenser from the power outlet.
- Remove the water bottle.
- Locate the drain plug at the back or bottom of the unit. Place a bucket under the drain and remove the plug to empty the water.
- Once drained, replace the plug securely.

6. TROUBLESHOOTING

If you encounter issues with your SOOPYK water cooler dispenser, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No water dispensing	Water bottle empty or not properly seated; airlock in system.	Replace water bottle. Re-seat bottle firmly. Dispense water from all spouts to clear airlock.
Water not hot/cold enough	Unit recently plugged in; hot/cold switch off; poor ventilation.	Allow 15-30 minutes for temperature stabilization. Ensure hot/cold switches (if present) are on. Check for adequate ventilation around the unit.
Ice maker not producing ice	No water in reservoir; ice storage full; ambient temperature too high.	Ensure water bottle is full and properly installed. Empty the ice storage compartment. Ensure the unit is in a suitable environment (room temperature). The auto shut-off system may be active.
Leaking	Water bottle cracked; drain plug loose; drip tray overflowing.	Inspect water bottle for cracks. Ensure drain plug is securely tightened. Empty the drip tray regularly.

If the problem persists after attempting these solutions, please contact SOOPYK customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	SOOPYK
Model Number	BYCZ581WT
Color	White
Material	Acrylonitrile Butadiene Styrene (ABS)

Feature	Specification
Capacity (Water Bottle)	3 or 5 Gallons
Product Dimensions (D x W x H)	14"D x 12"W x 41"H
Installation Type	Freestanding
Access Location	Top Load
Upper Temperature Rating (Hot)	210 Degrees Fahrenheit
Lower Temperature Rating (Cold)	40 Degrees Fahrenheit
Power Source	Corded Electric
Item Weight	38 pounds
Ice Making Capability	27 lbs per 24 hours
Ice Storage Capability	5.3 lbs (does not keep ice frozen)

8. WARRANTY AND SUPPORT

This SOOPYK water cooler dispenser is backed by a **1-year warranty** from the date of purchase. Additionally, a **30-day return policy** is offered.

For any problems, questions, or support needs regarding your water cooler, please contact SOOPYK customer service. Refer to your purchase documentation for specific contact details or visit the official SOOPYK website.