



Manuals.plus /

› FOXIONO /

› FOXIONO E66 3G Unlocked Android Smartphone User Manual

FOXIONO E66

FOXIONO E66 3G Unlocked Android Smartphone User Manual

Model: E66

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your FOXIONO E66 3G Unlocked Android Smartphone. Please read this manual thoroughly before using your device to ensure proper operation and to prevent damage.

The FOXIONO E66 is an Android smartphone featuring a 6.52-inch display, 1GB RAM, and 16GB ROM. It supports dual SIM cards and operates on 3G WCDMA networks (850/2100MHZ).

Ultra Thin, Ultra Light

Can't Help Taking Another Look



Image: Front and back view of the FOXIONO E66 smartphone, showcasing its design.

2. PACKAGE CONTENTS

Verify that all items are present in the product packaging:

- FOXIONO E66 Smartphone
- Headset
- Phone Case
- Power Adapter
- SIM Tray Ejector
- Screen Protector

3. SETUP

3.1. SIM Card and TF Card Installation

The device supports dual SIM cards and one TF (microSD) card for expandable storage.

1. Locate the SIM tray on the side of the phone.

2. Insert the SIM tray ejector tool into the small hole next to the tray and press firmly until the tray pops out.
3. Place your 3G WCDMA SIM card(s) and/or TF card into the designated slots on the tray. Ensure the gold contacts face downwards.
4. Carefully reinsert the tray into the phone until it clicks into place.

Important: This phone only supports 3G WCDMA frequency bands (850/2100MHZ). Please confirm compatibility with your mobile carrier before installation.



Image: Illustration showing the smartphone display and the SIM card tray with a SIM card, indicating its placement.

3.2. Initial Power On

1. Press and hold the Power button (usually on the right side) until the screen lights up.
2. Follow the on-screen prompts to complete the initial setup, including language selection, Wi-Fi connection, and Google account setup.

4. OPERATING THE DEVICE

4.1. Basic Navigation

- **Touch Screen:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access apps, widgets, and notifications.
- **Notification Panel:** Swipe down from the top of the screen to view notifications and quick settings.

4.2. Camera Usage

The FOXIONO E66 is equipped with front and rear cameras for capturing photos and videos.

1. Open the Camera application from the home screen or app drawer.
2. Tap the shutter button to take a photo.
3. Switch between photo and video modes as needed.
4. Use the icon to switch between front and rear cameras.



Image: The smartphone camera interface, demonstrating its use for capturing images.

4.3. Connectivity

- **Wi-Fi:** Go to *Settings > Network & Internet > Wi-Fi* to connect to available wireless networks.
- **Bluetooth:** Go to *Settings > Connected devices > Bluetooth* to pair with Bluetooth accessories.
- **Mobile Data (3G):** Ensure your SIM card is active and mobile data is enabled in *Settings > Network & Internet > Mobile network*.

4.4. Charging the Battery

The device is powered by a 4000 mAh battery. Use the provided power adapter and cable for charging.

1. Connect the USB cable to the phone's charging port.
2. Connect the other end of the cable to the power adapter.
3. Plug the power adapter into a wall outlet.

4. The battery icon on the screen will indicate charging status.



Image: The smartphone screen showing a battery charging indicator, representing the 4000mAh battery.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the screen and body of the phone. Avoid harsh chemicals.
- **Software Updates:** Regularly check for system updates in *Settings > System > System update* to ensure optimal performance and security.
- **Battery Care:** Avoid extreme temperatures. Do not fully discharge the battery frequently.
- **Storage:** Manage your 16GB internal storage by regularly deleting unnecessary files or moving them to a TF card.

6. TROUBLESHOOTING

Problem	Solution
Phone does not power on	Ensure the battery is charged. Press and hold the Power button for at least 10 seconds to force a restart.
Cannot connect to 3G network	Verify your SIM card supports 3G WCDMA 850/2100MHZ. Check mobile data settings and contact your carrier.
Apps are slow or crashing	Close background apps. Clear app cache (<i>Settings > Apps > [App Name] > Storage > Clear cache</i>). Restart the phone.
Wi-Fi connection issues	Restart your Wi-Fi router. Forget and reconnect to the Wi-Fi network on your phone.

7. SPECIFICATIONS

Feature	Detail
Model	E66
Operating System	Android 6.0
Display Size	6.52 Inches
RAM	1 GB
Internal Storage (ROM)	16 GB
Expandable Storage	Supports TF Card
Cellular Technology	3G WCDMA (850/2100MHZ)
SIM Card Support	Dual SIM
Battery Capacity	4000 mAh
Connectivity	3G, Bluetooth, Wi-Fi
Audio Jack	3.5 mm
CPU Model	1.2GHz Cortex A8 Processor
Item Weight	15.8 ounces

8. PRODUCT OVERVIEW VIDEO

Watch this video for a visual overview of the FOXIONO E66 smartphone, including its design and basic interface navigation.

Your browser does not support the video tag.

Video: A demonstration of the FOXIONO E66 smartphone, showcasing its physical appearance and user interface.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your package or contact FOXIONO customer service. Keep your purchase receipt for warranty claims.