

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ALLIMITY](#) /

› [ALLIMITY AXD7723 AXD7725 Replacement Remote Control User Manual for Pioneer Elite Home Theater Receivers](#)

ALLIMITY CV-AXD7723-SH

ALLIMITY AXD7723 AXD7725 Replacement Remote Control User Manual

For Pioneer Elite Home Theater Receivers

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your ALLIMITY AXD7723 AXD7725 replacement remote control. This remote is designed to function as a direct replacement for original Pioneer Elite Home Theater Receiver remote models AXD7723 and AXD7725, and is compatible with various Pioneer Elite receiver models. Please read this manual carefully before using the remote control to ensure proper functionality and to maximize your home theater experience.

2. PRODUCT OVERVIEW

The ALLIMITY AXD7723 AXD7725 replacement remote control is a pre-programmed device that requires no setup for compatible Pioneer Elite Home Theater Receivers. It offers full functionality for controlling your receiver's power, volume, input selection, menu navigation, and other features.



Image: Front view of the ALLIMITY AXD7723 AXD7725 Replacement Remote Control, showing all buttons and their labels.

2.1 Key Features

- Direct replacement for Pioneer Elite AXD7723 and AXD7725 remote controls.
- No programming required; ready to use with compatible models.
- Comprehensive control over receiver functions.
- Ergonomic design for comfortable handling.

2.2 Compatible Receiver Models

This remote control is compatible with the following Pioneer Elite Home Theater Receiver models:

- AXD7723
- AXD7725
- SC-95
- VSX-80
- VSX-90

- SC-81
- SC-82
- SC-91

3. SETUP

3.1 Battery Installation

The remote control requires two (2) 1.5V AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, showing the battery compartment and proper AAA battery placement.

Note: Always replace both batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4. OPERATING INSTRUCTIONS

Once batteries are installed, the remote control is ready to operate your compatible Pioneer Elite Home Theater Receiver. Point the remote directly at the receiver's infrared sensor.

4.1 Basic Functions

- **STANDBY/ON (Power Button):** Turns the receiver on or off (standby mode).
- **SOURCE:** Cycles through available input sources (e.g., BD, DVD, SAT, HDMI, TV, CD, USB, iPod, BT, MHL, NET).
- **VOLUME (+/-):** Increases or decreases the master volume level.
- **MUTE:** Temporarily silences the audio output. Press again to restore sound.
- **INPUT:** Selects the input source.
- **STATUS:** Displays current status information on your TV screen.
- **AUDIO P.:** Accesses audio parameter settings.
- **VIDEO P.:** Accesses video parameter settings.

- **TOP MENU / HOME MENU:** Navigates to the main menu or home screen of the connected device/receiver.
- **Navigation Buttons (Up, Down, Left, Right, ENTER):** Used to navigate menus and confirm selections.
- **RETURN:** Goes back to the previous menu or screen.
- **LISTENING MODE (AUTO, SURR, ADV):** Selects different audio listening modes.
- **BAND:** Switches between AM/FM radio bands.
- **CH LVL / PTY:** Adjusts channel levels or accesses Program Type for radio.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip):** Controls media playback for connected devices.
- **Number Buttons (0-9):** For direct input of channel numbers or other numerical selections.
- **D.ACCESS:** Direct access function.
- **CLR:** Clears input.
- **DIMMER / SLEEP:** Adjusts display brightness or sets sleep timer.
- **CH (+/-):** Changes channels or navigates through presets.
- **AUDIO (+Fav):** Accesses audio settings or favorite functions.
- **DISP:** Changes display information.

5. MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately. Do not use abrasive cleaners, alcohol, or benzene.
- **Battery Care:** If the remote control will not be used for an extended period (e.g., one month or more), remove the batteries to prevent leakage and corrosion.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight, high temperatures, and humidity.
- **Avoid Drops:** Protect the remote from physical impact by avoiding drops or rough handling.

6. TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote control does not work.	Batteries are dead or incorrectly inserted.	Replace with new AAA batteries, ensuring correct polarity (+/-).

Problem	Possible Cause	Solution
Remote control range is poor.	Weak batteries; Obstruction between remote and receiver; Remote sensor on receiver is blocked.	Replace batteries. Remove any objects blocking the line of sight. Ensure the receiver's IR sensor is clean and unobstructed.
Some buttons do not respond.	Specific button malfunction; Remote not compatible with that specific function on your receiver.	Ensure the remote is compatible with your receiver model. If other buttons work, the specific button might be faulty.
Receiver does not respond to any commands.	Receiver is off or in a non-responsive state; Remote control is faulty.	Check if the receiver is powered on. Try manually operating the receiver. If the issue persists after checking batteries and line of sight, the remote may be faulty.

7. SPECIFICATIONS

Model Number	CV-AXD7723-SH
Brand	ALLIMITY
Power Supply	2 x 1.5V AAA Batteries (not included)
Product Dimensions	5 x 1.38 x 0.72 inches (12.7 x 3.5 x 1.8 cm)
Item Weight	1.59 ounces (45 grams)
Color	Black
Special Feature	Wireless (Infrared)
Max Number of Supported Devices	1 (Pioneer Elite Home Theater Receiver)
Compatible Devices	Pioneer Elite Home Theater Receivers (AXD7723, AXD7725, SC-95, VSX-80, VSX-90, SC-81, SC-82, SC-91)



22.5 cm / 8.86 in



Image: Remote control showing its approximate dimensions in centimeters and inches.

8. WARRANTY AND SUPPORT

This ALLIMITY replacement remote control is designed for reliable performance. For specific warranty information, please refer to the product packaging or contact your retailer.

If you encounter any issues that cannot be resolved using the troubleshooting guide, or if you require further assistance, please contact ALLIMITY customer support through your purchase platform or the contact information provided with your product.

© 2025 ALLIMITY. All rights reserved.