

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Odoland](#) /

› [Odoland Bundle - 2 Items 10pcs Camping Cookware and Portable 2 Burner Camping Stove User Manual](#)

Odoland 10pcs Camping Cookware and 2 Burner Camping Stove

Odoland Bundle User Manual

10pcs Camping Cookware and Portable 2 Burner Camping Stove

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Odoland Bundle, which includes a 10-piece camping cookware set and a portable 2-burner camping stove. Please read this manual thoroughly before initial use and retain it for future reference.



Image: The complete Odoland camping bundle, featuring the cookware set and the portable two-burner stove.

PRODUCT COMPONENTS

10-Piece Camping Cookware Set

- 1 x Pot (approx. 2L capacity)
- 1 x Fry Pan (approx. 700ml capacity)
- 1 x Kettle (approx. 1.1L capacity)
- 3 x Plastic Bowls
- 1 x Soup Spoon
- 1 x Bamboo Spatula
- 1 x Cleaning Sponge
- 1 x Mesh Bag for storage



Image: A detailed view of the 10-piece camping cookware set, with each component clearly labeled for identification.

Portable 2-Burner Camping Stove

- 1 x Foldable 2-Burner Stove Unit
- 1 x Flexible Gas Hose with Propane Adapter
- 1 x Carry Bag for Stove



Image: The portable 2-burner camping stove in its unfolded state, alongside its flexible gas hose and carry bag.

SETUP INSTRUCTIONS

Cookware Set Preparation

1. Unpack all cookware items from the mesh bag.
2. Before first use, wash all pots, pans, kettle, and utensils with warm soapy water and rinse thoroughly. Dry completely.
3. Ensure all foldable handles are securely locked into position before use.

Camping Stove Setup

1. Place the stove on a stable, level, non-combustible surface away from flammable materials.
2. Unfold the stove unit. The clam-shell design allows it to open into a dual-burner configuration.
3. Connect the flexible gas hose to the stove's gas inlet. Ensure a tight connection.
4. Connect the propane adapter end of the hose to a compatible propane cylinder (not included). Hand-tighten only.

5. Check all connections for leaks using a soapy water solution. Bubbles indicate a leak. Do not operate if a leak is detected.

OPERATING INSTRUCTIONS

Using the Cookware

- The pots and fry pan are made from anodized aluminum with a non-stick coating. Use non-abrasive utensils (like the included bamboo spatula) to protect the coating.
- The handles are thermally isolated; however, always exercise caution as they can still become warm during prolonged use.
- The kettle is suitable for boiling water. Ensure the lid is securely placed.



Image: Illustration highlighting the lightweight design of the cookware and the anti-heat folding handles for safe handling and compact storage.

Operating the Camping Stove

1. Ensure the stove is properly set up and connected to the propane cylinder.

2. Turn the control knob for the desired burner to the "ON" position.
3. Press the built-in self-ignition button to ignite the burner. If it doesn't ignite immediately, repeat the process.
4. Adjust the flame intensity using the control knob (stepless heat control from MIN to MAX).
5. Place cookware securely on the textured pot holder.
6. After cooking, turn the control knobs to the "OFF" position.
7. Allow the stove to cool completely before handling or storing.



Image: The Odoland camping stove in operation, showing a lit burner and indicating its 17000 BTU/hr total power output.



Cleans easy with a sponge and soap



Separate control knobs with stepless heat control



Built-in self-ignition



Textured pot holder for no sliding off

Image: A composite image detailing various features of the stove, including ease of cleaning, separate control knobs for heat adjustment, built-in self-ignition, and the textured pot holder for stability.

MAINTENANCE

Cookware Cleaning

- Allow cookware to cool completely before cleaning.
- Wash with warm soapy water and the included cleaning sponge. Avoid abrasive cleaners or scouring pads to protect the non-stick coating.
- Rinse thoroughly and dry completely before storing to prevent corrosion.

Stove Cleaning and Storage

- Ensure the stove is completely cool and disconnected from the propane cylinder before cleaning.
- Wipe down the stove surfaces with a damp cloth and mild soap. Do not immerse the stove in water.
- Clean the burner grates as needed.
- Ensure the stove is dry before folding and storing it in its carry bag.

- Store the stove and cookware in a dry, cool place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Stove Not Igniting

- **Check Gas Connection:** Ensure the propane cylinder is properly connected and the hose is securely attached to the stove.
- **Propane Level:** Verify that the propane cylinder has sufficient fuel.
- **Control Knob Position:** Make sure the control knob is turned to the "ON" position before attempting ignition.
- **Igniter Spark:** Listen for a clicking sound from the igniter. If no click, the igniter might be faulty or obstructed.

Uneven Flame

- **Burner Obstruction:** Check if the burner ports are clear of debris.
- **Gas Pressure:** Ensure the propane adapter is functioning correctly and providing consistent gas flow.


Cookware Sticking

- **Heat Level:** Ensure you are not using excessively high heat, which can damage non-stick coatings.
- **Oil/Fat:** Always use a small amount of cooking oil or fat, even with non-stick surfaces.
- **Utensils:** Use only non-abrasive utensils (wood, silicone, plastic) to avoid scratching the coating.

SPECIFICATIONS

Feature	Detail
Product Name	Odoland Bundle - 10pcs Camping Cookware and Portable 2 Burner Camping Stove
Brand	Odoland
Cookware Material	Anodized Aluminum (non-toxic, non-stick coated)
Cookware Handles	Foldable, Thermally Isolated
Cookware Weight	Approx. 1.7 lbs (0.79 kg) for the set
Stove Type	Portable 2-Burner Propane Stove (Clam-shell design)
Stove Power Output	2500W per burner, 5000W total (approx. 17000 BTU/hr total)
Ignition System	Built-in Self-ignition
Heat Control	Separate control knobs with stepless heat control
Safety Standard	Passes CSA Safety Standard
ASIN	B0F3X4PR2P

KETTLE 1.1L

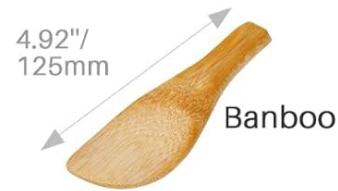

POT 2L



PAN 700ml

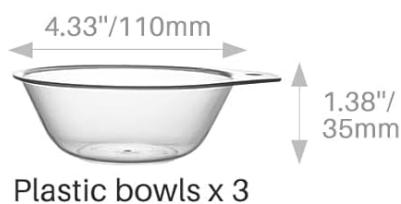


Image: Detailed dimensions for the kettle, pot, pan, plastic bowls, spoon, and bamboo spatula included in the cookware set.

SAFETY INFORMATION

- Outdoor Use Only:** The camping stove is designed for outdoor use in well-ventilated areas only. Never use indoors, in tents, or enclosed spaces due to carbon monoxide risk.
- Flammable Materials:** Keep the stove and propane cylinder away from all flammable materials, including tents, clothing, and dry vegetation.
- Stable Surface:** Always operate the stove on a stable, level, non-combustible surface.
- Children and Pets:** Keep children and pets away from the stove during operation and while it is cooling down.
- Hot Surfaces:** Cookware and stove surfaces will become extremely hot during use. Use caution and appropriate heat protection (e.g., gloves) when handling.
- Gas Leaks:** If you smell gas, immediately turn off the gas supply at the cylinder and stove. Ventilate the area. Do not attempt to light the stove. Check for leaks.
- Propane Cylinder:** Use only approved propane cylinders. Ensure the cylinder is upright during use.

- **Storage:** Disconnect the propane cylinder from the stove before storage. Store cylinders in a well-ventilated area away from heat sources.

WARRANTY AND SUPPORT

Odoland products are manufactured to high-quality standards. For any questions, technical support, or warranty inquiries, please contact Odoland customer service through the retailer where the product was purchased or visit the official Odoland website. Please have your product model number (10pcs Camping Cookware and 2 Burner Camping Stove) and purchase details ready when contacting support.

For more information, you may visit the [Odoland Store on Amazon](#).

© 2025 Odoland. All rights reserved.