

Edvivi EW671S-BK

Edvivi Outdoor Wall Light Instruction Manual

Model: EW671S-BK

INTRODUCTION

Thank you for choosing the Edvivi Outdoor Wall Light, Model EW671S-BK. This fixture is designed to provide reliable and efficient outdoor lighting with advanced features such as a dusk to dawn sensor and motion detection. Its durable, waterproof construction and elegant water glass design make it suitable for various outdoor applications. Please read this manual thoroughly before installation and use to ensure proper operation and safety.

IMPORTANT SAFETY INFORMATION

- **WARNING:** Risk of electric shock. Disconnect power at the fuse or circuit breaker before installing or servicing.
- All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC).
- Consult a qualified electrician if you are unsure about wiring procedures.
- This fixture is designed for outdoor use and is ETL listed, ensuring compliance with safety standards.
- Do not exceed the maximum wattage specified for the bulb (60W E26).
- Handle glass components with care to prevent breakage.

WHAT'S INCLUDED

Please verify that all components are present before beginning installation:

- Edvivi Outdoor Wall Light Fixture (1 unit)
- Mounting Hardware (screws, wire nuts, mounting plate)
- Instruction Manual

PRODUCT SPECIFICATIONS

Model Number	EW671S-BK
Brand	Edvivi

Material	Metal, Water Glass
Color	Matte Black
Dimensions (L x W x H)	6.75" x 5.5" x 12"
Weight	2.9 Pounds
Power Source	Corded Electric
Voltage	120 Volts
Bulb Base	E26 Medium
Max Wattage	60 Watts
Light Source	LED (recommended)
Special Features	Dusk to Dawn Sensor, Motion Sensor, Waterproof, Anti-Rust
Certification	ETL Listed



Figure 1: Product Dimensions (6.75"L x 5.5"W x 12"H)



Figure 2: Size Reference for Installation

SETUP AND INSTALLATION

The Edvivi Outdoor Wall Light is designed for hard wiring. Professional installation is recommended to ensure safety and proper functionality.

Installation Steps:

1. **Turn Off Power:** Before starting, ensure the power supply to the installation area is turned off at the circuit breaker or fuse box.
2. **Prepare Mounting Surface:** Ensure the wall surface is clean, dry, and structurally sound to support the fixture.
3. **Attach Mounting Plate:** Secure the mounting plate (included) to the junction box on the wall using the provided screws.
4. **Wire Connections:**
 - Connect the **black** wire from the fixture to the **black** (live) wire from the power supply.
 - Connect the **white** wire from the fixture to the **white** (neutral) wire from the power supply.
 - Connect the **ground** wire from the fixture to the **ground** wire from the power supply.
 - Secure all connections with wire nuts and ensure no bare wires are exposed.
5. **Mount the Fixture:** Carefully align the fixture with the mounting plate and secure it using the provided screws.
6. **Install Bulb:** Insert an E26 base bulb (max 60W, LED recommended) into the socket.
7. **Restore Power:** Once installation is complete and all connections are secure, restore power at the circuit breaker.



Figure 3: Example of installed fixtures on a porch.

OPERATING INSTRUCTIONS

This outdoor wall light features both a dusk to dawn sensor and a motion sensor, offering versatile lighting options.

Dusk to Dawn Functionality:

The integrated photocell sensor automatically detects ambient light levels. The fixture will turn **ON** at dusk and turn **OFF** at dawn, providing continuous illumination throughout the night without manual intervention.



Figure 4: Dusk to Dawn operation.

Motion Sensor Functionality:

The motion sensor detects movement within its range, activating the light when activity is detected. This feature enhances security and conserves energy by only providing light when needed.

The fixture offers different settings to adjust the mode to your intended use, including a manual override option. Refer to the specific controls on the fixture or consult the manufacturer's website for detailed instructions on adjusting sensitivity and duration settings for the motion sensor.



Figure 5: Close-up of the motion and photocell sensor.



Figure 6: Example of available lighting modes (refer to product for specific settings).

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your Edvivi Outdoor Wall Light.

- **Cleaning:** To clean the fixture, turn off the power supply. Wipe the exterior with a soft, damp cloth. Avoid abrasive cleaners

or solvents that could damage the finish or glass.

- **Bulb Replacement:** Ensure power is off before replacing the bulb. This fixture uses an E26 base bulb, maximum 60W. The open bottom design allows for easy bulb access.
- **Inspection:** Periodically check for any loose connections or signs of wear. The fixture is designed to be waterproof and anti-rust, but extreme weather conditions may require more frequent inspection.

Size Reference

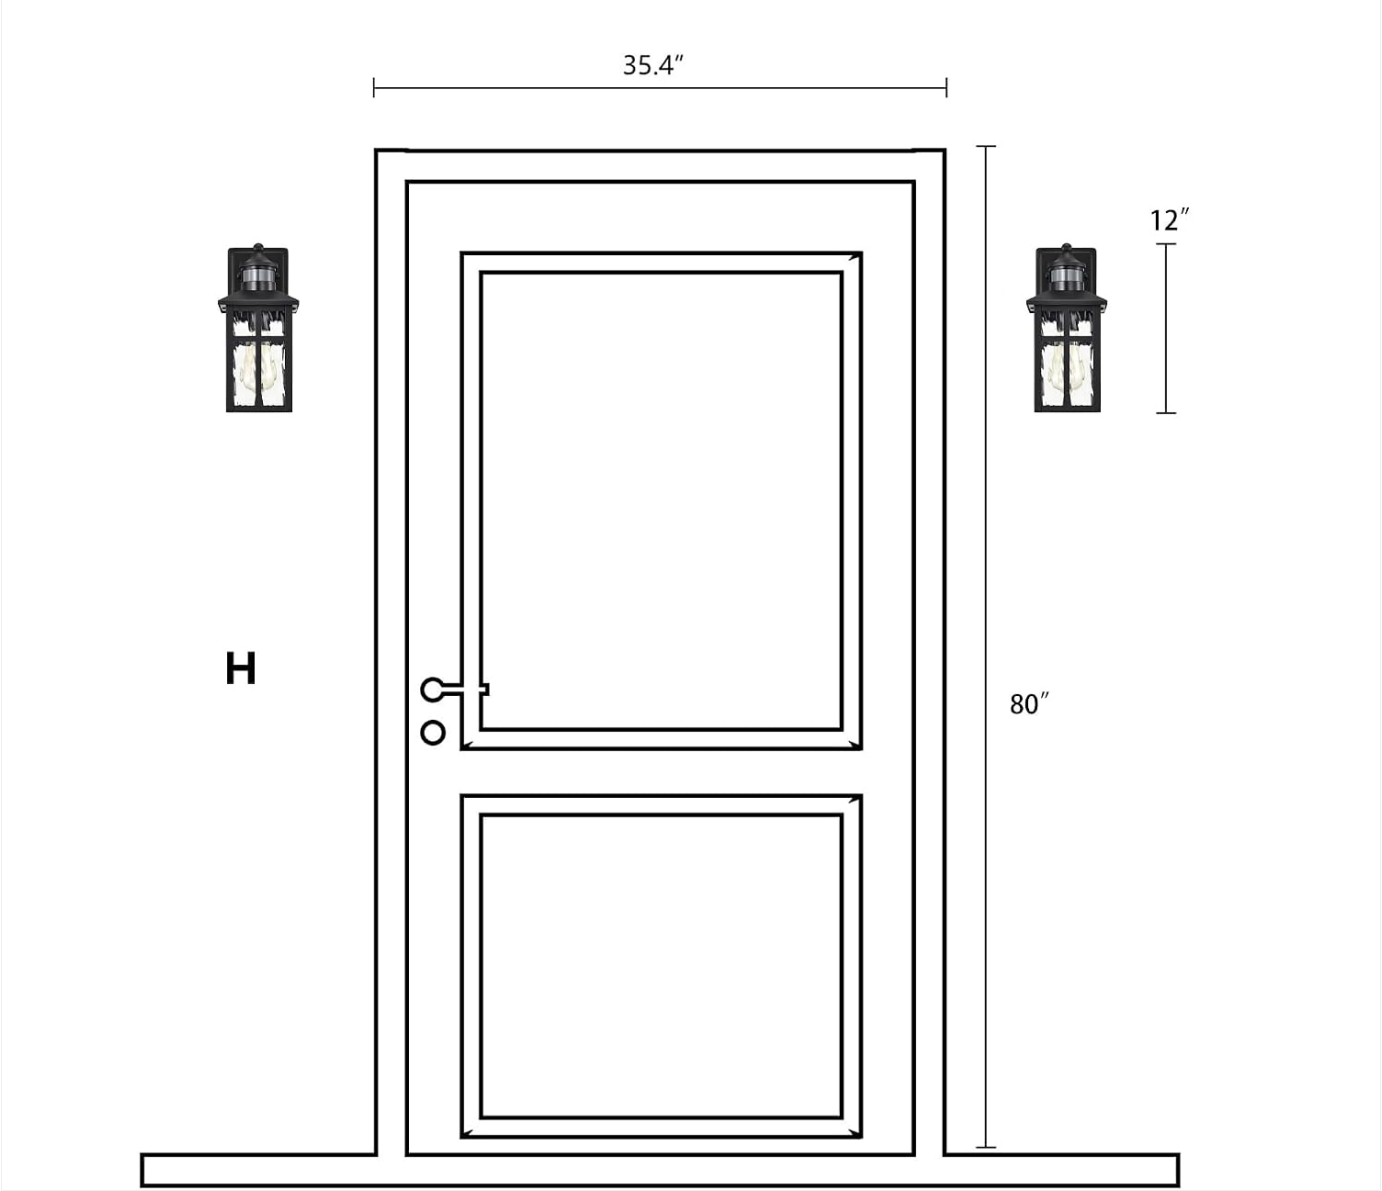


Figure 7: Open bottom design for easy bulb access.

TROUBLESHOOTING

If you experience issues with your Edvivi Outdoor Wall Light, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on.	No power, faulty bulb, incorrect wiring.	Check circuit breaker. Replace bulb. Verify wiring connections.
Light stays on during the day.	Dusk to dawn sensor obstructed or faulty.	Ensure sensor is not blocked by debris or external light sources.

Motion sensor not detecting movement.	Sensor range obstructed, incorrect sensitivity setting.	Clear obstructions. Adjust sensor sensitivity settings (if applicable).
Light flickers.	Loose bulb, unstable power supply, incompatible bulb.	Tighten bulb. Check power supply. Use recommended E26 LED bulb.

If the problem persists after attempting these solutions, please contact customer support.

WARRANTY INFORMATION

The Edvivi Outdoor Wall Light (Model EW671S-BK) comes with a **1-year manufacturer's limited warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

For warranty claims, please retain your proof of purchase and contact Edvivi customer support.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Edvivi customer service. You can typically find contact information on the product packaging or the official Edvivi website.

We are committed to providing high-quality products and support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F3X9LBVQ>

More documents and user manuals: **<https://manuals.plus/>**