

HOOBRO BG23UBZ01G1

HOOBRO BG23UBZ01G1 End Table with Charging Station User Manual

Model: BG23UBZ01G1

1. INTRODUCTION

Thank you for choosing the HOOBRO BG23UBZ01G1 End Table. This 3-tier narrow side table is designed to provide convenient storage and charging capabilities for small spaces. It features a sturdy top surface, two adjustable mesh shelves, and an integrated charging station with AC outlets and USB ports. This manual provides essential information for assembly, operation, maintenance, and safety to ensure optimal use of your new end table.

2. SAFETY INFORMATION

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Electrical Safety:** The integrated charging station contains electrical components. Do not expose the charging station to water or excessive moisture. Do not attempt to disassemble or modify the charging station. Ensure the power cord is not pinched or damaged during assembly or use. Plug the table into a grounded outlet only.
- **Assembly Safety:** Assemble the unit on a soft, clean surface to prevent scratches. Ensure all screws and fasteners are securely tightened before use. Do not overtighten screws. Keep small parts away from children.
- **Weight Capacity:** Do not exceed the maximum weight capacity for each shelf. Overloading can cause structural failure and injury.
- **Stability:** Place the table on a flat, stable surface. Use the adjustable feet to level the table and prevent wobbling.
- **Intended Use:** This product is intended for indoor use only as an end table or nightstand. Do not use it for purposes other than its intended design.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Top Board (Engineered Wood)
- Metal Frame Components
- Mesh Shelves (2)
- Charging Station Unit (Pre-installed in top board)

- Adjustable Feet (4)
- Assembly Hardware (Screws, Allen Wrench, etc.)
- Assembly Guide

4. SETUP AND ASSEMBLY

Assembly of the HOOBRO End Table is designed to be straightforward. Follow the steps below and refer to the included assembly guide for detailed diagrams.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent damage.
2. **Assemble Frame:** Attach the metal frame components according to the assembly guide. Ensure all screws are finger-tightened initially.
3. **Install Shelves:** The mesh shelves connect with a user-friendly snap-button design. Insert the shelves into the designated slots on the frame. Ensure they are securely clicked into place.
4. **Attach Top Board:** Secure the top board to the assembled frame using the provided hardware. The charging station should be facing the desired direction.
5. **Tighten All Screws:** Once all components are in place, fully tighten all screws with the provided Allen wrench. Do not overtighten.
6. **Attach Adjustable Feet:** Screw the four adjustable feet into the bottom of the table legs.
7. **Level the Table:** Place the table in its desired location. Adjust the feet by rotating them until the table is stable and level on uneven floors.



Figure 1: Product Dimensions and Weight Capacities. Top board: 66 lbs (30 kg). Each mesh shelf: 22 lbs (10 kg).



Flexible Mesh Shelves

2 uses, flat or tilted placement as you like.

Figure 2: Flexible Mesh Shelves. The mesh shelves can be installed flat for stable storage or tilted to display items, using a simple snap-button design.

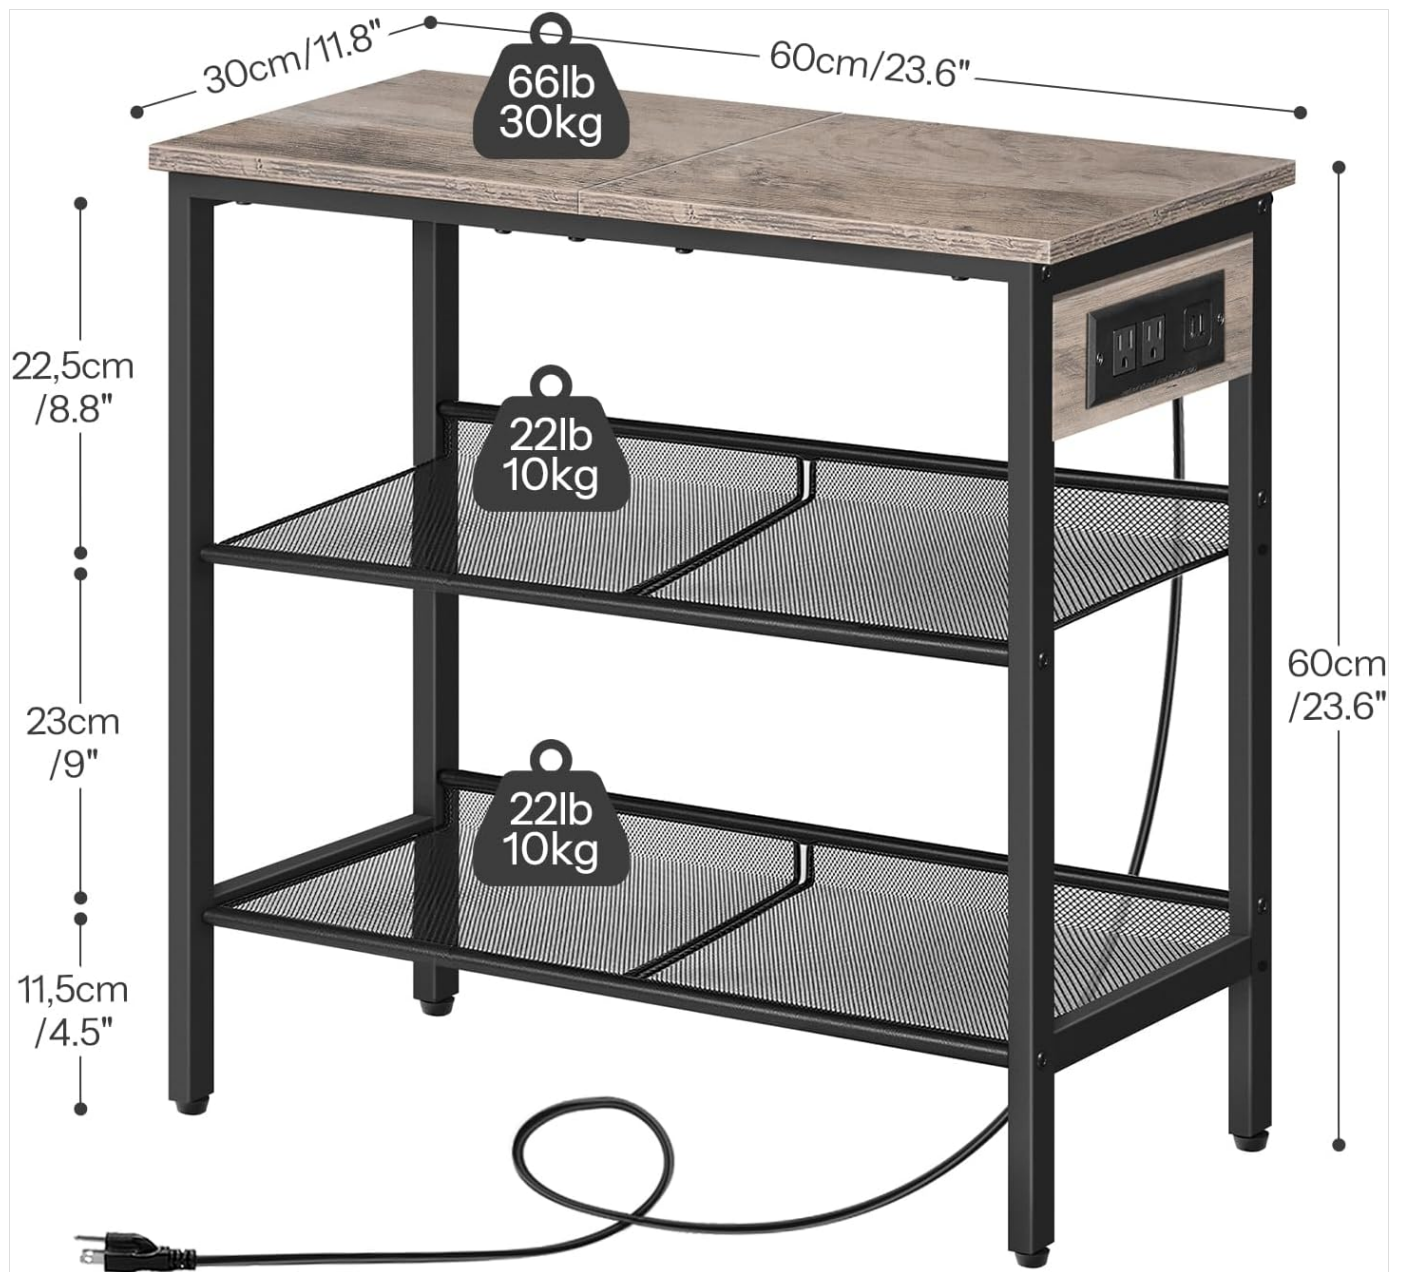


Figure 3: Adjustable Feet. The four adjustable feet can be rotated 360 degrees to adapt to uneven floors and prevent scratches.

5. OPERATING INSTRUCTIONS

The HOOBRO End Table is designed for versatile use and convenience.

- **Using the Charging Station:** Plug the table's power cord into a standard wall outlet. The integrated charging station provides two AC outlets, one USB-A port, and one Type-C port. Connect your devices (phones, tablets, small gadgets) to the appropriate ports for charging.
- **Adjusting Mesh Shelves:** The two mesh shelves can be configured for flat or tilted placement. To change the orientation, gently unclip the shelf from its current position, adjust the angle as desired, and re-clip it securely into the corresponding slots on the metal frame.
- **Storage:** Utilize the top surface for lamps, decor, or frequently accessed items. The mesh shelves offer ventilated storage for books, magazines, baskets, or other personal belongings.



Figure 4: End Table in use, demonstrating charging capabilities and storage.



Adjustable Feet

4 adjustable feet, adapt to uneven floors, no floor scratches.

Figure 5: Large Storage Capacity. The table offers ample open storage on its top board and two mesh racks.

6. MAINTENANCE

Proper care will extend the life and appearance of your HOOBRO End Table.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining, especially on the engineered wood top.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Electrical Components:** Keep the charging station clean and free of dust. Do not spray liquids directly onto the electrical outlets or ports.

7. TROUBLESHOOTING

If you encounter any issues with your end table, refer to the following common troubleshooting steps:

- **Table is Wobbly:** Ensure the table is on a flat surface. Adjust the individual feet by rotating them until the table is stable. Check that all assembly screws are securely tightened.
- **Charging Station Not Working:** Verify that the table's power cord is securely plugged into a functional wall outlet. Check if the wall outlet itself is working by plugging in another device. Ensure your device's charging cable is properly connected to the charging station.
- **Shelves Not Staying in Place:** Ensure the mesh shelves are correctly clipped into the frame's snap-button mechanism. Apply gentle pressure to ensure they are fully engaged.
- **Missing Parts or Damaged Components:** If you discover missing parts or damaged components upon unboxing, do not proceed with assembly. Contact HOOBRO customer support for assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	HOOBRO
Model Number	BG23UBZ01G1
Product Dimensions	11.8"D x 23.6"W x 23.6"H (30cm D x 60cm W x 60cm H)
Item Weight	11.7 Pounds (5.3 kg)
Frame Material	Metal
Top Material Type	Engineered Wood
Color	Greige + Black
Table Design	End Table
Number of Tiers	3 (1 top board, 2 mesh shelves)
Special Features	Adjustable Angle Shelves, Charging Station (2 AC, 1 USB-A, 1 Type-C), Easy Assembly, Space Saving, USB Port
Assembly Required	Yes
Indoor/Outdoor Usage	Indoor

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. You may also visit the official HOOBRO website for further assistance.
HOOBRO Official Website: [Visit HOOBRO Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F3XBK7NG>

More documents and user manuals: **<https://manuals.plus/>**