

Marsail RONGMEI-US VCAMRTS03G-US-45

Marsail 59" Wide TV Stand User Manual

Model: RONGMEI-US VCAMRTS03G-US-45

INTRODUCTION

Thank you for purchasing the Marsail 59" Wide TV Stand. This modern entertainment center is designed to accommodate TVs up to 65 inches and features fluted panels, three easy-sliding drawers, and open shelves for optimal organization. Crafted from durable P2 engineered wood, it offers both style and functionality for your living room or bedroom. Please read this manual carefully before assembly and use to ensure proper setup and longevity of your product.

IMPORTANT SAFETY INFORMATION

- Assembly requires two people for safety and ease.
- Always secure the TV to the stand to prevent tip-overs. Consider using anti-tip straps (not included) for added safety, especially in homes with children or pets.
- Be cautious of sharp edges during assembly and handling of components.
- Do not exceed the weight limit of 150 lbs (68 kg) for the top surface.
- Keep small parts and hardware away from children to prevent choking hazards.
- Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten as needed.
- Place the TV stand on a flat, level surface to prevent wobbling and ensure stability.

PRODUCT DIMENSIONS

Product Dimensions

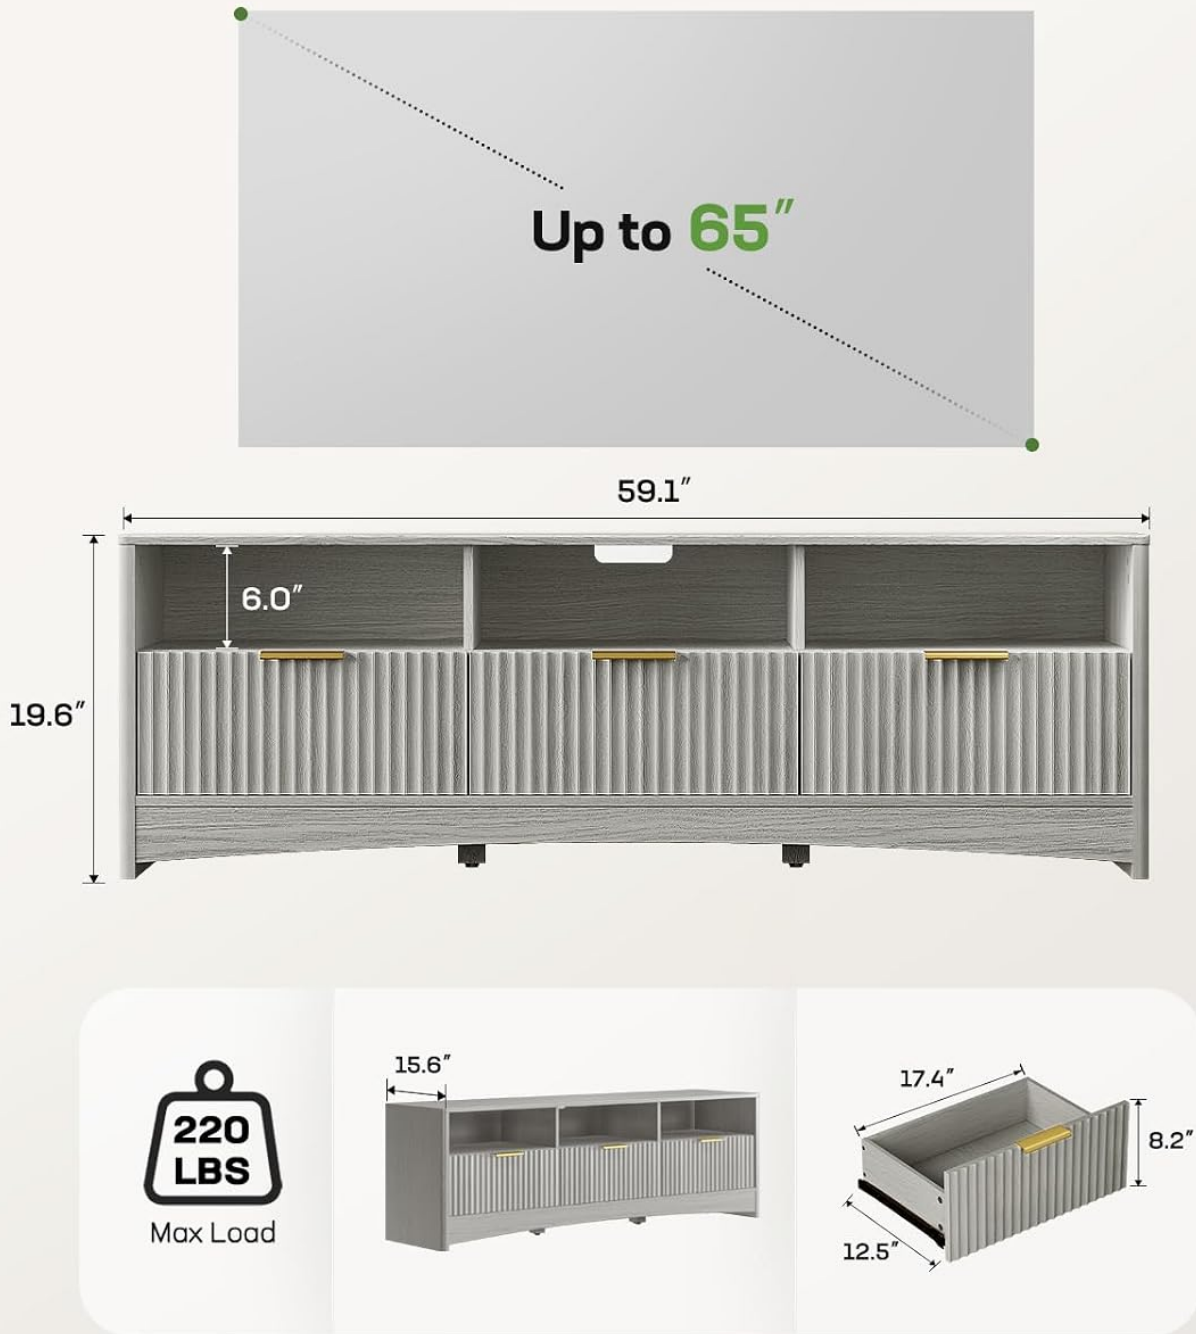


Figure 1: Product Dimensions and Capacity. The stand measures 59.1" W x 15.6" D x 19.6" H, suitable for TVs up to 65 inches, with a maximum load capacity of 220 lbs.

Product Dimensions: 15.6"D x 59"W x 19.6"H

Maximum TV Size Supported: Up to 65 inches

Maximum Weight Capacity (Top Surface): 150 lbs (68 kg)

Material: Durable P2 Engineered Wood

Number of Shelves: 3 (open compartments)

Number of Drawers: 3 (easy-sliding)

ASSEMBLY INSTRUCTIONS

Assembly is required for this TV stand. Please follow the steps below carefully. It is recommended to have two people for assembly.

Tools Required (Not Included):

- Phillips Head Screwdriver
- Hammer (optional, for dowels)

Package Contents:

Verify all parts and hardware are present before beginning assembly. Refer to the included parts list diagram in your physical manual for specific component identification.

- Top Panel
- Bottom Panel
- Side Panels (2)
- Vertical Dividers (3)
- Back Panel
- Drawer Components (3 sets: front, back, sides, bottom)
- Drawer Slides (6 pairs)
- Handles (3)
- Various Screws, Dowels, and Cam Locks

Step-by-Step Assembly:

1. **Prepare the Base:** Attach the leg supports to the bottom panel using the provided screws. Ensure they are securely fastened.
2. **Assemble Side Panels:** Connect the two side panels to the bottom panel using dowels and cam locks. Make sure the pre-drilled holes align.
3. **Install Vertical Dividers:** Insert the three vertical divider panels into their designated slots on the bottom panel. Secure them with dowels and cam locks. These will form the open compartments.
4. **Attach Back Panel:** Slide the back panel into the grooves on the side and divider panels. Secure it with small nails or screws provided. Ensure the cable management hole is oriented correctly.
5. **Install Top Panel:** Carefully place the top panel onto the assembled structure, aligning it with the side panels and vertical dividers. Secure it using dowels and cam locks.
6. **Assemble Drawers:** For each of the three drawers:
 - Attach the side panels to the front and back panels of the drawer using screws.
 - Slide the drawer bottom into the grooves.
 - Attach the drawer slides to the sides of the drawer box.
 - Secure the handle to the front of the drawer.
7. **Insert Drawers:** Carefully slide the assembled drawers into their respective compartments on the TV stand. Ensure they glide smoothly.
8. **Final Check:** Verify that all connections are tight and the stand is stable.



Figure 2: Fully assembled Marsail TV Stand.

OPERATING INSTRUCTIONS

The Marsail TV Stand is designed for versatile use as an entertainment center or storage cabinet.

- **TV Placement:** Place your television centrally on the top surface. Ensure the TV base fits within the dimensions of the stand and does not exceed the recommended TV size (up to 65 inches) or weight capacity (150 lbs).
- **Media Organization:** Utilize the open compartments for media players, gaming consoles, soundbars, or decorative items. The cable management hole at the back helps route wires neatly.
- **Drawer Storage:** The three easy-sliding drawers are ideal for storing remotes, cables, DVDs, games, or other accessories, keeping your living space tidy.
- **Stability:** Always ensure the TV stand is placed on a flat, stable surface. If necessary, use shims to level the stand.

Room for All Your Essentials



Figure 3: Open compartments and drawers for organized storage.

MAINTENANCE

Proper care will help maintain the appearance and extend the life of your Marsail TV Stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish.

- **Spills:** Immediately wipe up any spills to prevent moisture damage or staining.
- **Sunlight Exposure:** Avoid prolonged exposure to direct sunlight, which can cause fading or discoloration of the wood finish.
- **Heat and Moisture:** Keep the stand away from direct heat sources and areas of high humidity. Use coasters under drinks to protect the surface.
- **Hardware Check:** Periodically check all screws, bolts, and fasteners to ensure they remain tight. Re-tighten as necessary to maintain stability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand is wobbly/unstable.	Uneven floor; loose hardware.	Ensure the stand is on a level surface. Check and tighten all assembly screws. Use shims if the floor is uneven.
Drawers do not slide smoothly.	Improperly installed drawer slides; obstruction in the track.	Remove the drawer and re-check the installation of the drawer slides on both the drawer and the stand. Ensure no debris is in the tracks.
Parts do not align during assembly.	Incorrect orientation of parts; manufacturing defect.	Double-check the part numbers and orientation against the assembly diagrams. If parts are damaged or defective, contact customer support.
Color appears different than advertised.	Lighting conditions; individual screen display settings.	Product color may vary slightly due to lighting and screen settings. This is a common occurrence and not a defect.

SPECIFICATIONS

Brand: Marsail

Model: RONGMEI-US VCAMRTS03G-US-45

Color: Grey

Material: Engineered Wood

Product Dimensions (D x W x H): 15.6" x 59" x 19.6"

Item Weight: 75.6 pounds

Recommended Use: Entertainment Media, Living Room, Bedroom

Mounting Type: Floor Mount

Special Feature: Heavy Duty, Fluted Panels, Rounded Corners, Cable Management Hole

Assembly Required: Yes (2 people recommended)

UPC: 840478820621

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Marsail customer service directly. Keep your purchase receipt for warranty claims.

Customer Support: For assistance with assembly, missing parts, or any other inquiries, please visit the Marsail store on Amazon or contact their customer service team. You can find contact details on the Marsail brand page or your order details.

Returns: This product is eligible for 30-day easy returns through Amazon. Please refer to Amazon's return policy for details.

© 2025 Marsail. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question