

Manuals.plus /

> Marsail /

> Marsail 59-inch Wide TV Stand (Model RONGMEI-US VCAMRTS03N-US-49) Instruction Manual

Marsail RONGMEI-US VCAMRTS03N-US-49

Marsail 59-inch Wide TV Stand Instruction Manual

Model: RONGMEI-US VCAMRTS03N-US-49 | Brand: Marsail

INTRODUCTION

Thank you for choosing the Marsail 59-inch Wide TV Stand. This modern entertainment center is designed to accommodate TVs up to 65 inches and features fluted panels, three easy-sliding drawers, and open shelves for organized storage. This manual provides essential information for safe assembly, proper usage, and maintenance to ensure the longevity and optimal performance of your product.

SAFETY INFORMATION

- Always secure the TV stand to the wall using the provided anti-tip kit to prevent tip-over accidents, especially in households with children or pets.
- Exercise caution when handling and assembling the product due to potentially sharp edges.
- Ensure all screws and fasteners are tightened securely before use. Periodically check and re-tighten as necessary.
- Do not overload the shelves or drawers beyond their recommended weight capacity.
- Keep small parts and assembly hardware out of reach of children to prevent choking hazards.

PACKAGE CONTENTS

Before beginning assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- Engineered Wood Panels (various sizes for top, bottom, sides, dividers, drawer components)
- 3 Drawer Boxes with Fluted Front Panels
- 3 Metal Pull Handles
- Drawer Slides (pre-attached to some panels)
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Anti-Tip Kit
- Instruction Manual

ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to assemble the unit on a soft, clean surface to prevent scratches. Two people are recommended for assembly.

Assembly Overview Video

Video: Marsail Modern Fluted TV Stand - A quick overview of the assembled product and its features.

Detailed Assembly Steps

1. **Step 1: Prepare the Bottom Panel.** Insert four Ø6 x 35mm screws (A) into the designated holes on the bottom panel (Part 01).



Image: Screws being inserted into the bottom panel.
2. **Step 2: Attach Side Panels.** Connect the two side panels (Part 02) to the bottom panel (Part 01) using four Ø8 x 30mm dowels (C) and four Ø6 x 50mm screws (D).



Image: Side panels being attached to the bottom panel.
3. **Step 3: Install Middle Dividers.** Secure the two middle divider panels (Part 03) to the bottom panel (Part 01) using four Ø15 x 11mm cam locks (B1) and four Ø8 x 30mm dowels (C).



Image: Middle divider panels being secured.
4. **Step 4: Prepare the Back Support Panel.** Insert four Ø6 x 35mm screws (A) into the designated holes on the back support panel (Part 04).



Image: Screws being inserted into the back support panel.
5. **Step 5: Attach Curved Base Panel.** Connect the curved base panel (Part 05) to the back support panel (Part 04) using two Ø15 x 11mm cam locks (B1) and two Ø8 x 30mm dowels (C).



Image: Curved base panel being attached.
6. **Step 6: Install Support Blocks.** Attach two support blocks (Part 06) to the back support panel (Part 04) using two Ø6 x 50mm screws (D).



Image: Support blocks being installed.
7. **Step 7: Slide in Back Panel.** Carefully slide the back panel (Part 07) into the grooves of the assembled frame.



Image: Back panel being slid into the frame.
8. **Step 8: Prepare Side Panels with Drawer Slides.** Insert twelve Ø6 x 35mm screws (A) into the designated holes on the left side panel (Part 08) which includes drawer slides.



Image: Screws being inserted into the left side panel.
9. **Step 9: Attach Side Panels to Frame.** Attach the left and right side panels (Parts 08 and 09) to the main frame using twelve Ø15 x 11mm cam locks (B1) and ten Ø8 x 30mm dowels (C).



Image: Side panels being attached to the main frame.
10. **Step 10: Install Top Panel.** Place the top panel (Part 10) onto the assembled structure, securing it with eight Ø15 x 11mm cam locks (B1) and eight Ø8 x 30mm dowels (C).



Image: Top panel being installed.

11. **Step 11: Prepare Top Panel Screws.** Insert eight Ø6 x 35mm screws (A) into the designated holes on the top panel (Part 11).



Image: Screws being inserted into the top panel.

12. **Step 12: Assemble Drawer Box.** Assemble the drawer sides (Parts 12, 13, 14) using twelve Ø4 x 38mm screws (E). Repeat for all three drawers.



Image: Drawer sides being assembled.

13. **Step 13: Insert Drawer Bottom.** Slide the drawer bottom (Part 15) into the grooves of the assembled drawer sides. Repeat for all three drawers.



Image: Drawer bottom being inserted.

14. **Step 14: Attach Drawer Back.** Attach the drawer back (Part 16) to complete the drawer box using six Ø4 x 38mm screws (E). Repeat for all three drawers.



Image: Drawer back being attached.

15. **Step 15: Prepare Drawer Fronts.** Insert fifteen Ø6 x 35mm screws (A) into the designated holes on the drawer fronts (Parts 17, 18, 19).



Image: Screws being inserted into the drawer fronts.

16. **Step 16: Attach Drawer Fronts to Boxes.** Attach the drawer fronts (Parts 17, 18, 19) to the assembled drawer boxes using fifteen Ø15 x 9mm cam locks (B2).



Image: Drawer fronts being attached to the drawer boxes.

17. **Step 17: Install Handles.** Attach the metal pull handles (G) to each drawer front using six Ø3.5 x 12mm screws (F).



Image: Handles being installed on drawer fronts.

18. **Step 18: Insert Drawers.** Carefully insert the three assembled drawers (Parts 17, 18, 19) into the TV stand's designated slots.



Image: Assembled drawers being inserted into the TV stand.

19. **Step 19: Final Product.** Your Marsail 59-inch Wide TV Stand is now fully assembled.



Image: The fully assembled TV stand.

Assembly Tips Video

Video: Marsail 59 inch Wide TV Stand - A user's perspective on the assembly process, highlighting ease of construction.

USAGE

The Marsail TV Stand is designed for versatile use in your living room or bedroom.

- **TV Placement:** The top surface is suitable for TVs up to 65 inches. Ensure the TV base fits within the stand's dimensions (59"W x 15.6"D).

- **Three-Tier Storage:** Utilize the open compartments for media players, gaming consoles, or decorative items. The three easy-sliding drawers are ideal for storing remotes, cables, and other accessories, keeping your space tidy.
- **Cable Management:** A dedicated cable management hole is included to help organize and conceal wires, maintaining a clean and efficient setup.
- **Versatile Design:** Beyond a TV stand, this unit can function as a storage and display cabinet, enhancing various room decors with its modern aesthetic.

Room for All Your Essentials



Open Compartments

3 Drawers

Spacious Tabletop

Image: The TV stand showcasing its three-tier storage space with open compartments and drawers.



Image: A lifestyle view of the TV stand in a living room, demonstrating its capacity for a large TV and its aesthetic integration.

MAINTENANCE

To keep your Marsail TV Stand in excellent condition, follow these maintenance guidelines:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the engineered wood finish.
- **Spills:** Promptly clean up any spills to prevent staining or water damage.

- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration of the wood finish.
- **Heat and Moisture:** Keep the stand away from direct heat sources and excessive moisture to prevent warping or damage.
- **Hardware Check:** Periodically inspect all screws and fasteners to ensure they remain tight. Re-tighten if necessary.

TROUBLESHOOTING

If you encounter any issues during assembly or use, refer to the following common solutions:

- **Wobbly Stand:** Ensure all cam locks and screws are fully tightened. Check that the stand is on a level surface. Adjust the feet if applicable.
- **Drawers Not Sliding Smoothly:** Verify that the drawer slides are correctly installed and aligned. Ensure no debris is obstructing the tracks.
- **Missing Parts:** Double-check the packaging and all compartments. If parts are genuinely missing, contact Marsail customer support with your model number and a description of the missing part.
- **Damaged Parts:** Do not proceed with assembly if any part is damaged. Contact customer support for replacement parts.

SPECIFICATIONS

Brand	Marsail
Model Number	RONGMEI-US VCAMRTS03N-US-49
Color	Natural Oak
Material	Engineered Wood
Product Dimensions (D x W x H)	15.6"D x 59"W x 19.6"H
Item Weight	75.6 Pounds
Recommended TV Size	Up to 65 inches
Number of Drawers	3
Number of Shelves	3 (open compartments)
Mounting Type	Floor Mount
Assembly Required	Yes
UPC	840478820614



Image: Detailed product dimensions and maximum load capacity (220 lbs).

WARRANTY AND SUPPORT

For warranty information, missing parts, or technical support, please contact Marsail customer service. Refer to your purchase documentation for specific contact details or visit the official Marsail website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F3XGTY2S>

More documents and user manuals: <https://manuals.plus/>