

- Manuals.plus /
- › KEDSUM /
 - › KEDSUM 2-in-1 Foldable Shopping Cart and Hand Truck Instruction Manual

KEDSUM DY23E044D

KEDSUM 2-in-1 Foldable Shopping Cart and Hand Truck

Model: DY23E044D

- Information
- Setup
- Operation
- Maintenance
- Introduction
- Safety
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

Thank you for choosing the KEDSUM 2-in-1 Foldable Shopping Cart and Hand Truck. This versatile product is designed to assist with various hauling tasks, functioning as both a 60L capacity shopping cart and a 330 lbs load-bearing hand truck. Its foldable design ensures compact storage and portability. This manual provides essential information for safe and efficient use, assembly, and maintenance of your cart.



Image 1.1: KEDSUM 2-in-1 Foldable Shopping Cart and Hand Truck.

2. SAFETY INFORMATION

Please read and understand all safety instructions before using the KEDSUM 2-in-1 cart. Failure to follow these instructions may result in injury or damage to the product.

- Do not exceed the maximum load capacity of 330 lbs (150 kg) for the hand truck function or 60L for the shopping bag.
- Ensure all parts are securely assembled and locked into place before use.
- Distribute weight evenly on the cart to maintain stability.
- Exercise caution when navigating stairs, curbs, or uneven surfaces.
- Keep hands and fingers clear of moving parts, especially during folding and unfolding.
- Do not allow children to play with or ride on the cart.
- Store the cart in a dry, safe place when not in use.

3. SETUP AND ASSEMBLY

The KEDSUM 2-in-1 cart requires minimal assembly. Follow these steps to prepare your cart for use:

1. **Unpack Components:** Carefully remove all components from the packaging. Verify that all parts are present: main frame, two wheels, and the waterproof bag.
2. **Attach Wheels:** Insert the wheels onto the axle pins on the main frame. Ensure they click securely into place. Some models may require screwing the wheels on using the provided Allen wrench.
3. **Unfold the Frame:** Gently pull the handle upwards to extend the frame. Press down on the base plate until it locks into its open position.
4. **Attach the Bag (for Shopping Cart use):** Place the waterproof bag onto the frame, ensuring the bottom of the bag rests on the base plate and the top straps or loops are secured to the handle or upper frame.



Image 3.1: Product dimensions and folded configuration.

Setup Video

Video 3.1: Official KEDSUM video demonstrating the setup and features of the 2-in-1 Shopping Cart.

4. OPERATING INSTRUCTIONS

4.1. Using as a Shopping Cart

With the waterproof bag attached, your KEDSUM cart is ready for grocery shopping, laundry, or other errands.

- Ensure the bag is properly secured to the frame.
- Place items inside the 60L capacity bag. Utilize the side pockets and front zip pocket for smaller items like umbrellas, phones, or keys.
- Extend the telescopic handle to a comfortable height.
- Pull or push the cart using the handle. The 6.9-inch all-terrain wheels are designed for smooth movement across various surfaces.



Image 4.1: Using the KEDSUM cart as a shopping cart.


4.2. Using as a Hand Truck

To use the cart as a hand truck for heavier items up to 330 lbs, remove the waterproof bag.

1. **Remove the Bag:** Detach the waterproof bag from the frame.
2. **Position Items:** Place boxes, luggage, or other heavy items onto the base plate of the cart.
3. **Secure Items:** For stability, it is recommended to use bungee cords or straps (not included) to secure items to the frame.
4. **Transport:** Tilt the hand truck backward to balance the load on the wheels and pull it to your destination.

2-IN-1 DESIGN

Hand Truck

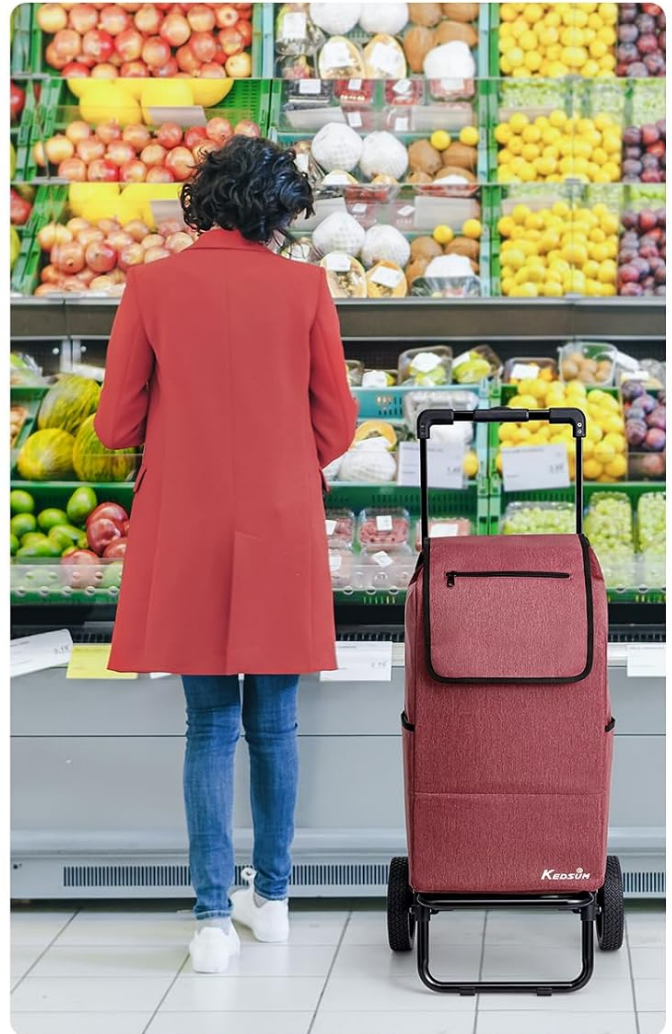

Utility Shopping Cart

Image 4.2: The 2-in-1 design allows conversion between shopping cart and hand truck.



GARDEN



Image 4.3: KEDSUM cart used as a hand truck for moving boxes.

4.3. Folding and Storage

The cart is designed for compact storage.

1. **Remove Bag:** If attached, remove the waterproof bag.
2. **Retract Handle:** Press the button on the handle and push it down to retract fully.
3. **Fold Base Plate:** Lift the base plate upwards until it folds flat against the frame.
4. **Collapse Frame:** Gently push the frame inwards to collapse it into its compact form.



Image 4.4: Easy folding for storage in a car trunk or on a shelf.

Operation Video

Video 4.1: Official KEDSUM video demonstrating various usage scenarios of the 2-in-1 Shopping Cart.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your KEDSUM cart.

- **Cleaning the Bag:** The waterproof bag can be wiped clean with a damp cloth and mild detergent. Allow it to air dry completely before folding or storing. Do not machine wash or tumble dry.
- **Frame Cleaning:** Wipe the metal frame with a damp cloth to remove dirt and debris. Dry thoroughly to prevent rust.
- **Wheel Inspection:** Periodically check the wheels for any signs of wear, damage, or debris accumulation. Remove any tangled hair or string from the axles to ensure smooth rolling.
- **Fastener Check:** Ensure all screws and fasteners remain tight. Tighten any loose connections with an appropriate tool.
- **Storage:** Store the folded cart in a cool, dry place away from direct sunlight and extreme temperatures.

HARD-WEARING & WATERPROOF FABRIC



Adhesive strip reinforced bottom -
Prevents the bag from tipping over



Thickened Iron Tie Rod



Side Pockets*2



Front Zip Pocket



Lined Zip Pocket

Image 5.1: The cart features hard-wearing and waterproof fabric for easy cleaning.

6. TROUBLESHOOTING

If you encounter issues with your KEDSUM cart, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Wheels do not roll smoothly.	Debris caught in wheels; loose axle; worn bearings.	Remove debris. Check axle for tightness. If bearings are worn, contact support.
Cart feels unstable.	Uneven weight distribution; overloaded; frame not fully locked.	Redistribute load evenly. Do not exceed capacity. Ensure frame is fully extended and locked.
Handle does not extend/retract.	Button stuck; debris in mechanism.	Press the button firmly. Check for and remove any obstructions.
Bag appears damaged or torn.	Sharp objects inside; excessive force; manufacturing defect.	Avoid placing sharp objects directly in the bag. Contact customer support if due to defect.

7. SPECIFICATIONS


Key technical specifications for the KEDSUM 2-in-1 Foldable Shopping Cart and Hand Truck:

- **Model Number:** DY23E044D
- **Product Dimensions (Unfolded):** 15.35"D x 16.53"W x 39.4"H
- **Folded Dimensions:** 16.53" x 6.9" x 20.3"
- **Material:** Iron, Metal (Frame); Wear-resistant fabric (Bag)
- **Color:** Red
- **Weight Capacity (Hand Truck):** 330 lbs (150 kg)
- **Bag Capacity:** 60 Liters
- **Wheel Size:** 6.9 inches, All-Terrain Rubber Wheels
- **Special Features:** Collapsible, Durable, Foldable, Heavy Duty, Waterproof Bag
- **Manufacturer:** KEDSUM

All Terrain Wheels

large diameter super wide quality rubber wheel

- Antifriction
- Aging resistance
- High temperature resistance

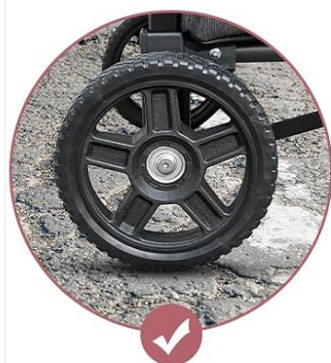

Cracked pavement



Cobblestone



Gravel



Snow

Image 7.1: Detail of the 6.9-inch all-terrain wheels.

8. WARRANTY & SUPPORT

KEDSUM products are manufactured to high-quality standards. For specific warranty details, please refer to the documentation included with your purchase or contact KEDSUM customer support directly.

Customer Support:

If you have any questions, concerns, or require assistance with your KEDSUM 2-in-1 Foldable Shopping Cart and Hand Truck, please contact our customer support team. Contact information can typically be found on the product packaging, our official website, or through your retailer.

Please have your model number (DY23E044D) and purchase date available when contacting support.

© 2026 KEDSUM. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question