

GoPro CHDFB13EDT

GoPro HERO13 Creator Edition Action Camera User Manual

Brand: GoPro | Model: CHDFB13EDT

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your GoPro HERO13 Creator Edition Action Camera. Designed for content creators, this kit offers advanced features for capturing high-quality video and photos in various environments.

The GoPro HERO13 Creator Edition is a complete content creation kit for capturing ultra-smooth, high-resolution 5K videos and stunning photos. It comes equipped with essential accessories, including a directional mic, LED light, and battery grip, making it ideal for vlogging, travel, or adventure. Built to withstand the elements, it's waterproof, durable, and stabilized for crisp footage in any setting. Voice control, a front-facing screen, and intuitive touch controls offer ease of use. Whether you're filming on the move or live streaming from anywhere, the HERO13 delivers cinematic quality in a compact, creator-friendly design.

2. WHAT'S INCLUDED

Your GoPro HERO13 Creator Edition bundle includes the following items:

2.1 Manufacturer Included Items

- GoPro HERO13 Black
- GoPro Enduro Rechargeable Li-Ion Battery for HERO13 Black
- Curved Adhesive Mount
- Mounting Buckle
- Thumbscrew
- USB-C Cable
- GoPro Volta Battery Grip
- GoPro Media Mod
- Removable Windscreen

- Vertical Mounting Buckle
- Thumbscrew
- GoPro Light Mod
- Diffuser
- 2-Finger Adapter
- USB Type-C Cable
- GoPro Magnetic Latch Mount for HERO13 Black
- Thumbscrew
- USB Pass-Through Door
- Carrying Case

2.2 Bundle Items

- SanDisk Extreme Pro 64GB microSDXC Card
- DigiNerds 50-In-1 Action Camera Accessory Kit Which Includes:
 - Suction Cup
 - Floating Handle Grip
 - Strap
 - 360-Degree Rotation Clip
 - Tether Straps
 - Wrist Strap
 - Handheld Monopod
 - Bicycle Handlebar
 - Chest Strap
 - Head Strap Mount
 - Wrench
 - Wrist Mount With Screw
 - Tripod Mount Adapters
 - Car Ring Case
 - Helmet Extension Arm
 - Helmet Strap Mount
 - Mini Tripod
 - 2 X Switch Support
 - 2 X Surface J-Hook Buckle
 - 3 X Basic Mount
 - 3 X Flat Mounts
 - 2 X Curved Mounts
 - 4 X Screws
 - 5 X Adhesive Pads
 - 13 X Anti-Fog Inserts
 - 6AVE Electronics Microfiber Cloth



Image 1: Overview of the GoPro HERO13 Creator Edition camera and its comprehensive accessory kit.

3. INITIAL SETUP

3.1 Charging the Battery

Before first use, fully charge the GoPro Enduro Rechargeable Li-Ion Battery. Insert the battery into the camera and connect the USB-C cable to the camera and a power source. The camera's status lights will indicate charging progress.

3.2 Inserting the microSD Card

The SanDisk Extreme Pro 64GB microSDXC Card is included. Open the side door of the camera and insert the microSD card with the label facing the front of the camera until it clicks into place. Ensure the card is properly formatted within the camera settings for optimal performance.

3.3 Powering On/Off

To power on, press the Mode button. To power off, press and hold the Mode button for 3 seconds.

4. OPERATING YOUR GoPro HERO13

4.1 Basic Controls

- **Mode Button:** Press to cycle through video, photo, and time-lapse modes. Press and hold to power on/off.
- **Shutter Button:** Press to start/stop recording video, take a photo, or start a time-lapse.
- **Touch Screen:** Swipe and tap to navigate menus, change settings, and review footage.

4.2 Key Features

- **5K Video & High-Res Photos:** Capture stunning visuals with advanced resolution.
- **Advanced Stabilization:** Ensures smooth footage even during intense action.
- **Waterproof Construction:** Designed for use in various environments, including underwater.
- **Voice Control:** Operate the camera hands-free using voice commands.
- **Front-Facing Screen:** Ideal for vlogging and framing shots.

FLEXIBLE TRIPOD



360° WRIST STRAP



CAR SUCTION MOUNT



Image 2: The GoPro HERO13 Black camera, showcasing its dual screens for versatile shooting.

5. USING INCLUDED ACCESSORIES

5.1 GoPro Volta Battery Grip

The Volta Battery Grip extends your camera's battery life and provides integrated camera controls. It can also function as a tripod.

5.2 GoPro Media Mod

The Media Mod enhances audio with a built-in directional microphone and provides 3.5mm mic port, HDMI-out, and two cold-shoe mounts for additional accessories like the Light Mod.

5.3 GoPro Light Mod

The Light Mod provides powerful LED lighting for illuminating your subjects. Attach it to the Media Mod or other

compatible mounts.



Image 3: The GoPro HERO13 camera assembled with the Volta Battery Grip, Light Mod, and Media Mod, forming the Creator Edition setup.

5.4 DigiNerds 50-in-1 Accessory Kit

This comprehensive kit includes various mounts and accessories to expand your shooting possibilities:

- Flexible Tripod
- 360-Degree Wrist Strap
- Car Suction Mount
- Head Strap
- Selfie Stick
- Helmet Extension Arm
- Floating Handle Grip
- Wrist Strap for Remote
- Chest Strap

HEAD STRAP



SELFIE STICK



HELMET EXTENSION ARM



Image 4: Illustration of the flexible tripod accessory, demonstrating its use for stable camera placement.

FLOATING HANDLE GRIP



WRIST STRAP FOR REMOTE



CHEST STRAP



Image 5: Examples of the head strap and selfie stick accessories in use, providing hands-free and extended reach filming options.



Image 6: The floating handle grip for water activities and the chest strap for immersive point-of-view footage.

6. CARE AND MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the camera lens and screens. For waterproof use, ensure all doors are securely closed and free of debris. Rinse with fresh water after saltwater exposure.
- **Storage:** Store the camera and accessories in a cool, dry place. Remove the battery if storing for extended periods.
- **Battery Care:** Avoid extreme temperatures. Do not puncture or disassemble the battery.

7. TROUBLESHOOTING

Camera Not Powering On:

Ensure the battery is fully charged and properly inserted. Try a different battery if available. Perform a hard reset by holding the Mode button for 10 seconds.

Recording Issues (Freezing, Corrupted Files):

Ensure you are using a high-speed, recommended microSD card (UHS-I Speed Class 3 (U3) or higher). Format the microSD card within the camera. Update camera firmware.

Poor Audio Quality:

Ensure the Media Mod's microphone is not obstructed. Check for wind noise and use the removable windscreen if necessary. Verify microphone settings in the camera menu.

8. TECHNICAL SPECIFICATIONS

Feature	Detail
Brand	GoPro
Model Name	CHDFB13EDT
Video Capture Resolution	5K
Photo Sensor Technology	CMOS
Flash Memory Type	Micro SDXC
Screen Size	2.3 Inches (Visible diagonal: 3" / 6 cm)
Connectivity Technology	HDMI, USB
Item Weight	5.21 pounds
Product Dimensions	1.3 x 2.8 x 2 inches
Batteries	1 Lithium Ion battery (included)

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official GoPro website or contact GoPro customer service. Keep your proof of purchase for warranty claims.
Visit the official GoPro Store: [GoPro Store on Amazon](#)

© 2025 GoPro. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question