

[Manuals.plus](#) /

› [BoxWave](#) /

› BoxWave AccuPoint Active Stylus Pen User Manual for MINIBEAR D21 Language Translator

BoxWave AccuPoint Active Stylus

BoxWave AccuPoint Active Stylus Pen User Manual

Compatible with MINIBEAR D21 Language Translator

1. INTRODUCTION

This manual provides detailed instructions for the use and care of your BoxWave AccuPoint Active Stylus Pen. This electronic stylus is designed to interact with your device's screen through quick electronic pulses, offering a natural writing and drawing experience without the need for Bluetooth pairing. It is compatible with the MINIBEAR D21 Language Translator (4 inch model).



Image 1.1: The AccuPoint Active Stylus Pen shown with a MINIBEAR D21 Language Translator.

2. PRODUCT COMPONENTS

The AccuPoint Active Stylus features a robust design with several key components:

- **Ultra Fine Tip:** A 2mm tip designed for precise interaction with your screen.
- **FiberMesh Tip:** An alternative, removable tip for broader strokes or general navigation.
- **Built-in Charging Port:** Located at the end of the stylus for convenient recharging.
- **Indicator Light:** Provides visual feedback on power and charging status.
- **Power Button:** Activates and deactivates the stylus.
- **Brushed Aluminum Barrel:** Provides a comfortable grip and durability.



Image 2.1: Detailed diagram illustrating the various components of the AccuPoint Active Stylus.

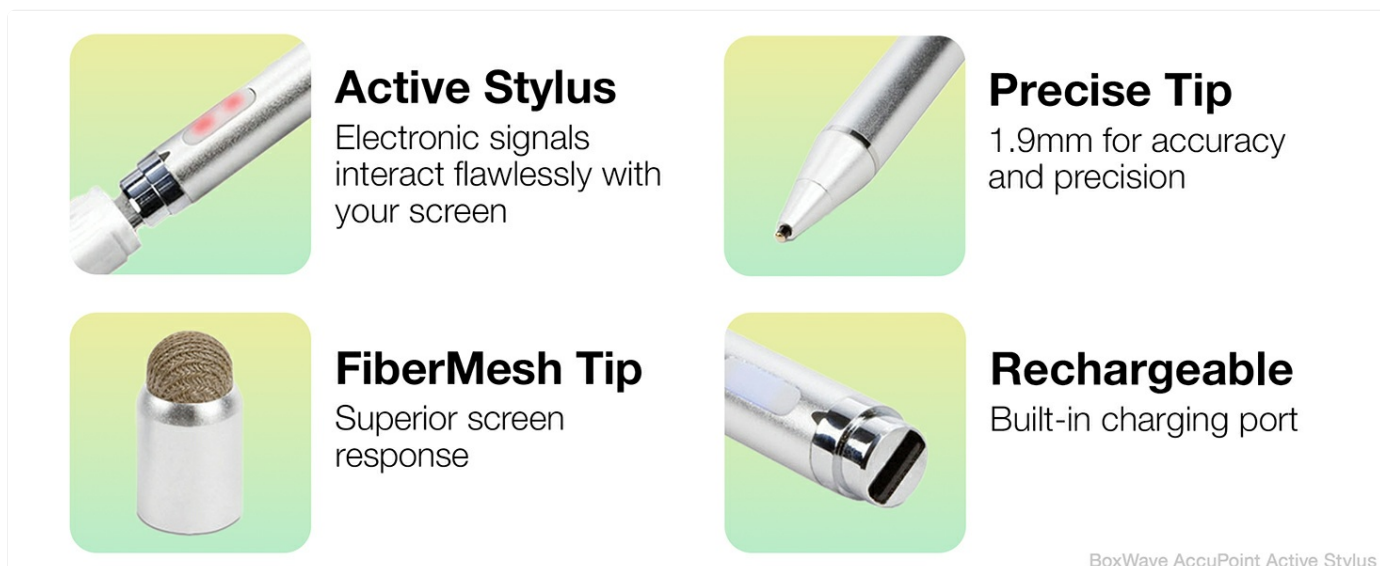


Image 2.2: Overview of key features including active stylus technology, precise tip, FiberMesh tip, and rechargeable design.

3. SETUP

3.1 Charging the Stylus

Before initial use, fully charge your AccuPoint Active Stylus. A built-in battery provides approximately 12 hours of use on a full charge.

1. Locate the MicroUSB charging port at the top of the stylus.
2. Connect the included MicroUSB cable to the stylus charging port.
3. Connect the other end of the MicroUSB cable to any standard USB power source (e.g., computer USB port, wall adapter).
4. The indicator light will illuminate red during charging and turn green when fully charged.



Image 3.1: Visual guide to the charging indicator light states.



Conveniently Charge

Image 3.2: The stylus being charged conveniently via a laptop's USB port.

3.2 Powering On/Off

To power on the stylus, press the power button. The indicator light will turn blue. To power off, press the power button again. The indicator light will turn off.

4. OPERATING INSTRUCTIONS

The AccuPoint Active Stylus is designed for immediate use without pairing. Simply turn it on and begin interacting with your device's touchscreen.

4.1 Basic Usage

- **Tapping:** Lightly tap the screen with the stylus tip to select items or activate functions.
- **Swiping:** Drag the stylus across the screen to scroll, navigate, or perform gestures.
- **Drawing/Writing:** Use the fine tip for detailed input, such as writing notes or sketching.



Image 4.1: The stylus being used to tap an application icon on a device screen.



Higher Accuracy & Sensitivity



Image 4.2: The stylus providing accurate and sensitive input on a digital display.

4.2 Important Considerations

- The AccuPoint Active Stylus does not support **Palm Rejection**. Avoid resting your palm on the screen while using the stylus to prevent unintended input.
- The stylus does not support **Pressure Sensitivity**. Line thickness and opacity will not vary with pressure applied.



Tap, Swipe, or Write Naturally With the AccuPoint Active Stylus

No pairing required! The AccuPoint Active Stylus emits quick electronic pulses to interact with your device's screen.

(Please note: the AccuPoint Active Stylus does not support palm rejection)

BoxWave AccuPoint Active Stylus

Image 4.3: The stylus allows for natural interaction without the need for Bluetooth pairing.

5. MAINTENANCE AND CARE

Proper care will extend the life of your stylus.

- **Cleaning:** Use a soft, dry cloth to clean the stylus barrel. Do not use harsh chemicals or abrasive materials.
- **Tip Care:** Ensure the stylus tip is free from debris. The FiberMesh tip is removable and can be replaced if worn.
- **Storage:** Store the stylus in a safe place to prevent damage to the tip or barrel. Avoid extreme temperatures.

6. TROUBLESHOOTING

6.1 Stylus Not Responding

- **Check Power:** Ensure the stylus is turned on and the indicator light is blue.
- **Charge Battery:** If the indicator light is off or dim, the battery may be depleted. Charge the stylus using the provided MicroUSB cable.
- **Clean Tip:** Ensure the stylus tip is clean and free of debris that might interfere with screen contact.
- **Restart Device:** Sometimes, restarting your MINIBEAR D21 Language Translator can resolve connectivity issues.

6.2 Charging Issues

- **Verify Cable:** Ensure the MicroUSB cable is securely connected to both the stylus and the power source.
- **Try Different Power Source:** Test charging with a different USB port or wall adapter to rule out a faulty power source.
- **Check Port:** Inspect the stylus charging port for any obstructions or damage.

7. SPECIFICATIONS

Feature	Specification
Model Name	AccuPoint Active Stylus
Compatibility	MINIBEAR D21 Language Translator (4 inch)
Tip Size	2mm (Ultra Fine Tip)

Battery Life	Approximately 12 hours of use
Charging Port	MicroUSB
Material	Brushed Aluminum Barrel
Item Weight	1.3 ounces
Manufacturer	BoxWave
First Available Date	January 24, 2025

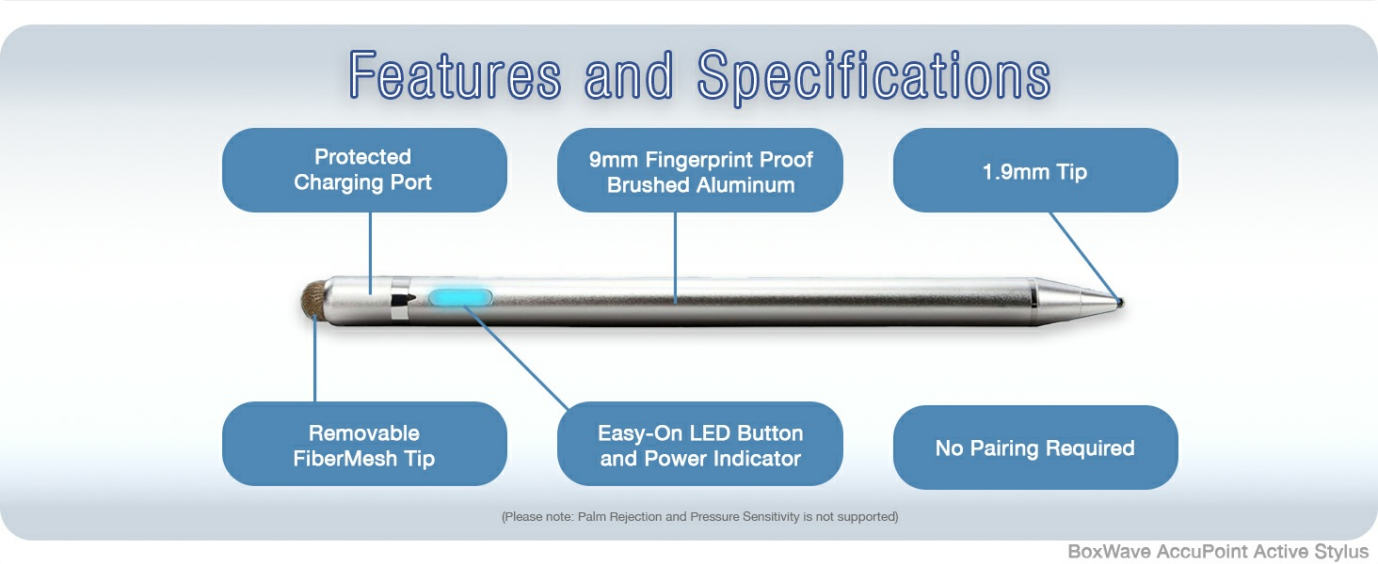


Image 7.1: Visual representation of the stylus's key features and specifications.

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the official BoxWave website or contact their customer service directly. Details regarding product registration and support resources can typically be found on the manufacturer's packaging or website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question