

[Manuals.plus](#) /

› [Bushnell Golf](#) /

› Bushnell Golf Tour V6 Shift Laser Rangefinder Instruction Manual

Bushnell Golf 202322 Towel Bundle

Bushnell Golf Tour V6 Shift Laser Rangefinder

Model: 202322 Towel Bundle

INTRODUCTION

The Bushnell Golf Tour V6 Shift Laser Rangefinder is a precision optical instrument designed to provide accurate distance measurements for golfers. This manual provides comprehensive instructions for the proper setup, operation, maintenance, and troubleshooting of your device, ensuring you get the most out of its advanced features on the course.

KEY FEATURES

- **Tour-Trusted Compensated Distances:** Utilizes new electronics and a slope algorithm for precise, tour-trusted compensated distances, accounting for the hole's incline/decline.
- **Slope-Switch Technology:** Allows easy switching in and out of Slope mode, making it USGA-Conforming and legal for tournament play.
- **Improved PinSeeker Technology with Visual JOLT:** Provides tactile and visual feedback (vibration and red ring flash) when locked onto the pin, ensuring confidence in your shot.
- **6X Magnification:** Offers clear and precise optics for targeting objects up to 1300 yards away, with flag accuracy within 1-yard.
- **Integrated BITE Magnetic Cart Mount:** Securely attaches the rangefinder to a golf cart bar for convenient access.
- **Improved Weather Resistant Design (IPX6):** The most weather-resistant Tour series laser rangefinder Bushnell Golf has ever produced.
- **Bushnell Golf App Integration:** Unlocks useful information such as hole layouts with distance, 3D flyovers with distance, and wireless course updates.



Figure 1: Overview of Bushnell Tour V6 Shift features including PinSeeker, Slope-Switch, and Magnetic Mount.

MAGNIFICATION

6x

RANGE

5-1,300yds

RANGE TO FLAG

5-500yds



Figure 2: Magnification and range specifications for the device, showing 6X magnification and ranges up to 1300 yards.

SETUP

Battery Installation

The Tour V6 Shift uses a CR2 battery. To install or replace the battery:

1. Locate the battery compartment on the underside of the device.
2. Twist the battery cap counter-clockwise to open.
3. Insert a new CR2 battery, ensuring the positive (+) and negative (-) terminals are correctly aligned as indicated inside the compartment.
4. Replace the battery cap and twist clockwise to secure.

Initial Power On

After battery installation, press the Power button (located on the top of the device) to turn on the rangefinder. The internal display will illuminate.

OPERATING INSTRUCTIONS

Basic Ranging

To obtain a distance measurement:

1. Look through the eyepiece and aim the reticle (crosshairs) at your desired target.
2. Press and release the Power button. The distance to the target will be displayed in the internal LCD.



Figure 3: Proper technique for holding and aiming the rangefinder.

Slope Compensation

The Tour V6 Shift features Slope-Switch Technology. To activate or deactivate slope compensation:

- Locate the dedicated Slope-Switch button on the side of the device.
- Slide the switch to the desired position (on/off). When activated, the compensated distance will be displayed alongside the

actual distance.

PinSeeker with Visual JOLT

This feature helps you easily acquire the flagstick without inadvertently getting distances to background targets. When the PinSeeker detects the flag, the device will vibrate (JOLT) and a red ring will flash in the display, confirming target acquisition.

Bushnell Golf App Connectivity

Enhance your experience by connecting your rangefinder to the Bushnell Golf App. The app provides detailed hole layouts, 3D flyovers, and allows for wireless course updates. Refer to the app's instructions for pairing and feature utilization.



Figure 4: The Bushnell Golf App provides additional course information and 3D flyovers.

MAINTENANCE

Cleaning Lenses

Gently blow off any dust or debris from the lenses. Use a soft, clean microfiber cloth to wipe the lenses. Avoid using abrasive

cloths or harsh chemicals, which can scratch the lens coating.

General Care and Storage

Store the rangefinder in its provided carry case when not in use to protect it from dust, moisture, and impacts. Avoid exposing the device to extreme temperatures or direct sunlight for prolonged periods. The device is IPX6 weather-resistant, but it should not be submerged in water.



Figure 5: Always store the rangefinder in its protective case when not in use.

TROUBLESHOOTING

No Display or Intermittent Readings

- Check the battery: Ensure the CR2 battery is correctly installed and has sufficient charge. Replace if necessary.
- Clean the lenses: Dust or smudges on the lenses can obstruct the laser. Clean them as described in the Maintenance section.
- Target reflectivity: Very dark or non-reflective surfaces may be difficult to range. Try aiming at a more reflective target.

Inaccurate Readings

- Ensure stable hold: Steady your hand or use a stable surface for accurate measurements.
- Verify target: Make sure you are ranging the intended target, especially when using PinSeeker.
- Environmental factors: Heavy fog, rain, or extremely bright sunlight can affect performance.

SPECIFICATIONS

Specification	Detail
Brand	Bushnell Golf (Certified Brands)
Model Name	202322 Towel Bundle
Magnification	6x
Measuring Range	Up to 1300 yards
Flag Accuracy	Within 1 yard (up to 500 yards)
Battery Type	CR2 (Included)
Material	Plastic
Item Weight	12 Ounces
Dimensions (LxWxH)	4.75 x 1.7 x 3.25 inches
Water Resistance	IPX6

WARRANTY AND SUPPORT

The Bushnell Golf Tour V6 Shift Laser Rangefinder comes with a **2 Year Limited Warranty**. This warranty covers defects in materials and workmanship under normal use. For warranty claims or technical support, please contact the manufacturer's customer service. Keep your proof of purchase for all warranty-related inquiries.

For further assistance, please visit the official Bushnell Golf website or contact their customer support line. Contact details can typically be found on the product packaging or the brand's official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F412TQK7>

More documents and user manuals: <https://manuals.plus/>