

HP 515

HP 515 Ultra-Fast Rechargeable Wireless Mouse User Manual

Model: 515 (9C2F7AA)

INTRODUCTION

Thank you for choosing the HP 515 Ultra-Fast Rechargeable Wireless Mouse. This manual provides essential information for the proper setup, operation, and maintenance of your device. Please read these instructions carefully before use to ensure optimal performance and longevity of your mouse.

PACKAGE CONTENTS

Verify that all items are present in the package:

- HP 515 Ultra-Fast Rechargeable Wireless Mouse (9C2F7AA)
- USB Dongle
- USB Type-C Cable
- Quick Start Guide (this document)
- Warranty Card

PRODUCT OVERVIEW

Familiarize yourself with the components of your HP 515 Wireless Mouse.



Figure 1: Front view of the HP 515 Wireless Mouse, showing the left and right click buttons, scroll wheel, and USB-C charging port at the front.



Figure 2: Side view of the HP 515 Wireless Mouse, highlighting the ergonomic design and side buttons.



Figure 3: Bottom view of the HP 515 Wireless Mouse, showing the optical sensor, power switch, and USB dongle storage compartment.

1. **Left Click Button:** Standard primary click function.
2. **Right Click Button:** Standard secondary click function.
3. **Scroll Wheel:** Scrolls vertically and horizontally (2D scroll). Can also be pressed for a middle-click function.
4. **Programmable Side Buttons:** Four customizable buttons for enhanced productivity.
5. **USB-C Charging Port:** Located at the front for recharging the mouse.
6. **Optical Sensor:** For multi-surface tracking.
7. **Power Switch:** On/Off switch located on the bottom of the mouse.
8. **USB Dongle Storage:** Compartment on the bottom to store the USB dongle when not in use.

SETUP

1. Charging the Mouse

The HP 515 mouse features an ultra-fast rechargeable supercapacitor. It does not use traditional batteries.

1. Locate the USB Type-C charging port at the front of the mouse.
2. Connect the provided USB Type-C cable to the mouse and the other end to a powered USB-A port on your computer or a USB wall adapter.
3. A full charge provides up to 30 days of use. A quick 3-minute charge can provide sufficient power for extended use.



Figure 4: Top view of the HP 515 Wireless Mouse with the USB-C charging cable connected.

2. Connecting the Mouse

The HP 515 mouse connects wirelessly via a 2.4 GHz USB dongle.

1. Remove the USB dongle from its storage compartment on the bottom of the mouse (refer to Figure 3).
2. Insert the USB dongle into an available USB-A port on your computer.
3. Turn on the mouse using the power switch located on the bottom.
4. Your computer should automatically detect and install the necessary drivers. This may take a few moments.
5. Once installed, the mouse is ready for use.

The HP Unifying Dongle provides a secure and instant connection across various devices and operating systems.

OPERATING THE MOUSE

Basic Functions

- **Left Click:** Select items, open links.
- **Right Click:** Access context menus.
- **Scroll Wheel:** Scroll up/down on pages. Tilt the wheel left/right for horizontal scrolling. Press the wheel for middle-click functions (e.g., opening links in new tabs).

DPI Sensitivity Adjustment

The mouse offers up to 4000 DPI sensitivity for precise control on various surfaces. While the JSON does not specify a dedicated DPI button, DPI settings are typically adjustable through your computer's operating system mouse settings or HP's peripheral software (if available). Refer to your operating system's documentation for specific instructions on adjusting mouse sensitivity.

Programmable Buttons

The HP 515 mouse features four programmable buttons. To customize these buttons, you will typically need to install HP's official peripheral management software for your operating system. This software allows you to assign various functions, macros, or shortcuts to the buttons to enhance your workflow.

- Visit the official HP support website for your mouse model (9C2F7AA).
- Download and install the latest drivers and utility software.
- Follow the on-screen instructions within the software to configure the programmable buttons.

MAINTENANCE

Cleaning

- Ensure the mouse is turned off before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution.
- Avoid using harsh chemicals, abrasive cleaners, or spraying liquids directly onto the mouse.
- Gently wipe the surface of the mouse. For the optical sensor, use a dry cotton swab to carefully remove any dust or debris.

Charging Best Practices

- Charge the mouse using the provided USB Type-C cable or a certified equivalent.
- Avoid exposing the mouse to extreme temperatures during charging or storage.
- While the supercapacitor is designed for fast charging and long life, avoid leaving the mouse plugged in for excessively long periods if not necessary.

TROUBLESHOOTING

Problem	Possible Solution
Mouse not responding	• Ensure the mouse is turned on (power switch on the bottom). • Check if the USB dongle is securely plugged into a working USB-A port on your computer. • Recharge the mouse using the USB Type-C cable. • Try plugging the USB dongle into a different USB port. • Restart your computer.
Cursor movement is erratic or jumpy	• Clean the optical sensor on the bottom of the mouse. • Ensure you are using the mouse on a clean, non-reflective, and uniform surface. The mouse supports multi-surface tracking, but extreme surfaces may still cause issues. • Check for wireless interference. Move the mouse closer to the USB dongle or away from other wireless devices.

Problem	Possible Solution
Mouse disconnects frequently	• Ensure the mouse is within the wireless operating distance (up to 32.81 ft / 10 meters). • Check for low power; recharge the mouse. • Minimize obstructions between the mouse and the USB dongle. • Update your computer's USB drivers.
Programmable buttons not working	• Ensure you have installed the latest HP peripheral management software. • Verify that the buttons are correctly configured within the software. • Restart the software or your computer.

SPECIFICATIONS

Feature	Detail
Model Name	HP 515 Ultra-Fast Rechargeable Wireless Mouse (9C2F7AA)
Connectivity Technology	Wireless (Radio Frequency)
Wireless Operating Frequency	2.40 GHz
Wireless Operating Distance	Up to 32.81 ft (10 meters)
Movement Detection	Multi Surface Optical Sensor
Maximum Sensitivity (DPI)	4000 DPI
Number of Buttons	5 (including 4 programmable buttons)
Hand Orientation	Ambidextrous
Power Source	Rechargeable Supercapacitor
Battery Life (from 3 min charge)	Up to 30 days
Charging Port	USB Type-C
Compatible Operating Systems	Windows 10, Windows 11, macOS, ChromeOS
Dimensions (L x W)	5.3" x 4.3" (approximate)
Weight	110 Grams
Materials	At least 70% post-consumer recycled materials

WARRANTY INFORMATION

This product comes with a limited warranty provided by HP. Please refer to the included Warranty Card in your package for specific terms, conditions, and duration of the warranty applicable to your region. Keep your proof of purchase for warranty claims.

For detailed warranty information and registration, visit the official HP support website: www.hp.com/support

SUPPORT

If you encounter issues not covered in the troubleshooting section or require further assistance, please contact HP Customer Support.

- **Online Support:** Visit www.hp.com/support for drivers, software, and FAQs.
- **Contact Information:** Refer to the HP support website for regional phone numbers and contact options.

When contacting support, please have your product model (HP 515) and serial number (if applicable) ready.

© 2024 HP Development Company, L.P. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

