

[manuals.plus](#) /› [MONODEAL](#) /› [MONODEAL T23 3-Speed Turntable with Bluetooth Transmitter User Manual](#)

## MONODEAL T23

# MONODEAL T23 3-Speed Turntable User Manual

Model: T23

## 1. INTRODUCTION

Thank you for purchasing the MONODEAL T23 3-Speed Turntable. This manual provides essential information for the safe and correct operation of your device. Please read it thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Do not open the cabinet. Refer servicing to qualified personnel only.
- Ensure the power adapter matches your local power supply.
- Place the unit on a stable, level surface away from direct sunlight, heat sources, and excessive dust or vibration.
- Keep out of reach of children.


## 3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x MONODEAL T23 Record Player
- 1 x 5V 1.5A Power Cord
- 1 x User Manual (this document)

## 4. PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your MONODEAL T23 Turntable.

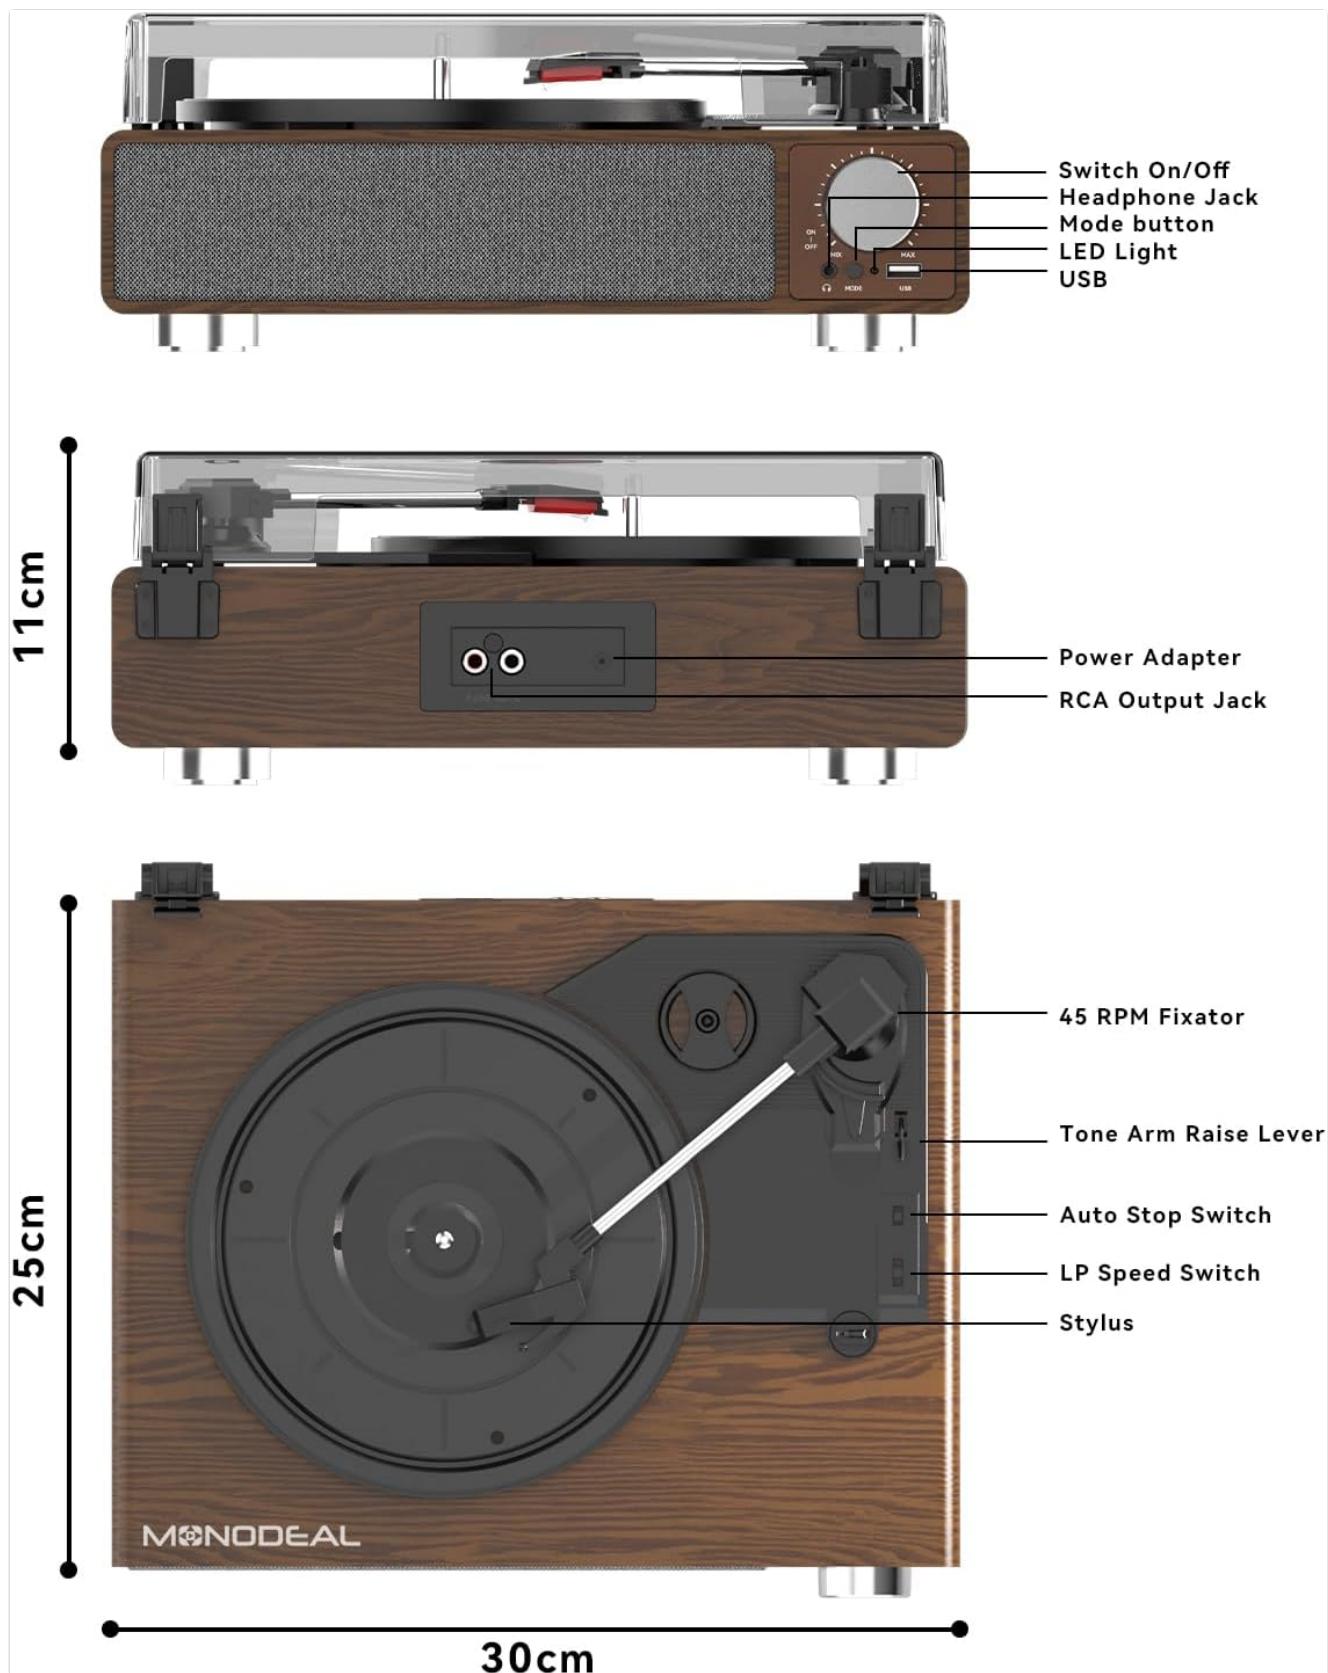

**Figure 4.1:** Top and Rear View of the MONODEAL T23 Turntable with labeled components including Power Switch, Headphone Jack, Mode button, LED Light, USB Port, Power Adapter Input, RCA Output Jacks, 45 RPM Fixator, Tone Arm Raise Lever, Auto Stop Switch, LP Speed Switch, and Stylus.

- **Power Switch/Volume Knob:** Turns the unit on/off and adjusts volume.
- **Headphone Jack:** For private listening with headphones.
- **Mode Button:** Switches between different input modes (e.g., Phono, Bluetooth, USB).
- **LED Light:** Indicates power and mode status.
- **USB Port:** For USB playback.

- **Power Adapter Input:** Connects to the provided 5V 1.5A power cord.
- **RCA Output Jacks (L/R):** Connects to external amplifier or powered speakers.
- **45 RPM Fixator:** Adapter for 7-inch records with large center holes.
- **Tone Arm Raise Lever:** Lifts and lowers the tone arm gently.
- **Auto Stop Switch:** Enables or disables the auto-stop function.
- **LP Speed Switch:** Selects playback speed (33, 45, or 78 RPM).
- **Stylus:** The needle that reads the grooves of the record.

## 5. SETUP

1. **Unpacking:** Carefully remove the turntable from its packaging. Retain the packaging for future transport or storage.
2. **Placement:** Place the turntable on a stable, level surface. Ensure there is adequate ventilation around the unit.
3. **Power Connection:** Connect the provided 5V 1.5A power cord to the DC IN port on the back of the turntable and then plug it into a wall outlet.
4. **Dust Cover:** The transparent dust cover can be opened or closed to protect the platter and stylus when not in use.

## 6. OPERATING INSTRUCTIONS

### 6.1 Playing Vinyl Records

# ***Three speed & Three size record player***

Speeds (33-1/3, 45 and 78 RPM) and playback of three record sizes (7", 10" and 12").



**Figure 6.1:** The MONODEAL T23 Turntable supports 3 speeds and 3 record sizes.

1. Turn the Power Switch/Volume Knob clockwise to turn on the unit.
2. Lift the dust cover.
3. Place a vinyl record on the turntable platter. If playing a 7-inch record with a large center hole, place the 45 RPM fixator on the spindle first.
4. Select the appropriate speed (33, 45, or 78 RPM) using the LP Speed Switch, matching the record you are playing.
5. Push the Tone Arm Raise Lever up to lift the tone arm.

6. Manually move the tone arm over the desired starting track of the record.
7. Push the Tone Arm Raise Lever down to gently lower the tone arm onto the record. Playback will begin.
8. Adjust the volume using the Power Switch/Volume Knob.
9. **Auto Stop Function:** If the Auto Stop Switch is set to ON, the turntable will automatically stop rotating when the record finishes playing. If set to OFF, it will continue to rotate.
10. To stop playback, lift the tone arm using the lever and return it to the tone arm rest. Turn the Power Switch/Volume Knob counter-clockwise to turn off the unit.

## 6.2 Bluetooth Transmission (BT OUT)

This feature allows you to stream audio from the turntable to external Bluetooth speakers or headphones.



## **Exclusive Bluetooth transmission**

Our unique Bluetooth transmitter lets you stream your favorite records to any Bluetooth speaker or headphones.



## **Bluetooth reception**

Connect to cell phones, computers, tablets

**Figure 6.2:** Bluetooth transmission from the turntable to external devices.

1. Ensure the turntable is powered on and in Phono mode (playing a record).
2. Press and hold the Mode button until the LED indicator flashes blue, indicating Bluetooth transmission pairing mode.
3. Place your Bluetooth speaker or headphones in pairing mode.
4. The turntable will automatically search for and connect to the nearest Bluetooth device. Once connected, the LED indicator will turn solid blue.
5. Audio from the record will now play through your connected Bluetooth device.

### 6.3 Bluetooth Reception (BT IN)

This feature allows you to stream audio from your mobile device (phone, tablet) to the turntable's built-in speakers.



Figure 6.3: Bluetooth reception by the turntable from a smartphone.

1. Turn on the turntable.
2. Press the Mode button repeatedly until the LED indicator flashes blue, indicating Bluetooth reception pairing mode.
3. On your mobile device, enable Bluetooth and search for available devices. Select "MONODEAL T23" from the

list.

4. Once connected, the LED indicator will turn solid blue.
5. Play audio on your mobile device, and it will sound through the turntable's speakers. Adjust volume using the turntable's volume knob or your mobile device.

## 6.4 USB Playback

The turntable supports playing audio files from a USB flash drive.

1. Insert a USB flash drive into the USB port on the front of the turntable.
2. Press the Mode button to switch to USB mode. The LED indicator will change to reflect USB mode.
3. The turntable will automatically begin playing audio files from the USB drive. Use the control buttons (if available, or refer to the specific model's USB control instructions) to navigate tracks.

## 6.5 RCA Output

Connect the turntable to an external amplifier or powered speakers for enhanced sound.

# RCA Jacks & Headphone 3.5mm Jack

Forrest Gump Soundtrack



Hook up external speakers with wirer to get louder sound.



For enjoying your private time without outer bothering.

Figure 6.4: RCA output for external speakers and headphone jack for private listening.

1. Ensure the turntable and your external audio system are turned off.
2. Connect an RCA cable (not included) to the RCA Output Jacks (L/R) on the back of the turntable.
3. Connect the other end of the RCA cable to the corresponding audio input on your amplifier or powered speakers.
4. Turn on both the turntable and your external audio system.
5. Play a record as described in Section 6.1. Audio will be routed through your external system. Adjust volume on both devices as needed.

## 6.6 Headphone Jack

For private listening, connect headphones to the 3.5mm headphone jack on the front of the unit.

1. Plug your 3.5mm headphones into the Headphone Jack.
2. Adjust the volume using the Power Switch/Volume Knob.

## 7. MAINTENANCE

### 7.1 Cleaning the Turntable

- Wipe the exterior of the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Keep the dust cover closed when not in use to prevent dust accumulation.

### 7.2 Stylus Care

- Handle the stylus with extreme care. Avoid touching the stylus tip with your fingers.
- Clean the stylus periodically using a soft brush, brushing gently from back to front.
- A worn stylus can damage records and degrade sound quality. Replace the stylus when signs of wear appear (e.g., distorted sound, skipping).

### 7.3 Record Care

- Always hold records by their edges or center label.
- Store records vertically in their sleeves in a cool, dry place.
- Clean records regularly with a dedicated record cleaning brush or solution to remove dust and static.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not working; Unit not turned on.	Ensure power cord is securely connected; Try a different outlet; Turn the Power Switch/Volume Knob clockwise.
No sound from built-in speakers	Volume too low; RCA output connected; Bluetooth transmission active.	Increase volume; Disconnect RCA cables if not using external speakers; Ensure Bluetooth transmission is off if you want sound from built-in speakers.
Sound distorted or skipping	Record dirty or damaged; Stylus dirty or worn; Turntable not level; Excessive vibration.	Clean record; Clean or replace stylus; Place turntable on a stable, level surface; Ensure turntable is away from sources of vibration.
Bluetooth pairing fails	Device too far; Device not in pairing mode; Interference.	Move devices closer; Ensure both devices are in pairing mode; Turn off other Bluetooth devices nearby.
Auto stop not working	Auto Stop Switch is OFF.	Set the Auto Stop Switch to ON. Note: Some records may stop prematurely or not at all due to variations in groove patterns.

## 9. SPECIFICATIONS


Feature	Specification
Model Name	T23
Brand	MONODEAL
Product Dimensions	11.81 x 9.84 x 4.31 inches (30 x 25 x 11 cm)
Item Weight	5.77 pounds (2.62 kg)
Material	Wood
Playback Speeds	33-1/3, 45, 78 RPM
Record Sizes Supported	7", 10", 12"
Connectivity	Bluetooth (Reception & Transmission), USB, RCA Output, Headphone Jack
Power Source	Corded Electric (5V 1.5A)
Special Features	Built-in Stereo Speakers, Auto Stop, Belt-Drive System



## 10. WARRANTY AND SUPPORT

MONODEAL products are designed and manufactured to the highest quality standards. For warranty information and technical support, please refer to the warranty card included with your purchase or visit the official MONODEAL website. Please have your model number (T23) and purchase date available when contacting support.

© 2025 MONODEAL. All rights reserved.

### Related Documents - T23

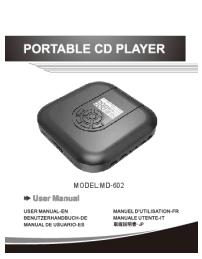	<p><a href="#">Portable CD Player MD-602 User Manual</a></p> <p>User manual for the MD-602 Portable CD Player, covering setup, operation, troubleshooting, and safety instructions in multiple languages.</p>
	<p><a href="#">MONODEAL MD-706 Portable CD Player User Manual</a></p> <p>Explore the MONODEAL MD-706 portable CD player with this user manual. Learn about its features, Bluetooth connectivity, USB playback, FM radio, AUX input, BT TX function, and troubleshooting tips for a complete audio experience.</p>

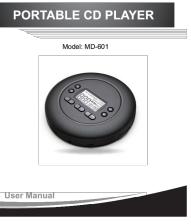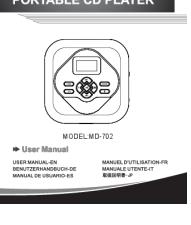
 <p><b>PORTABLE CD PLAYER</b> Model: MD-601</p> <p>User Manual</p>	<p><a href="#"><u>MonoDeal MD-601 Portable CD Player User Manual</u></a></p> <p>User manual for the MonoDeal MD-601 portable CD player, detailing safety, operation, features, and troubleshooting for this audio device.</p>
 <p><b>PORTABLE CD PLAYER</b> MODEL:MD-702</p> <p>User Manual USERINSTRUCTIONS BENUTZERINSTRUCTIONS MANUAL DE USUARIO MANUEL D'UTILISATION</p>	<p><a href="#"><u>MONODEAL Portable CD Player User Manual - Model MD-702</u></a></p> <p>User manual for the MONODEAL Portable CD Player (Model MD-702), providing safety instructions, operating procedures, troubleshooting tips, and feature explanations for this consumer electronic device.</p>
<p><b>CD Player Manual</b> Monodeal CW604-FM</p>  <p>www.monodeal.net</p>	<p><a href="#"><u>Monodeal CW604-FM CD Player User Manual</u></a></p> <p>This manual provides detailed instructions for operating the Monodeal CW604-FM CD Player, including function descriptions, FM transmitter usage, FAQs, and specifications. Learn how to play CDs, use the FM transmitter, and troubleshoot common issues.</p>
 <p>Topvision T23 Doorbell Camera User Manual User Manual 2.0</p>	<p><a href="#"><u>Topvision T23 Doorbell Camera User Manual</u></a></p> <p>Comprehensive user manual for the Topvision T23 Doorbell Camera, covering features, setup, installation, troubleshooting, and FCC compliance.</p>

## Documents - MONODEAL – T23



### [\[pdf\] User Manual](#)

Processes Library User Manual Deltires Technical Reference 1 Introduction This part of the D Water Quality manual is called It con tains an overview state variables content oss deltires nl dhydro ||| DRAFT Simulation packages for rivers, estuaries and seas D-HYDRO Suite Dutch Delta Systems D-Water ... e above equations for cascade i . Name in formulas C1 C2 C3 C4 C5 d1 d2 d3 d4 d5 t12 t13 t14 t15 **t23** t24 t25 t34 t35 Name in input Definition Units cascade1 cascade2 cascade3 cascade4 cascade5 ...  
lang:en **score:14** filesize: 11.1 M page\_count: 592 document date: 2025-08-05

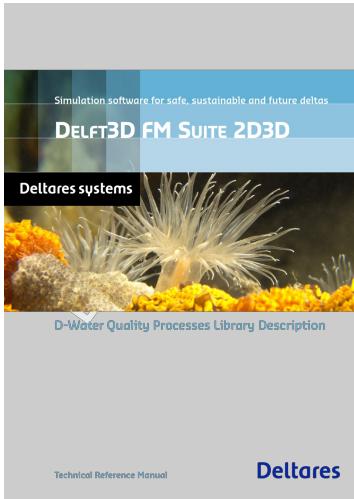

### [\[pdf\] User Manual](#)

Processes Library User Manual Deltires Technical Reference D Water Quality content oss deltires nl delft3d |||

DRAFT Simulation software for safe, sustainable and future deltas Delft3D FM Suite 2D3D D-Water Qua ... e above equations for cascade i . Name in formulas C1 C2 C3 C4 C5 d1 d2 d3 d4 d5 t12 t13 t14 t15 **t23** t24 t25 t34 t35 Name in input Definition Units cascade1 cascade2 cascade3 cascade4 cascade5 ...

lang:en **score:13** filesize: 10.84 M page\_count: 589 document date: 2025-01-28




### [\[pdf\] User Manual](#)

Processes Library User Manual Deltires Technical Reference Description 515 pages — DELFT3D FLEXIBLE MESH SUITE 1D 2D 3D Modelling suite for integral water solutions D Water Quality content oss deltires nl delft3d manuals 80 Published and printed by described in Open |||

DRAFT 1D/2D/3D Modelling suite for integral water solutions Delft3D Flexible Mesh Suite D-Water Qua ... e above equations for cascade i . Name in formulas C1 C2 C3 C4 C5 d1 d2 d3 d4 d5 t12 t13 t14 t15 **t23** t24 t25 t34 t35 Name in input cascade1 cascade2 cascade3 cascade4 cascade5 decay1 decay2 decay3...

lang:en **score:11** filesize: 9.52 M page\_count: 515 document date: 2021-04-11

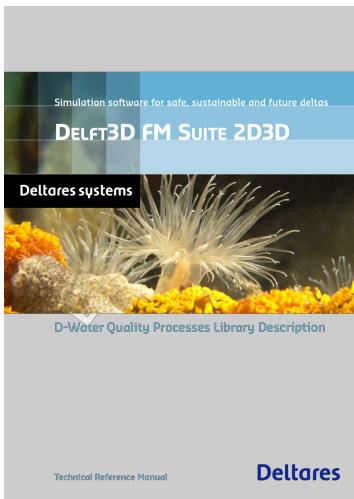

### [\[pdf\] User Manual](#)

Processes Library User Manual Deltires Technical Reference gO2 m -3 fsat percentage of saturation % H depth the water column Smart 1981 Scheffer 1998 Emerged sections macrophytes can D Water Quality content oss deltires nl delft3dfm2d3d |||

DRAFT Simulation software for safe, sustainable and future deltas Delft3D FM Suite 2D3D D-Water Qua ... e above equations for cascade i . Name in formulas C1 C2 C3 C4 C5 d1 d2 d3 d4 d5 t12 t13 t14 t15 **t23** t24 t25 t34 t35 Name in input Definition Units cascade1 cascade2 cascade3 cascade4 cascade5 ...

lang:en **score:10** filesize: 10.82 M page\_count: 589 document date: 2025-05-28