



Manuals.plus /

› XFHDHR /

› XFHDHR 3L Rice Cooker Inner Pot Replacement Manual for Panasonic SR-TMH10 Series

XFHDHR deng17546yapin

XFHDHR 3L Rice Cooker Inner Pot Replacement Manual

INTRODUCTION

This manual provides instructions for the XFHDHR 3L replacement inner pot, designed for specific Panasonic rice cooker models. This inner pot is a replacement component and requires an existing compatible rice cooker for operation.



Image: The XFHDHR 3L inner pot, held by a hand, showcasing its durable exterior and textured bottom design.

KEY FEATURES

- Food grade coating, designed for wear resistance and durability.
- Promotes even heating of ingredients to prevent undercooked rice.
- Facilitates easy cooking and simplifies the cleaning process.
- Smooth, non-stick inner surface for easy cleaning and reduced food residue.
- Engineered for preparing well-cooked, sweet-tasting rice.
- Features a thick bottom and exquisite design with a non-stick coating.

COMPATIBILITY

This inner pot is specifically designed as a replacement part and is compatible with the following Panasonic rice cooker models:

- Panasonic SR-TMH10
- Panasonic SR-TE10N

- Panasonic SR-TMA10N
- Panasonic SR-TMG10
- Panasonic SR-TF10N

Please verify your rice cooker's model number to ensure proper fit and function.

SETUP

Unpacking

Carefully remove the inner pot from its packaging. Inspect the pot for any signs of damage or manufacturing defects before first use.

Initial Cleaning

Before using the inner pot for the first time, wash it thoroughly with warm, soapy water. Use a soft sponge or cloth. Rinse completely under running water to remove all soap residue and dry it thoroughly with a clean towel.

Installation

Place the clean and dry inner pot into the main body of your compatible Panasonic rice cooker. Ensure the pot sits securely and flat within the heating element, making full contact with the base. Do not force the pot into place.

OPERATING INSTRUCTIONS

This inner pot functions as the cooking vessel within your rice cooker. For specific cooking procedures, water ratios, and settings, always refer to your original Panasonic rice cooker's instruction manual.

General Use

1. **Measure Ingredients:** Add the desired amount of rice and water to the inner pot according to your rice cooker's guidelines.
2. **Place in Cooker:** Carefully insert the inner pot into the rice cooker body, ensuring it is properly seated.
3. **Close Lid:** Securely close the rice cooker lid.
4. **Start Cooking:** Select the appropriate cooking program on your rice cooker and initiate the cooking cycle.
5. **Serving:** Once cooking is complete, use a plastic or wooden rice spoon to serve. Avoid using metal utensils that could scratch or damage the non-stick coating of the inner pot.

CARE AND MAINTENANCE

Cleaning

- After each use, allow the inner pot to cool down completely before cleaning.
- Wash the inner pot with warm water and a soft sponge or cloth. A mild dish soap can be used if necessary.
- **Important:** Do not use abrasive cleaners, scouring pads, steel wool, or metal brushes, as these will damage the non-stick coating.
- Rinse the pot thoroughly to remove all soap residue and dry it completely with a clean, soft towel before storing.

Storage

Store the inner pot in a dry place. Avoid stacking heavy objects inside or on top of the pot to prevent deformation or damage to the non-stick coating.

TROUBLESHOOTING

This inner pot is a passive component of your rice cooker. Most operational issues will typically relate to the main rice cooker unit rather than the inner pot itself. However, here are some common observations and general advice:

- **Rice Sticks to Bottom:** Ensure you are using the correct water-to-rice ratio as specified in your main rice cooker manual. If the issue persists, consult your main rice cooker manual for cooking adjustments or consider the age and condition of your rice cooker's heating element.
- **Uneven Cooking:** Verify that the inner pot is seated correctly and making full contact with the heating element. Ensure the heating element of the rice cooker is clean and functional.
- **Damage to Coating:** To prevent damage, always use non-metal utensils (plastic, wood, silicone). If the non-stick coating is significantly scratched or peeling, it is recommended to replace the inner pot to maintain food safety and cooking performance.

SPECIFICATIONS

Product Specifications

Brand	XFHDHR
Model Name	deng17546yapin
Capacity	3 Liters (implied from title)
Item Weight	50 Grams
Color	One Color (typically dark grey/black non-stick)
Unit Count	1.0 Count



Image: Side profile of the inner pot, showing its height measurement with a tape measure.



Image: Top view of the inner pot, displaying its diameter measurement with a tape measure.

WARRANTY AND SUPPORT

For warranty information regarding this XFHDHR replacement inner pot, please refer to the seller's policy on the platform where it was purchased or contact the seller directly for assistance.

For operational issues or technical support related to your Panasonic rice cooker unit, please consult the original rice cooker manual or contact Panasonic customer support directly.