

[manuals.plus](#) /

› [TecTake](#) /

› [tectake® Almchalet Party Tent User Manual](#)

TecTake 801493

tectake® Almchalet Party Tent User Manual

Model: 801493

INTRODUCTION

The tectake® Almchalet Party Tent is designed to provide a versatile and elegant outdoor shelter, perfect for various occasions from garden parties to outdoor events. Its robust construction and thoughtful design ensure durability and ease of use, adapting to different weather conditions.

This manual provides essential information for the safe and effective assembly, operation, and maintenance of your Almchalet Party Tent. Please read it thoroughly before use.



Figure 1: Overview of the tectake® Almchalet Party Tent and its components.

SAFETY WARNINGS

Caution: Adhering to these safety guidelines is crucial for preventing injury and damage to the tent.

- Always place the tent on a **firm and flat surface**. Uneven ground can compromise stability.
- Use all provided **pegs and tension ropes** to securely anchor the tent. Proper anchoring is essential, especially in outdoor environments.
- Observe **wind conditions**. Do not erect or use the tent in **strong winds**. High winds can cause the tent to collapse or become airborne, leading to severe damage or injury.
- Keep **open flames and hot objects** away from the tent tarpaulin. The material may be flammable or susceptible to melting.
- Do not use the tent as a permanent structure. It is designed for temporary outdoor use.
- Ensure adequate ventilation if using heating or cooking appliances inside the tent, and never leave them

unattended.

COMPONENTS LIST

Before beginning assembly, ensure all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

Component	Quantity	Description
Pavilion Roof Tarp	1	Main waterproof cover for the tent structure.
Removable Side Walls	6	Panels that attach to the sides, offering flexibility for open or enclosed space.
Tension Ropes (Guy Ropes)	6	Used for securing the tent to the ground, enhancing stability.
Pegs	12	Ground anchors for the tension ropes and tent feet.
Frame Poles	Varies	Powder-coated steel poles forming the tent's structural frame.
Connectors	Varies	Plastic or metal connectors for assembling the frame.
User Manual	1	This instruction guide.

SETUP AND ASSEMBLY

The Almchalet Party Tent features a simple click system for quick and easy assembly without the need for additional tools. It is recommended that at least two people assist with the setup.

- Prepare the Area:** Choose a firm, flat, and clear surface for the tent. Ensure there are no overhead obstructions or sharp objects on the ground.
- Assemble the Frame:** Unpack all frame poles and connectors. Connect the poles according to the diagram (refer to the image below for typical connection points), ensuring each connection clicks securely into place. Start with the base frame, then erect the vertical poles, and finally assemble the roof frame.
- Attach the Roof Tarp:** Carefully drape the roof tarp over the assembled roof frame. Ensure it is centered and covers the entire frame. Secure the tarp to the frame as indicated by its design (e.g., ties, velcro straps).
- Install Side Panels (Optional):** If desired, attach the 6 removable side panels. These panels typically attach with Velcro fasteners along the top and sides of the frame. They can be rolled up and secured with Velcro straps or completely removed for maximum flexibility.
- Anchor the Tent:** Once the frame and roof are in place, secure the tent to the ground. Attach the 6 tension ropes to the designated points on the tent frame (usually at the corners or mid-points of the long sides). Drive the 12 pegs firmly into the ground through the tent's foot elements and to secure the tension ropes. Ensure the ropes are taut to provide maximum stability.



Het **praktische insteeksysteem** zorgt voor zeer snelle montage van de robuuste stalen buisconstructie.

De **grote zijdelen** kunnen met klittenband snel & veilig aan het frame worden bevestigd.



De **robuste polyethyleen zeilen** zijn waterdicht & beschermen tegen UV-straling.



De **meegeleverde haringen** zorgen voor een betrouwbare verankering en uitstekende stabiliteit.

Figure 2: Details of the tent's assembly features, including the plug-in system and anchoring points.

OPERATING INSTRUCTIONS

The Almchalet Party Tent is designed for versatile use in various outdoor settings.

- **Adjusting Side Panels:** The 6 removable side panels offer flexibility. They can be:
 - **Fully Closed:** For maximum protection from wind, rain, or sun.
 - **Rolled Up:** Partially or fully roll up panels and secure them with the integrated Velcro straps to create open entrances or allow for airflow.
 - **Completely Removed:** Detach panels entirely for an open pavilion feel, ideal for warm, calm days.
- **Weather Protection:** The robust plastic tarpaulins are waterproof and UV-resistant, providing protection from rain and harmful sun rays. However, always adhere to safety warnings regarding strong winds.
- **Usage Scenarios:** This tent is suitable for garden parties, family gatherings, outdoor events, temporary shelters, or as an "après-ski" style tent for themed events.

VOOR UNIEKE Momenten

Of het nu gaat om een gezellig barbecuefeest, een groot familiefeest of een verjaardagsfeestje met Oktoberfest-sfeer: dit paviljoen is de ideale keuze!



Figure 3: The Almchalet Party Tent provides a comfortable space for social events.

MAINTENANCE

Proper maintenance will extend the lifespan of your Almchalet Party Tent.

- **Cleaning:** Clean the tarpaulins and frame with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material or coating. Rinse thoroughly and allow to air dry completely before storage.
- **Drying:** Always ensure the tent, including the roof tarp and side panels, is completely dry before packing away. Storing a damp tent can lead to mold, mildew, and material degradation.
- **Storage:** Store the tent in a cool, dry place, away from direct sunlight and extreme temperatures. Keep all components organized in their original packaging or suitable storage bags to prevent loss or damage.
- **Inspection:** Periodically inspect the frame for any signs of rust or damage. Check the tarpaulins for tears, holes, or weakened areas. Inspect ropes and pegs for wear and tear. Replace any damaged components promptly.

TROUBLESHOOTING

Here are some common issues and their potential solutions:

Problem	Possible Cause	Solution
Tent is unstable or wobbly.	Improper anchoring; uneven ground; loose frame connections; strong winds.	Ensure all pegs are firmly driven into the ground and tension ropes are taut. Verify the tent is on a flat surface. Check all frame connections for secure clicks. Do not use in strong winds.
Water pooling on the roof.	Improper roof tarp tension; frame not fully extended or assembled correctly.	Ensure the roof tarp is stretched tightly and evenly over the frame. Recheck frame assembly to ensure all poles are fully connected and extended.
Side panels do not fit correctly.	Panels are misaligned or not fully attached.	Ensure panels are aligned with the correct frame sections and all Velcro fasteners are securely attached.
Difficulty disassembling the frame.	Connections are tight.	Apply gentle, even pressure to release the click mechanisms. Avoid forcing connections. A small amount of silicone spray can help if connections are consistently stiff.

SPECIFICATIONS

Detailed technical specifications for the tectake® Almchalet Party Tent (6-meter model):

Attribute	Detail
Overall Dimensions (L x W x H)	Approx. 600 cm x 300 cm x 250 cm (6m x 3m x 2.5m)
Passage Height	Approx. 190 cm
Tarpaulin Thickness	Approx. 110 g/m ²
Approximate Weight	13.1 kg
Frame Material	Powder-coated steel
Tarpaulin Material	Polyethylene (PE)
Connector Material	Polypropylene (PP)
Water Resistance	Waterproof tarpaulin
UV Protection	Yes
Model Number	801493

AFMETINGEN

Totale afmetingen

600 x 300 x 250 cm

Doorgangshoogte

190 cm

TECHNISCHE DETAILS

Dikte van het zeil 110 g/m²

Gewicht ca. 18 kg

Materiaal gepoedercoat staal,
polyethyleen, polypropyleen

INHOUD

Paviljoenframe

Dakzeil

6 zijdelen

6 scheerlijnen

12 haringen

Handleiding

Afmetingen zijn bij benadering



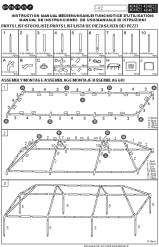
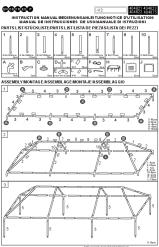
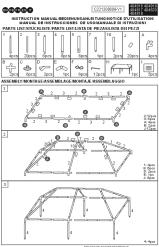
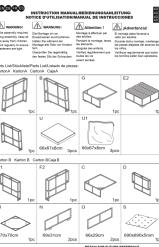
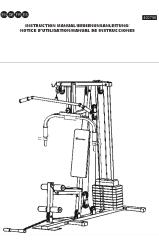
Figure 4: Visual representation of product dimensions and specifications.

WARRANTY AND SUPPORT

Specific warranty information for the tectake® Almchalet Party Tent is not provided in this manual. For warranty claims, technical support, or to inquire about replacement parts, please contact your retailer or the manufacturer directly using the contact information provided at the point of purchase or on the product packaging.

Always refer to the official tectake website or your purchase documentation for the most up-to-date warranty terms and customer service contact details.

Related Documents - 801493

	<p>tectake Gazebo Instruction Manual - Assembly Guide</p> <p>Comprehensive instruction manual for assembling and maintaining your tectake gazebo. Includes parts list, step-by-step assembly, location advice, care instructions, and contact information.</p>
	<p>tectake Gazebo Instruction Manual - Assembly and Care Guide</p> <p>Comprehensive instruction manual for the tectake gazebo (models 404821, 404823, 404822, 404875), covering parts list, assembly steps, location selection, cleaning, maintenance, and storage. Includes safety warnings for outdoor use.</p>
	<p>Assembly Instructions for TecTake Tent (Models 404816-404820)</p> <p>Step-by-step assembly guide for TecTake tents, including parts list and assembly diagrams. Covers models 404816, 404817, 404818, 404819, and 404820.</p>
	<p>TecTake Rattan Garden Furniture Assembly Instructions</p> <p>Comprehensive assembly instructions for TecTake rattan garden furniture sets, including a detailed parts list and step-by-step visual guidance. Model numbers: 403696, 403697, 403880, 403881.</p>
	<p>TecTake 402756 Home Gym Assembly and Exercise Guide</p> <p>Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.</p>
	<p>2-in-1 Grass Shear / Hedge Trimmers WIRELESS BATTERY LI-ION 7.2V - User Manual</p> <p>Comprehensive user manual for the 2-in-1 Grass Shear / Hedge Trimmers WIRELESS BATTERY LI-ION 7.2V (Model 401542). Includes technical specifications, intended use, safety warnings, operating instructions, maintenance, and troubleshooting.</p>

