



Manuals.plus /

› **TIMBER RIDGE** /

› TIMBER RIDGE Oversized Folding Camping Chair with Lumbar Support (Model: 844093083058) - Instruction Manual

## TIMBER RIDGE 844093083058

# TIMBER RIDGE Oversized Folding Camping Chair with Lumbar Support

Model: 844093083058

## 1. INTRODUCTION

---

Thank you for choosing the TIMBER RIDGE Oversized Folding Camping Chair. This chair is designed to provide exceptional comfort and durability for various outdoor activities such as camping, tailgating, or relaxing in your backyard. Featuring an adjustable lumbar support, high back, and robust construction, it ensures a comfortable experience. Please read this manual thoroughly before assembly and use to ensure safe and proper operation.

## 2. SAFETY INFORMATION

---

- Always follow the manufacturer's instructions for assembly and use.
- Do not exceed the recommended maximum weight capacity of 500 pounds (approximately 227 kg). Overloading the chair can lead to damage or injury.
- When folding or unfolding the chair, keep fingers and other body parts clear of moving components to prevent pinching or injury.
- Before sitting, ensure the chair is fully open, stable, and placed on a flat, level surface. Uneven surfaces can cause the chair to tip over.
- Do not stand on the chair.
- Keep the chair away from open flames or extreme heat sources.

## 3. SETUP INSTRUCTIONS

---

1. **Unpack the Chair:** Remove the chair from its carrying bag.
2. **Unfold the Chair:** Hold the top of the chair frame and pull the armrests outwards. The chair will begin to unfold.

3. **Lock into Position:** Continue pulling the armrests until the chair's frame is fully extended and locks into place. Ensure all four legs are firmly on the ground and the chair feels stable.
4. **Adjust Lumbar Support (Optional):** Locate the adjustable straps on the back of the chair. Pull the straps to increase or decrease the lumbar support to your desired comfort level.

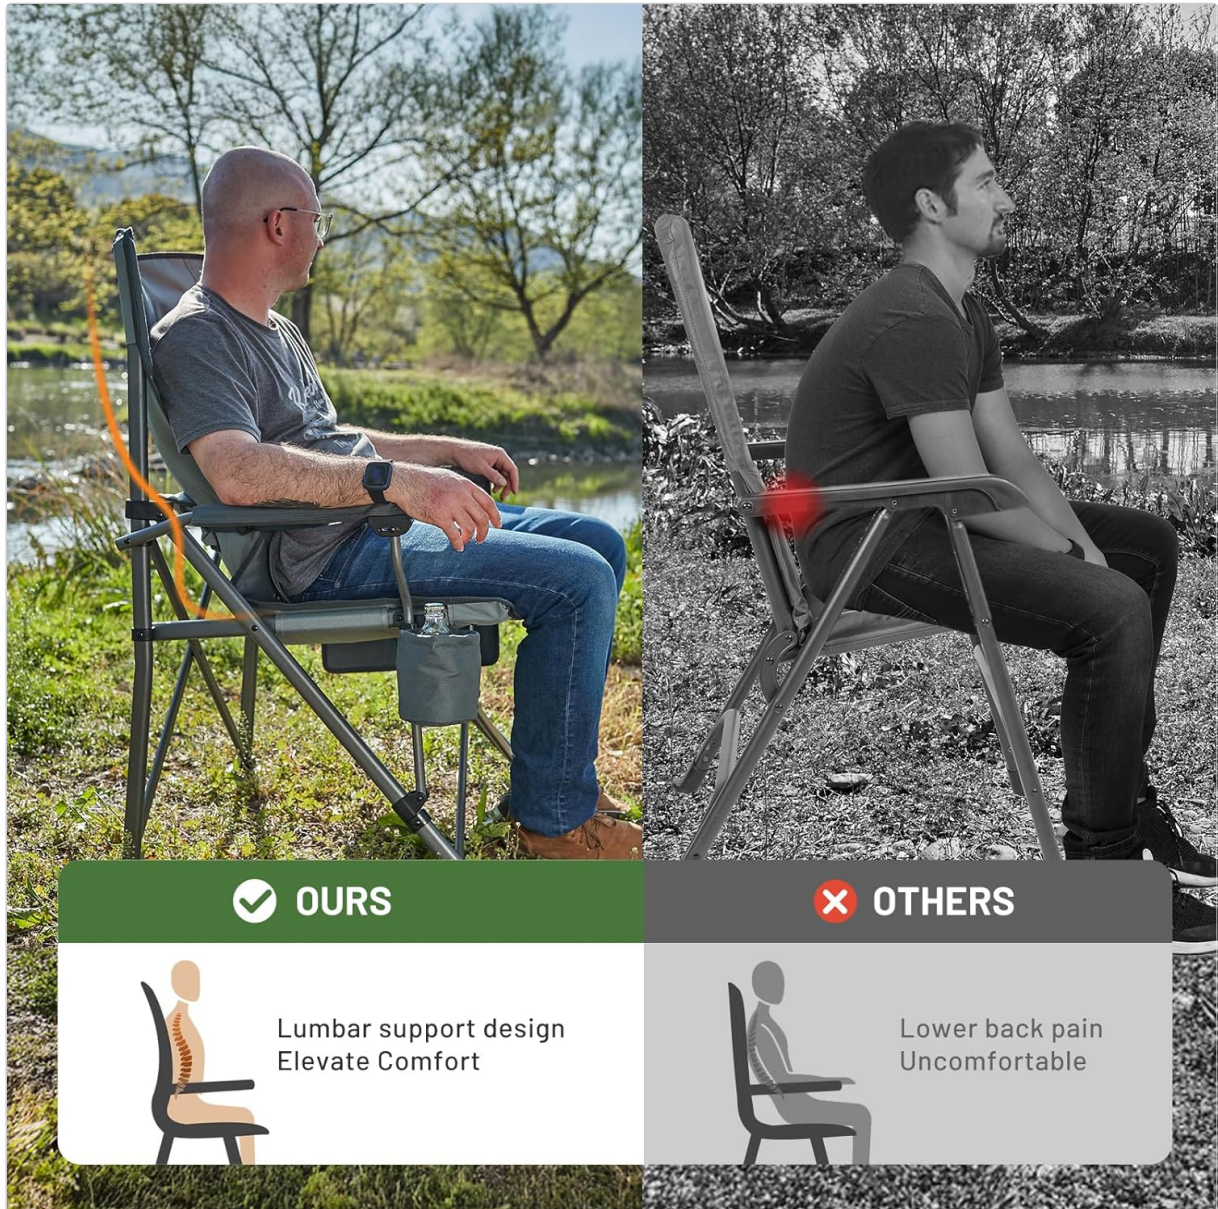


Image 3.1: The TIMBER RIDGE Oversized Folding Camping Chair in its fully unfolded state, ready for use.

# WHY CHOOSE US ?

The cushion is wider, the backrest is taller, and it's more comfortable



Image 3.2: Close-up view of the adjustable lumbar support straps on the back of the chair.

## 4. OPERATING INSTRUCTIONS

---

### 4.1. Lumbar Support Adjustment

The chair features an adjustable lumbar support system. To customize the support, locate the two straps on the back of the chair. Pulling the straps tighter will increase the lumbar support, while loosening them will reduce it. Adjust until you find your preferred level of comfort.

# Suitable for different body types



Image 4.1: Visual comparison illustrating the ergonomic benefits of the integrated lumbar support design.

## 4.2. Using Integrated Features

- **Swiveling Cup Holder:** A convenient cup holder is integrated into one of the armrests. It swivels for easy access and can accommodate various drink sizes.
- **Side Pockets/Cooler Bag:** The chair includes multiple side pockets and a small cooler bag attached to the side. Use these for storing personal items, snacks, or keeping beverages cool.



Image 4.2: Detail view of the swiveling cup holder and the multi-functional side pockets, including a cooler bag section.

## 5. MAINTENANCE

- **Cleaning:** Wipe down the fabric and frame with a damp cloth and mild soap. Rinse thoroughly and allow to air dry completely before folding and storing. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** When not in use, fold the chair and store it in its carrying bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically inspect the chair for any signs of wear, damage, or loose parts. Ensure all bolts and joints are secure. Do not use the chair if it is damaged.

## 6. TROUBLESHOOTING

- **Chair is difficult to unfold/fold:** Ensure no fabric or foreign objects are obstructing the frame's movement. Apply gentle, even pressure. Do not force the mechanism.
- **Chair feels unstable:** Verify that all four legs are fully extended and resting on a flat, level surface. Check for any loose connections in the frame.
- **Lumbar support not effective:** Adjust the straps on the back of the chair. If the straps are fully tightened

and support is still insufficient, inspect the internal mechanism for any damage.

## 7. SPECIFICATIONS



Image 7.1: Detailed dimensions of the TIMBER RIDGE Oversized Folding Camping Chair.

Feature	Specification
Brand	TIMBER RIDGE
Model Number	844093083058
Material	Alloy Steel (Frame)
Color	Gray
Product Dimensions (L x W x H)	48.3 cm x 61 cm x 101.6 cm (19 in x 24 in x 40 in)
Product Weight	34 pounds (approx. 15.4 kg)
Weight Capacity	Up to 500 pounds (approx. 227 kg)
Special Features	Adjustable Lumbar Support, High Back, Swiveling Cup Holder, Side Pockets, Cooler Bag

## **8. WARRANTY AND SUPPORT**

---

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official [TIMBER RIDGE website](#). Keep your purchase receipt for warranty claims.