

[Manuals.plus](#) /

› [TAZATA](#) /

› TAZATA BOOMBLAST PRO Portable Bluetooth Speaker (CAMO-80W RMS/120W Peak) Instruction Manual

TAZATA TAZATA BOOMBLAST PRO

TAZATA BOOMBLAST PRO Portable Bluetooth Speaker Instruction Manual

Model: CAMO-80W RMS/120W Peak

1. SAFETY INFORMATION

Please read all instructions carefully before using this product. Keep this manual for future reference.

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Avoid dropping or subjecting the speaker to strong impacts.
- Keep the speaker away from medical devices.
- Do not attempt to disassemble, repair, or modify the speaker. This will void the warranty.
- Ensure all port covers are securely closed when using the speaker near water to maintain its IPX7 waterproof rating.
- Use only the provided charging cable or a certified USB-C cable for charging.

2. WHAT'S IN THE BOX

Verify that all items are present upon unboxing:

- 1x TAZATA BOOMBLAST PRO Bluetooth Speaker (CAMO)
- 1x Portable Strap
- 1x TAZATA BOOMBLAST PRO Quick Start Manual
- 1x USB-C Charging Cable (charger head not included)



MODE button

Short press MODE to switch AUX, USB, BT.

Long press and hold for 2 seconds to disconnect or reconnect to the last paired device.

After powered on, the light on M will flash means ready to pair.

After paired, the LED will keep lighting on.



Play and Pause

short press music play and pause functions.

Long press and hold for 5 seconds to clear pairing information and restore the default volume with a prompt sound.

It will automatically shut down.

Double press when the phone's Bluetooth is connected: quickly double-click to call back the last call made by the phone.



V-/Prev

Short press: volume down.

Long press: for the previous song, long press in AUX mode will reduce the volume.



V+/Next

Short press: volume up.

Long press: next song, press and hold in AUX mode to increase the volume



Power button

Long press and hold for 2 seconds to power on/off.

Short press to turn on/off broadcasting in powered on mode.

Reset: long press and hold for 10 seconds to reset the speaker if it's crashed (It will shut down).



RGB Light button

Short press: switch RGB lights/switch light effects

Double press: switch EQ.



What is in the box



x1 Speaker



x1 User Manual



x1 A to C cable



x1 USB C to C cable



x1 Shoulder strap

Image: Package contents showing the TAZATA BOOMBLAST PRO speaker, portable strap, quick start manual, and USB-C charging cable.

3. PRODUCT OVERVIEW AND CONTROLS

The TAZATA BOOMBLAST PRO features intuitive controls and robust design for an optimal audio experience.

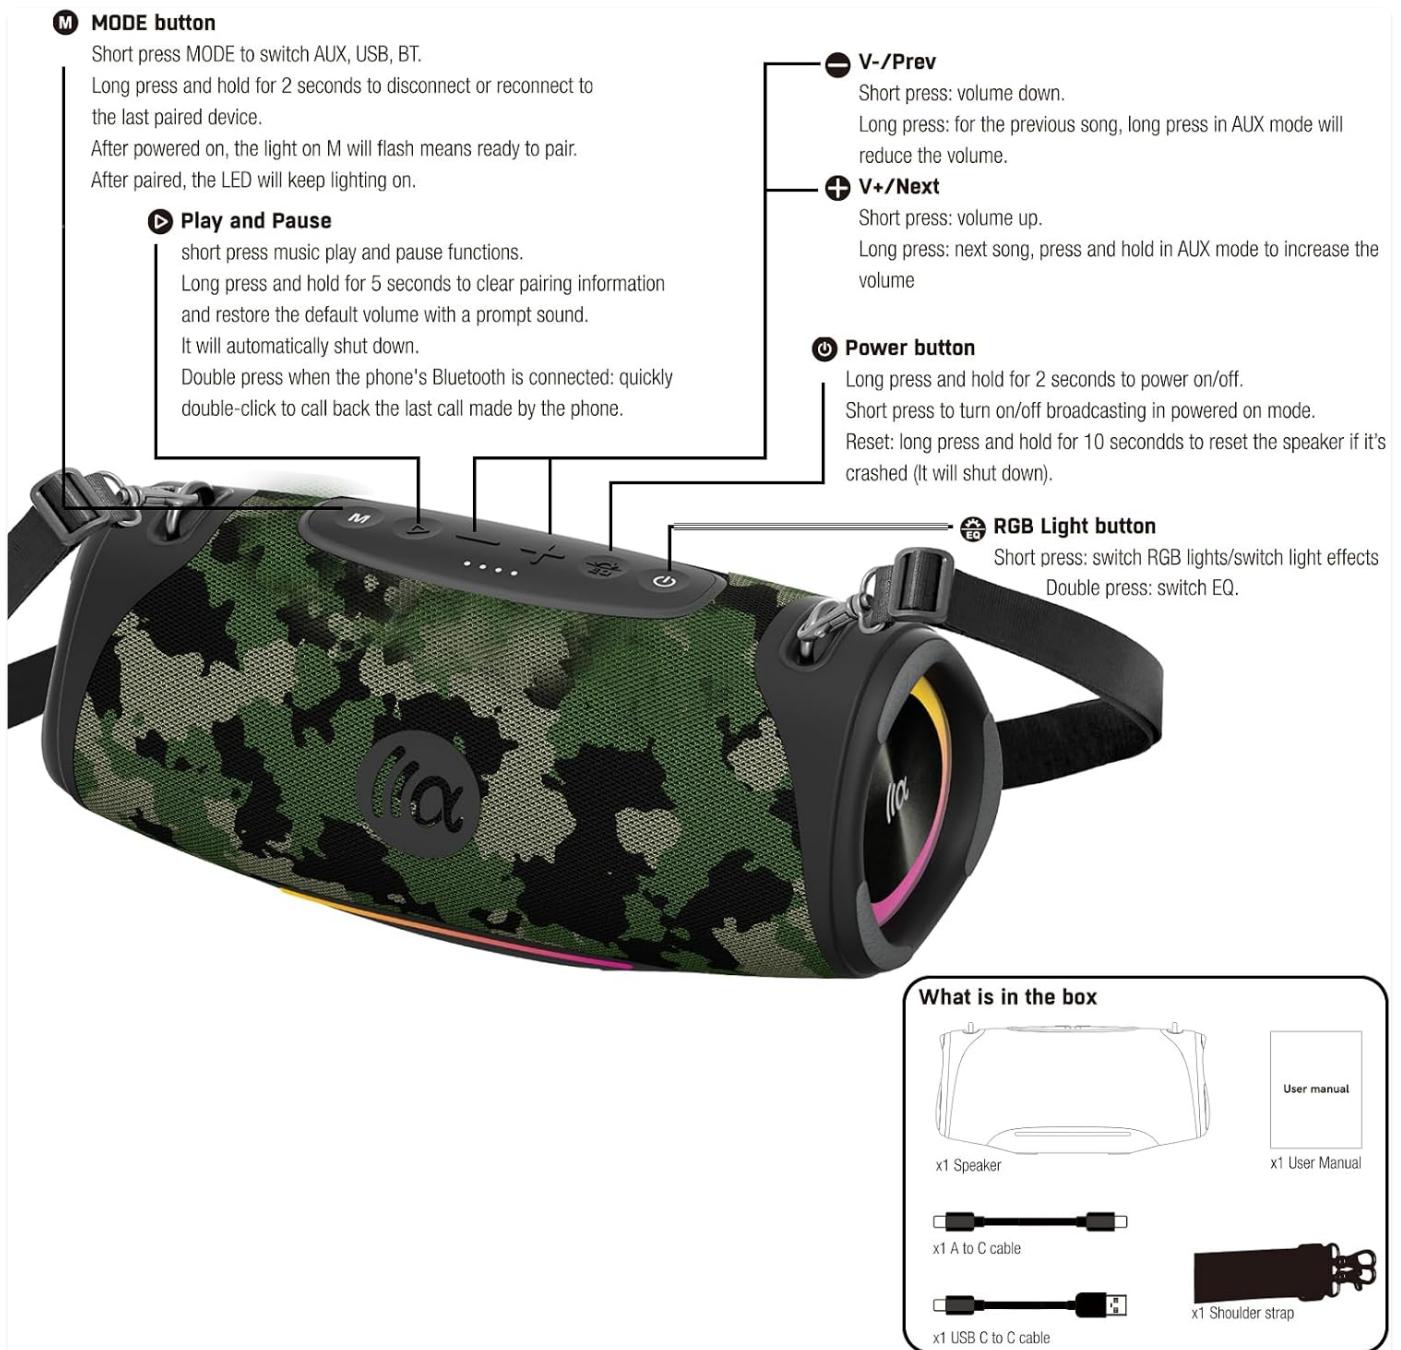


Image: Top panel controls and rear port section of the TAZATA BOOMBLAST PRO speaker.

Top Panel Controls:

- **M (Mode) Button:** Short press to switch between AUX, USB, and Bluetooth modes. Long press and hold for 2 seconds to disconnect or reconnect to the last paired device. After powered on, the LED will flash when ready to pair. After pairing, the LED will keep lighting on.
- **Play/Pause Button:** Short press to play or pause music. Long press and hold for 5 seconds to clear pairing information and restore default volume with a prompt sound. It will automatically shut down. Double press when the phone's Bluetooth is connected to quickly call back the last call made by the phone.
- **- (Volume Down/Previous Track):** Short press for volume down. Long press for the previous song. In AUX mode, long press will reduce the volume.
- **+ (Volume Up/Next Track):** Short press for volume up. Long press for the next song. In AUX mode, long press will increase the volume.
- **EQ (Equalizer/Light) Button:** Short press to cycle through different light effects. Double press to switch EQ modes.
- **Power Button:** Long press and hold for 2 seconds to power on/off. Short press to turn on/off broadcasting in powered on mode. Reset: long press and hold for 10 seconds to reset the speaker if it's crashed (it will shut down).

Rear Ports:



Image: Rear view of the speaker highlighting the USB-C charging port, USB-A port, and AUX port, protected by a waterproof flap.

- **USB-C Charging Port:** For charging the speaker.
- **USB Port (USB-A):** For connecting USB devices, also functions as a power bank output.
- **AUX Port:** For wired audio input using a 3.5mm audio cable.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's USB-C port and to a compatible USB power adapter (not included). The battery indicator lights will show charging progress. A full charge takes approximately 3 hours.

4.2 Powering On/Off

Long press the **Power Button** for 2 seconds to turn the speaker on or off.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Ensure the speaker is powered on and the LED light is flashing, indicating it's in pairing mode.
2. On your mobile device, enable Bluetooth and search for "TAZATA BOOMBLAST PRO" in the list of available devices.
3. Select the speaker to connect. A confirmation sound will indicate successful pairing, and the LED light will remain solid.
4. To disconnect, long press the **M (Mode) Button** for 2 seconds.

5.2 AUX Mode

Connect a 3.5mm audio cable from your audio source to the AUX port on the speaker. The speaker will automatically switch to AUX mode. Use the volume controls on the speaker or your device to adjust audio levels.

5.3 Multi-Speaker Pairing (Broadcast Mode)

For an immersive audio experience, you can wirelessly link multiple TAZATA BOOMBLAST PRO speakers.

1. Ensure all speakers are powered on and not connected to any Bluetooth device.
2. On the primary speaker, short press the **Power Button** to enter Broadcast Mode (indicated by a specific light pattern).
3. On secondary speakers, short press the **Power Button** to join the Broadcast Mode. They will automatically connect to the primary speaker.
4. Connect your device to the primary speaker via Bluetooth. All linked speakers will play synchronized audio.

True Wireless Stereo EQ Mode

Experience more immersive audio and a wider sound range for a full, surround-sound vibe, perfect for diving into the music.



Image: Multiple speakers connected in True Wireless Stereo EQ Mode for expanded sound coverage.

5.4 LED Light Modes

The speaker features pulsing LED lights on its passive radiators. Short press the **EQ (Equalizer/Light) Button** to cycle through different light effects. Double press to switch EQ modes.

5.5 Power Bank Function

The built-in 5000mAh battery can also charge your mobile devices. Connect your device's charging cable to the USB-A port on the speaker to begin charging.

Built-In Power Bank Function for Outdoor Emergency Backup

A to Port to Lightning Type-C



Image: Speaker acting as a power bank, charging a phone in an outdoor setting.

6. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- **Waterproof Care:** Always ensure the rubber flap covering the charging and AUX ports is securely closed to maintain the IPX7 waterproof rating.

IPX7

Dustproof and Waterproof for Outdoor Adventures



Waterproof and Dustproof is effective only when the cap on the back is closed. Not guaranteed for all situations.

Image: The speaker's IPX7 rating ensures it is dustproof and waterproof for outdoor use, such as at the beach.

7. TROUBLESHOOTING

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect to a power source and try again.
Cannot pair via Bluetooth.	Ensure the speaker is in pairing mode (flashing LED). Disconnect from other devices. Clear pairing information by long pressing the Play/Pause button for 5 seconds.
No sound or low volume.	Check volume levels on both the speaker and your connected device. Ensure the correct mode (Bluetooth/AUX) is selected.
Speaker is unresponsive.	Perform a reset by long pressing the Power Button for 10 seconds.

8. SPECIFICATIONS

Feature	Detail
Brand	TAZATA
Model Name	TAZATA BOOMBLAST PRO-CAMO
Speaker Maximum Output Power	80 Watts RMS / 120 Watts Peak
Connectivity Technology	Auxiliary, Bluetooth, USB
Wireless Communication Technology	Bluetooth
Bluetooth Range	10 Meters
Water Resistance Level	IPX7 (Waterproof)
Battery Capacity	5000mAh (3600 Amp Hours)
Playtime	8+ hours (at 60% volume)
Charging Time	3 Hours (with 9V/2A fast charging)
Product Dimensions	10.35"D x 4.53"W x 4.88"H
Item Weight	3.5 Pounds
Included Components	Speaker, Portable Strap, Quick Start Manual, USB-C Charging Cable



Image: Internal speaker configuration highlighting the dual tweeters and woofers for 120W Peak sound.

9. WARRANTY INFORMATION

This TAZATA product comes with a [Limited Warranty](#). For specific terms and conditions, please refer to the warranty card included in your package or contact customer support.

10. CUSTOMER SUPPORT

For any questions, technical assistance, or warranty claims, please contact the Tazata Store directly through your Amazon order page or visit the official Tazata website.

The Tazata Store is committed to providing advanced, affordable, and reliable wireless audio equipment.

