

[Manuals.plus](#) /

› [ECOTINY](#) /

› ECOTINY Steel Base Rolling TV Stand with Power Outlet (Model HW1275WH) Instruction Manual

ECOTINY HW1275WH

ECOTINY Steel Base Rolling TV Stand with Power Outlet

Model: HW1275WH

PRODUCT OVERVIEW

The ECOTINY Steel Base Rolling TV Stand with Power Outlet is designed to provide a versatile and stable mounting solution for televisions ranging from 32 to 75 inches, supporting up to 110 lbs. This stand features integrated power outlets, hidden wire management, and adjustable viewing angles for optimal comfort and convenience.



Image: The ECOTINY Steel Base Rolling TV Stand with Power Outlet, shown with a television mounted, highlighting its sleek

KEY FEATURES

- **Integrated Power Outlet:** Features 2 USB ports and 3 AC outlets with a 6.6 ft power cord for convenient device charging and power supply.
- **Hidden Wire Management:** Internal cable routing system keeps wires organized and out of sight.
- **Adjustable Viewing Angles:** Offers +/-35° swivel, +3°/-5° tilt, and +/-3° leveling for customized viewing.
- **Height Adjustment:** 6 adjustable height settings from 51.9 to 59.8 inches, including 2 TV plate heights and 3 TV bracket heights.
- **Heavy-Duty Construction:** Built with thicker, heavy-duty steel, including a 30mm thick base, supporting up to 110 lbs.
- **Universal Compatibility:** Fits 32"-75" LCD/LED/OLED Flat/Curved screen TVs with VESA patterns from 200x200mm to 600x400mm.
- **Silent Locking Casters:** 360° silent wheels allow for effortless repositioning and secure locking.
- **Removable Storage Shelf:** Provides ample space for media devices, game systems, or accessories.

SETUP AND ASSEMBLY

Follow these steps for proper assembly of your ECOTINY TV stand. Ensure all parts are present before beginning.

Your browser does not support the video tag.

Video: ECOTINY Rolling TV Stand Installation Guide. This video provides a visual walkthrough of the assembly process.

Assembly Steps Overview:

1. **Attach Wheels to Base:** Secure the silent locking casters to the bottom of the steel base.
2. **Connect Column to Base:** Attach the main support column to the base using the provided hardware.
3. **Install TV Mounting Plate:** Secure the TV mounting plate to the top of the column.
4. **Attach TV Brackets to TV:** Fasten the TV brackets to the back of your television, ensuring VESA compatibility.
5. **Mount TV to Stand:** Carefully lift and hook the television onto the mounting plate, then secure it with the safety locks.
6. **Install Storage Shelf:** Attach the removable steel shelf at your desired height on the column.
7. **Route Cables:** Utilize the hidden wire management system to route all cables through the column for a clean setup.

OPERATING INSTRUCTIONS

Adjusting Viewing Angles:

Flexible Swivel & Tilt & Level

Watch from any angle



Image: Visual representation of the swivel, tilt, and leveling capabilities of the TV stand.

- **Swivel:** Gently push the sides of the TV to swivel it up to +/-35° left or right.
- **Tilt:** Loosen the tilt adjustment knobs on the mounting plate, adjust the screen to your desired +3°/-5° tilt, and re-tighten the knobs.
- **Leveling:** The TV can be leveled up to +/-3° after installation by adjusting the screws on the TV brackets.

Height Adjustment:

Adjust to Your Comfort

6 height levels for personalized viewing



Image: Diagram illustrating the adjustable height range of the TV stand from 51.9 to 59.8 inches.

The TV stand offers 6 adjustable height settings. These adjustments can be made by repositioning the TV plate on the main column or by adjusting the height of the TV brackets on the TV plate. Refer to the assembly guide for detailed instructions on height adjustment points.

Using the Power Outlet:

Integrated Power Strip

Charge easily and stay organized



Image: Close-up of the integrated power outlet featuring 3 AC outlets and 2 USB ports.

Plug the stand's 6.6 ft power cord into a wall outlet. You can then power your TV, media players, and other devices by plugging them into the 3 AC outlets or charging via the 2 USB ports located on the stand's column.

Mobility and Locking:

Smart Features

For a cleaner, smoother, safer setup



Cable Management



Removable Steel Shelf



Silent Locking Casters

Image: Detail of the 360° silent locking casters and the cable management system.

To move the TV stand, ensure the casters are unlocked. To secure the stand in place, press down on the locking mechanism on each caster until it clicks into the locked position.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the stand with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight and secure.
- **Cable Management:** Ensure cables are properly routed and not pinched or strained.

TROUBLESHOOTING

- **Stand is Wobbly:** Ensure all assembly screws are tightened securely. Check that the base is on a flat, stable surface.
- **TV Not Level:** Use the +/-3° leveling adjustment feature on the TV brackets as described in the operating instructions.
- **Casters Not Rolling Smoothly:** Check for any debris obstructing the wheels. Ensure the locking mechanisms are fully disengaged.
- **Power Outlet Not Working:** Verify the main power cord is securely plugged into a functional wall outlet. Check if the power strip has an on/off switch or reset button.

SPECIFICATIONS

Feature	Detail
Brand	ECOTINY
Model Number	HW1275WH
Material	Alloy Steel
Color	White
Item Weight	32.2 pounds
Product Dimensions	25.98 x 16.92 x 59.84 inches
Compatible TV Sizes	32"-75"
Max Weight Capacity (TV)	110 lbs
VESA Mounting Patterns	200x200 to 600x400mm
Height Adjustment Range	51.9" to 59.8"
Swivel Angle	+/-35°
Tilt Angle	+3°/-5°
Leveling Adjustment	+/-3°
Power Cord Length	6.6 ft
Power Outlet	3 AC Outlets, 2 USB Ports

WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions. For technical support or assistance with parts, please contact ECOTINY customer service through their official channels.

