

LUOSHALIYA 25040802

LUOSHALIYA Electric Gooseneck Kettle User Manual

Model: 25040802

1. INTRODUCTION

Thank you for purchasing the LUOSHALIYA Electric Gooseneck Kettle. This manual provides important information for the safe and efficient use of your new appliance. Please read these instructions thoroughly before use and keep them for future reference.

2. IMPORTANT SAFETY INFORMATION

Please read and understand all safety instructions before using this appliance.

- Do not immerse the kettle, power base, cord, or plug in water or other liquids.
- Ensure the appliance is placed on a stable, flat, heat-resistant surface, away from the edge of the countertop.
- Do not operate the kettle with a damaged cord or plug, or if the appliance malfunctions or has been damaged in any manner.
- Keep the kettle and its cord out of reach of children.
- Always fill the kettle with water between the MIN and MAX fill lines to prevent boil-dry or overfilling.
- Do not open the lid while water is boiling.
- Unplug the kettle from the outlet when not in use and before cleaning.
- This appliance is for household use only. Do not use outdoors.

3. PRODUCT OVERVIEW

The LUOSHALIYA Electric Gooseneck Kettle is designed for precise temperature control and efficient heating, ideal for coffee and tea enthusiasts.

Key Features:

- **Adjustable Temperature:** Temperature can be set between 104-212°F (40-100°C) with $\pm 1^\circ\text{F}/\pm 1^\circ\text{C}$ accuracy. Supports $^\circ\text{C}$ and $^\circ\text{F}$ conversion.
- **Gooseneck Spout:** Unique 90° gooseneck spout for precise pour control, ideal for pour-over coffee.
- **LED Display:** Shows real-time temperature.
- **Keep Warm Function:** Adjustable insulation time from 1-24 hours (default 8 hours).
- **Safety Features:** Anti-dry burning protection and over-temperature protection.
- **Teapot Memory Function:** Remembers the last set temperature for 30 minutes after lifting from the base.
- **Material:** Food-grade 304 stainless steel inner.

Components:



Image: The kettle, its power base, and the included English instruction manual. The kettle features a black matte finish with a gooseneck spout and a handle. The base has control buttons and a digital display.

- Electric Kettle with Gooseneck Spout
- Power Base with Digital Display and Controls
- Lid
- Instruction Manual

4. SETUP

1. **Unpack:** Carefully remove all packaging materials and inspect the kettle for any damage.
2. **First Use Cleaning:** Before first use, fill the kettle with water to the MAX line, boil it, and then discard the water. Repeat this process 2-3 times to remove any manufacturing residues. Wipe the exterior

with a damp cloth.

3. **Placement:** Place the power base on a dry, flat, and stable surface. Ensure the power cord is not dangling where it can be pulled or tripped over.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

5. OPERATING INSTRUCTIONS

5.1 Filling the Kettle

1. Remove the lid from the kettle.
2. Fill the kettle with fresh, cold water. Ensure the water level is between the MIN and MAX marks inside the kettle. Do not overfill.
3. Replace the lid securely.



Image: A black gooseneck kettle is shown pouring hot water into a clear glass mug, indicating its use for beverages like coffee or tea.

5.2 Powering On and Setting Temperature

1. Place the kettle firmly on the power base.
2. Press the power button (usually indicated by a power symbol) on the base to turn on the kettle. The LED display will illuminate.
3. Use the temperature control dial or buttons to select your desired temperature between 104-212°F (40-100°C). The display will show the target temperature.
4. The kettle will begin heating. The real-time temperature will be displayed as it heats up.



Image: A black electric gooseneck kettle sits on its base, displaying '64°C' on its digital screen. A cup of coffee with latte art is beside it, suggesting its use for precise brewing.

5.3 Keep Warm Function

- After reaching the set temperature, the kettle can automatically enter a keep-warm mode.
- The default keep-warm time is 8 hours, but it can be adjusted from 1 to 24 hours using the controls on the base.

5.4 Teapot Memory Function

- If you lift the kettle from the base and place it back within 30 minutes, it will remember the last set temperature and resume heating/keeping warm if necessary.

- After 30 minutes, the memory function will reset.

5.5 Buzzer Mute

- To enjoy a quiet brewing time, you can mute the buzzer with a single click on the designated button (refer to the manual for specific button location).

6. MAINTENANCE AND CLEANING

Always unplug the kettle and allow it to cool completely before cleaning.

1. **Exterior Cleaning:** Wipe the exterior of the kettle with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
2. **Interior Cleaning (Descaling):** Over time, mineral deposits (limescale) may build up inside the kettle. To remove these:
 - Fill the kettle with 1 part white vinegar and 2 parts water.
 - Boil the mixture and let it stand for at least 30 minutes, or longer if the scale is heavy.
 - Empty the kettle and rinse thoroughly with fresh water several times.
 - For stubborn deposits, repeat the process or use a commercial descaling solution following its instructions.
3. **Power Base:** Never immerse the power base in water or any other liquid. Wipe it with a dry cloth only.
4. **Storage:** When not in use, store the kettle in a dry place.

7. TROUBLESHOOTING

- **Kettle not heating:**
 - Ensure the kettle is properly seated on the power base.
 - Check if the power cord is securely plugged into a working outlet.
 - Verify that the power button has been pressed.
- **Water not reaching desired temperature:**
 - Confirm the correct temperature setting on the LED display.
 - Ensure the lid is properly closed during heating.
- **Kettle leaks:**
 - Do not fill above the MAX fill line.
 - Ensure the lid is securely in place.
- **Display not working:**
 - Unplug the kettle, wait a few minutes, and plug it back in to reset.
 - If the issue persists, contact customer support.

8. SPECIFICATIONS

- **Brand:** LUOSHALIYA
- **Model Name:** Electric Kettle

- **Item Model Number:** 25040802
- **Color:** Black
- **Material:** 304 Stainless Steel, Plastic
- **Rated Power:** 1200W
- **Rated Voltage:** 110V-130V
- **Rated Frequency:** 50/60Hz
- **Temperature Range:** 40-100°C / 104-212°F
- **Accurate Adjustment:** $\pm 1^{\circ}\text{C}$ / $\pm 1^{\circ}\text{F}$
- **Insulation Timer:** 1-24 Hours (Default: 8 H)
- **Capacity:** 0.9 L / 0.24 gal
- **Power Cable Length:** 90cm / 35.43 in (Exposed)
- **Product Dimensions:** 11.02"L x 6.46"W x 8.66"H
- **Special Feature:** Digital Display



Image: A detailed diagram illustrating the dimensions of the black electric gooseneck kettle and its base, with measurements provided in both centimeters and inches.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or visit the official LUOSHALIYA website. You may also contact customer service through your retailer for assistance.