Manuals+

Q & A | Deep Search | Upload

FJFJOPK HDV-3051L

FJFJOPK 4K Video Camera Camcorder User Manual

Model: HDV-3051L

Introduction

This user manual provides detailed instructions for the FJFJOPK 4K Video Camera Camcorder, Model HDV-3051L. Please read this manual thoroughly before operating the device to ensure proper usage and to maximize its performance. Keep this manual for future reference.



Figure 1: FJFJOPK 4K Video Camera Camcorder with included accessories like external microphone, handheld stabilizer, and remote control.

PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 4K Video Camera
- · Handheld Stabilizer
- Remote Control
- Microphone
- · Lens Hood
- 32GB SD Card
- 2 x Rechargeable Batteries
- · Charging Cable
- User Manual

• Camera Bag

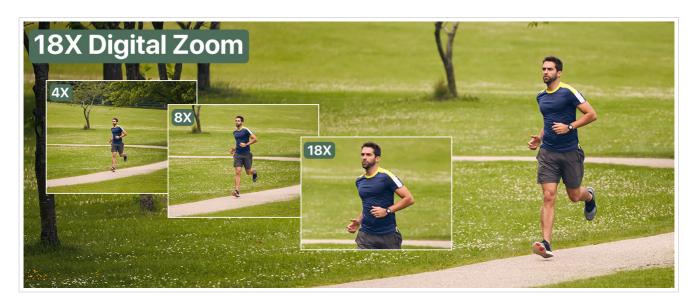


Figure 2: Visual representation of the complete packing list for the camcorder.

SETUP GUIDE

1. Battery Installation

The camcorder uses two long-lasting rechargeable batteries. Ensure batteries are fully charged before first use.

- 1. Locate the battery compartment on the camcorder.
- 2. Open the battery compartment cover.
- 3. Insert the charged batteries according to the polarity indicators inside the compartment.
- 4. Close the battery compartment cover securely.

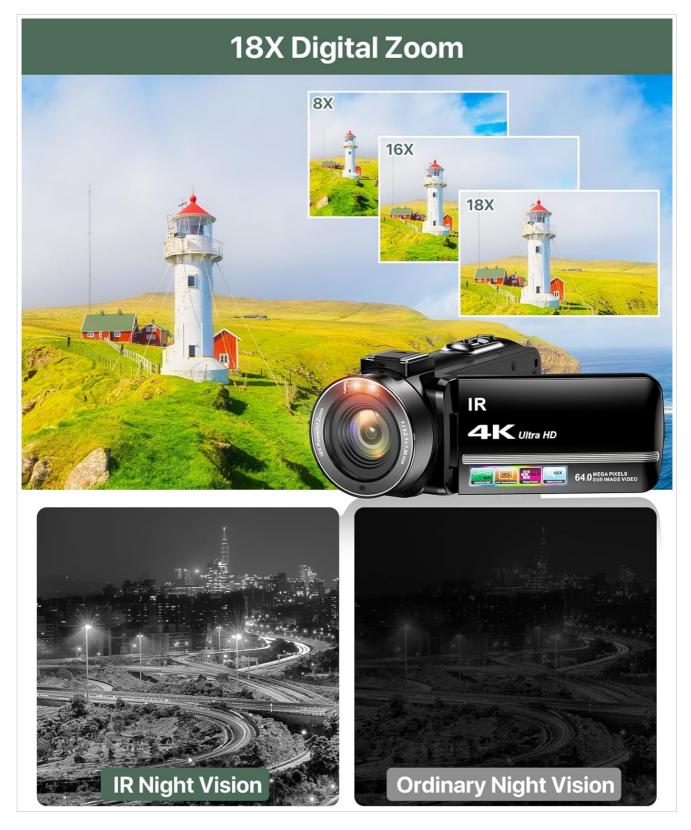


Figure 3: Proper insertion of batteries into the camcorder.

2. SD Card Installation

A 32GB SD card is included for immediate use. The camcorder supports SD cards for storing your videos and photos.

- 1. Locate the SD card slot, typically near the battery compartment.
- 2. Insert the SD card with the metal contacts facing down until it clicks into place.
- 3. To remove, gently press the card until it pops out.

3. Attaching Accessories

Enhance your recording experience by attaching the included accessories.

- External Stereo Microphone: Attach the microphone to the hot shoe mount on top of the camcorder. Connect the microphone cable to the designated audio input port. This ensures clear audio capture.
- Handheld Stabilizer: The anti-shake handheld stabilizer can be attached to the bottom tripod mount of the camcorder. This accessory helps in achieving smooth and steady shots, especially during movement.
- Lens Hood: Screw the lens hood onto the front of the camcorder's lens. The lens hood is designed to reduce glare and lens flare, improving image quality in bright outdoor conditions.



Figure 4: Handheld stabilizer attached for improved stability.

3" 270° Touchscreen & Wireless Remote Contro

Figure 5: External microphone for enhanced audio recording.



Figure 6: The lens hood reduces glare for clearer outdoor shots.

OPERATING INSTRUCTIONS

1. Powering On/Off

To power on the camcorder, open the LCD screen. To power off, close the LCD screen or press and hold the Power button.

2. Using the 3.0-inch Touch Screen

The camcorder features a 3.0-inch IPS touch screen that is 270° rotatable, allowing for versatile viewing angles, including selfie-angle recording.

- Navigation: Tap on-screen icons to navigate menus and settings.
- Rotation: Gently rotate the screen to your desired angle for comfortable viewing or self-recording.



Figure 7: The 270° rotatable touch screen provides flexible viewing and recording options.

3. Recording Videos and Taking Photos

The camcorder supports 4K Ultra HD video recording and 64MP still image capture.

- Video Recording: Press the Record button to start and stop video recording. The camcorder captures every detail with stunning clarity.
- Photo Capture: Switch to photo mode and press the Shutter button to take 64MP high-definition photos.
- **18X Digital Zoom:** Use the zoom controls to magnify your subject up to 18 times. This feature allows for clear footage even from a distance.

• **IR Night Vision:** Activate IR Night Vision mode for clear recording in low-light conditions or complete darkness.

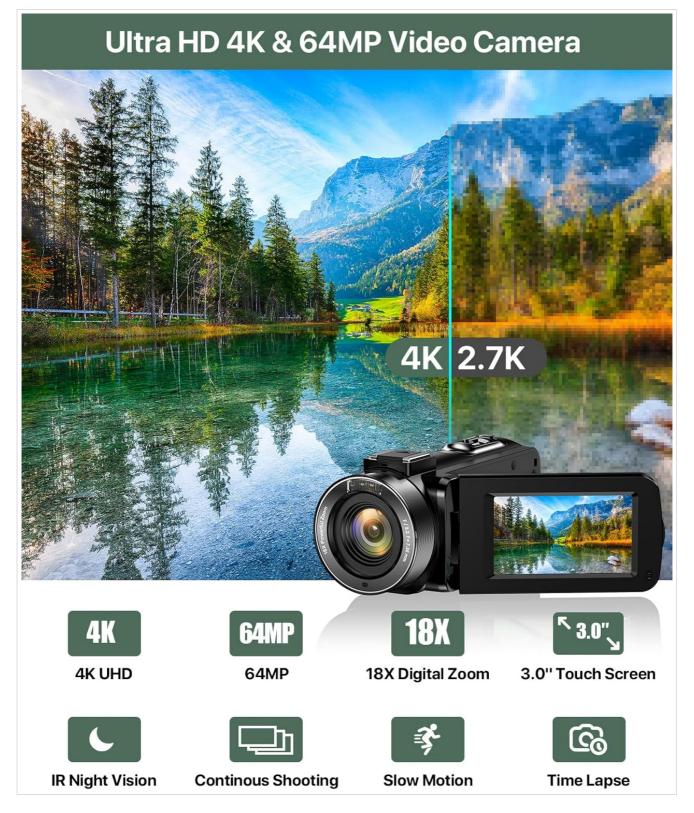


Figure 8: Experience superior image and video quality with 4K UHD and 64MP resolution.

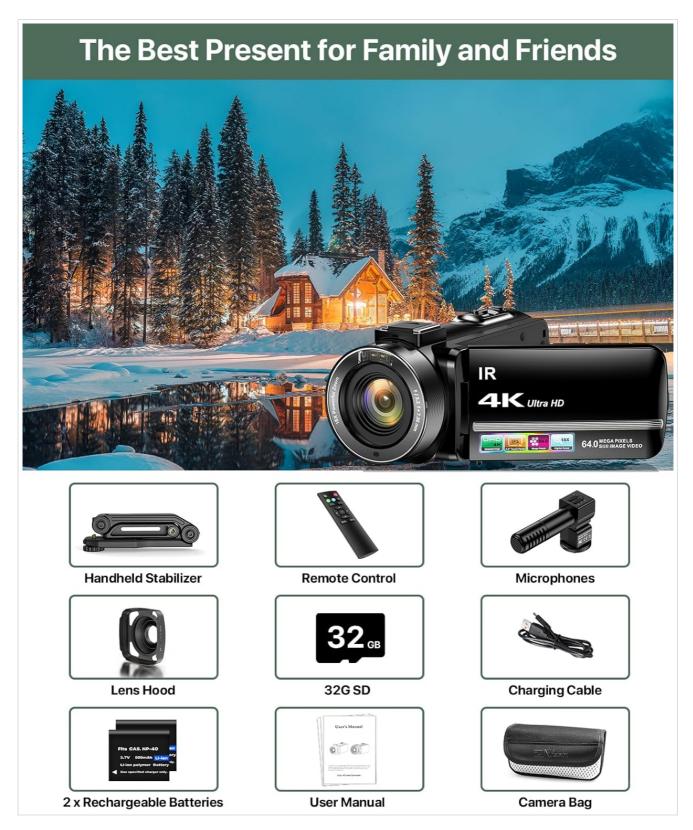


Figure 9: The 18X digital zoom allows for detailed capture of distant subjects.



Figure 10: IR Night Vision provides clear visibility in low-light or dark environments.

4. Advanced Features

- **Anti-Shake:** The built-in anti-shake function, complemented by the handheld stabilizer, ensures smooth and stable footage even during dynamic movements.
- **Time-Lapse Photography:** Capture stunning time-lapse videos by setting the desired interval in the camera settings.
- Face Detection: The camcorder can detect faces in the frame, optimizing focus and exposure for portraits and group shots.
- One-Click Live Streaming: Connect the camcorder to your computer via USB to use it as a webcam for live streaming.
- **Recording While Charging:** The camcorder supports recording while connected to a power source, ideal for extended shooting sessions.
- Wireless Remote Control: Use the included remote control for convenient wireless operation, perfect for self-recording or group shots.



Figure 11: Explore various shooting modes including anti-shake, slow motion, and time-lapse.



Figure 12: Continuous recording is possible while the camcorder is charging.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid abrasive materials.
- **Storage:** Store the camcorder in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if storing for extended periods.
- **Battery Care:** Fully charge batteries before storage and recharge them every few months to maintain their lifespan.

TROUBLESHOOTING

If you encounter issues with your camcorder, refer to the following common solutions:

Problem	Possible Cause	Solution
Camera does not power on.	Low or uncharged battery; incorrectly inserted battery.	Charge batteries fully. Ensure batteries are inserted correctly.
Poor image/video quality.	Dirty lens; insufficient lighting; incorrect settings.	Clean the lens. Use IR Night Vision in low light. Adjust exposure settings.
SD card error.	SD card full; incorrectly inserted; incompatible card.	Delete files or use a new SD card. Reinsert card correctly. Ensure card is compatible (up to 32GB).
No audio recording.	External microphone not connected properly or turned off.	Check microphone connection and ensure it is powered on if applicable.

SPECIFICATIONS

Feature	Detail
Brand	FJFJOPK

Feature	Detail
Model Number	HDV-3051L
Video Capture Resolution	4K
Photo Sensor Technology	CMOS
Maximum Focal Length	64 Millimeters
Maximum Aperture	7.36 f
Flash Memory Type	SD (32GB included)
Video Capture Format	AVI
Screen Size	3 Inches (270° Rotatable IPS Touch Screen)
Special Features	Anti-Shake, Image Stabilization, IR Night Vision, 18X Digital Zoom, External Microphone Support, Webcam Function, Time-Lapse, Face Detection, Recording While Charging, Wireless Remote Control
Item Weight	2.05 pounds
Package Dimensions	7.48 x 5.87 x 4.21 inches

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your package or contact FJFJOPK customer service directly. Optional protection plans are available for purchase to extend coverage beyond the standard manufacturer's warranty.

- 2-Year Protection Plan: Available for extended coverage.
- 3-Year Protection Plan: Available for extended coverage.
- Complete Protect: Monthly plan covering eligible past and future purchases.