

[Manuals.plus](#) /

› [Luxell](#) /

› Luxell LX-2820 3 Bar Heater Instruction Manual

Luxell LX-2820

Luxell LX-2820 3 Bar Heater Instruction Manual

Model: LX-2820

IMPORTANT SAFETY INFORMATION

Please read this manual carefully before operating your Luxell LX-2820 3 Bar Heater. Keep these instructions for future reference.

- Always ensure the heater is placed on a stable, level surface.
- Do not cover the heater. Overheating can occur.
- Keep flammable materials (curtains, furniture, bedding) at least 1 meter (3 feet) away from the heater.
- Do not use the heater in bathrooms, laundry areas, or similar wet locations.
- Unplug the heater when not in use.
- Do not operate the heater with a damaged cord or plug. Contact qualified service personnel for repair.
- This heater is equipped with a rollover protection safety switch, which automatically turns off the unit if it tips over.
- Do not insert any objects into the heater's openings.
- Supervise children and pets when the heater is in operation.

PRODUCT OVERVIEW

The Luxell LX-2820 is a 3-bar quartz heater designed for efficient indoor and outdoor heating. It features three quartz heating elements, offering 1200 Watts of heat output, and multiple power settings for adjustable warmth. A built-in rollover protection safety switch enhances user safety.

LUXELL

Dual Switch Control

Separate switches for operating heating elements and controlling temperature



Floor Mount

Dimensions
125 * 277 * 530 mm



Image: Luxell LX-2820 heater showing the dual switch control for heating elements and temperature, and its floor-mount design with dimensions (125 * 277 * 530 mm).

Key Features:

- 3 Quartz Heating Elements
- 1200 Watt Heat Output
- 3 Power Settings
- Rollover Protection Safety Switch
- Polished Stainless-Steel Reflector for Increased Heat Distribution
- Floor Mount Design

SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Retain packaging for storage if needed.
2. **Placement:** Place the heater on a firm, level surface. Ensure there is at least 1 meter (3 feet) of clear space around the heater from any walls, furniture, or other objects. Do not place it directly under a power outlet.
3. **Power Connection:** Ensure the heater is switched off (all switches in the '0' or 'off' position) before plugging it into a

standard 220V electrical outlet.

OPERATING INSTRUCTIONS

The Luxell LX-2820 heater features dual switch control for flexible operation.

- Power On:** Plug the heater into a suitable 220V power outlet.
- Selecting Heat Settings:** The heater has two switches, each controlling one or more heating elements.
 - Switch 1 (e.g., lower switch): Activates one or two heating bars for lower heat output.
 - Switch 2 (e.g., upper switch): Activates additional heating bars, combined with Switch 1, to achieve higher heat output.
 - To achieve maximum heat (1200 Watts), both switches should be in the 'on' position.
 - Experiment with different switch combinations to find your desired heat level.
- Rollover Protection:** If the heater is accidentally knocked over, the built-in safety switch will automatically turn off the unit. Stand the heater upright to resume operation.
- Power Off:** To turn off the heater, switch both control switches to the '0' or 'off' position. Unplug the heater from the wall outlet when not in use for extended periods.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- Cleaning:**
 - Always unplug the heater and allow it to cool completely before cleaning.
 - Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
 - Do not immerse the heater in water or spray water directly onto it.
- Storage:**
 - If storing the heater for an extended period, clean it thoroughly.
 - Store the heater in a cool, dry place, preferably in its original packaging, away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	- Not plugged in securely. - Power outlet not functioning. - Rollover protection activated. - Switches not in 'on' position.	- Ensure plug is fully inserted. - Test outlet with another appliance. - Ensure heater is upright on a stable surface. - Turn both switches to the 'on' position.

Problem	Possible Cause	Solution
Heater turns off unexpectedly.	• Heater tipped over (rollover protection). • Overheating (internal safety mechanism). • Loose power connection.	• Ensure heater is upright and stable. • Unplug, allow to cool for 10-15 minutes, check for obstructions, then restart. • Check power cord and outlet connection.
Reduced heat output.	• Not all heating elements activated. • Dust accumulation on elements/reflector.	• Ensure both control switches are in the 'on' position. • Unplug and clean the heater as per maintenance instructions.

If problems persist, do not attempt to repair the heater yourself. Contact qualified service personnel or the retailer for assistance.

SPECIFICATIONS

- **Model:** LX-2820
- **Brand:** Luxell
- **Heating Elements:** 3 Quartz
- **Heat Output:** 1200 Watts
- **Power Settings:** 3
- **Voltage:** 220 Volts
- **Amperage:** 5.7 Amps
- **Special Features:** Fast Heating, Lightweight, Portable, Tip-Over Protection
- **Form Factor:** Pedestal (Floor Mount)
- **Indoor/Outdoor Usage:** Indoor, Outdoor
- **Power Source:** Corded Electric
- **Product Dimensions (D x W x H):** 56 x 27 x 16 cm (56D x 27W x 16H centimetres)
- **Item Weight:** 1.2 Kilograms
- **Color:** Black
- **Country of Origin:** China

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the point of purchase or contact your retailer. Do not attempt to open or repair the unit yourself, as this may void the warranty and pose a safety risk.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F43Y14PH>

More documents and user manuals: <https://manuals.plus/>