

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Merax](#) /
- › [Merax Outdoor Rattan Sofa Set Model XY00908 Instruction Manual](#)

Merax XY00908

Merax Outdoor Rattan Sofa Set Model XY00908 Instruction Manual

Model: XY00908

[Introduction](#) [Safety Instructions](#) [Package Contents](#) [Setup & Assembly](#) [Operating](#)
[Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support & Warranty](#)

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Merax Outdoor Rattan Sofa Set, Model XY00908. Please read this manual thoroughly before assembly and use to ensure proper function and longevity of your product. Keep this manual for future reference.

2. SAFETY INSTRUCTIONS

Observe the following safety precautions to reduce the risk of injury or damage to the product:

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight capacity of 352 lbs for the sofa and 176 lbs for the coffee table.
- Keep children and pets away from the assembly area.
- Use on a flat, stable surface to prevent tipping.
- Avoid exposing the product to extreme weather conditions for prolonged periods to prevent material degradation.
- Do not stand on the furniture.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.

- 2 x Adjustable Rattan Chairs
- 1 x Coffee Table with Tempered Glass Top

- 2 x Seat Cushions
- 2 x Back Cushions
- Assembly Hardware (screws, washers, wrench)
- Instruction Manual

4. SETUP & ASSEMBLY

Assembly is required for this product. All hardware and pieces are labeled for easy identification. Follow the detailed instructions provided in the package.

4.1 Component Overview and Dimensions

Familiarize yourself with the main components and their dimensions before starting assembly.

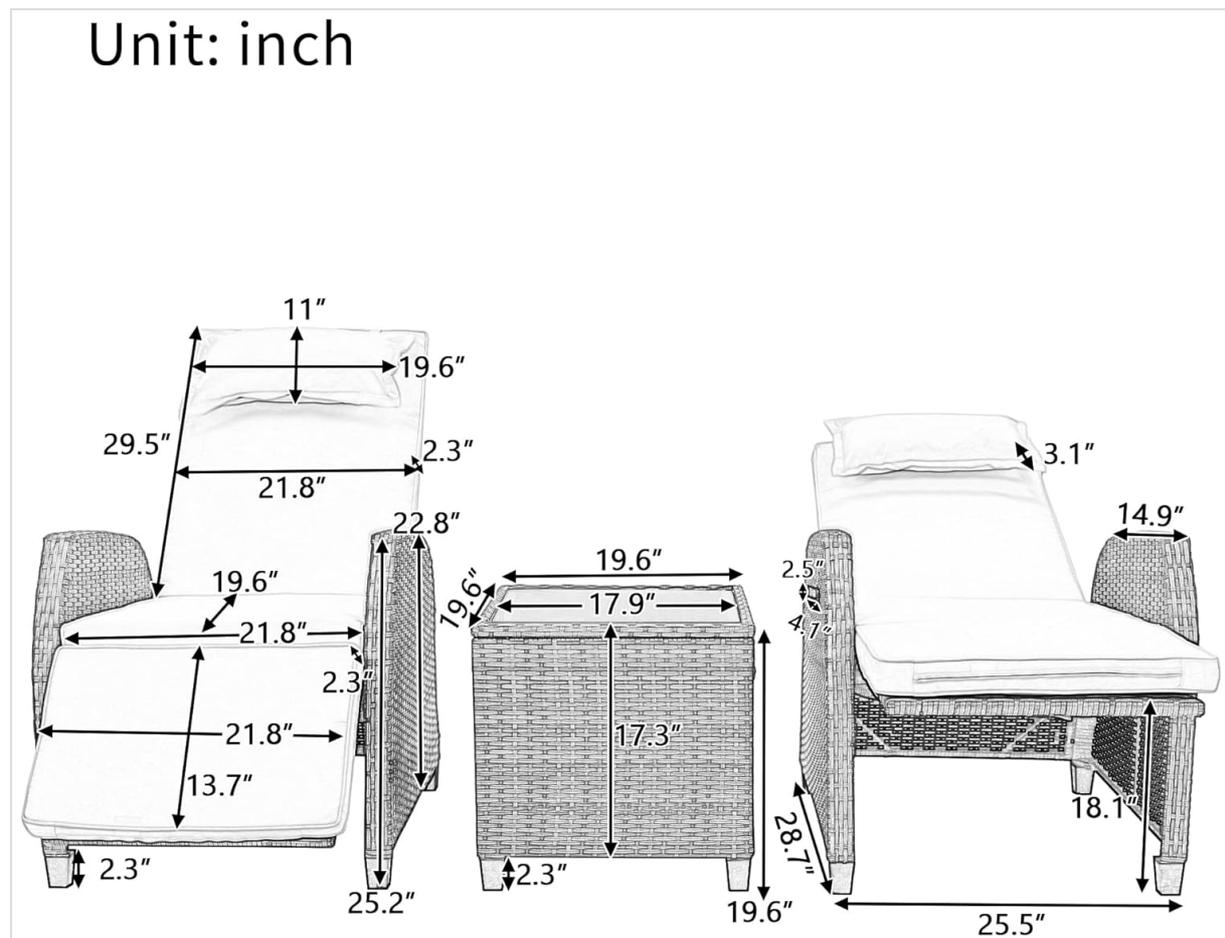


Image 1: Overall dimensions of the sofa chairs and coffee table in inches. The chairs measure approximately 25.5 inches wide, 28.7 inches deep (when upright), and 44 inches high (when upright). The coffee table measures 19.6 inches wide, 19.6 inches deep, and 19.6 inches high.

4.2 Assembling the Chairs

1. Unpack all chair components and lay them out on a clean, soft surface to prevent scratches.
2. Attach the backrest to the seat frame using the provided hardware. Ensure all bolts are finger-tight before fully tightening.
3. Secure the armrests to the assembled seat and backrest.
4. Once all components are in place, fully tighten all bolts with the included wrench. Do not overtighten.
5. Place the seat and back cushions onto the chairs. The cushions feature a Velcro design on the back for secure attachment, preventing slippage.



Velcro design on the back, easy to disassemble, the headrest and cushion are integrated, not easy to slip.


Image 2: Detail of the Velcro design on the back of the cushion, which integrates the headrest and cushion for easy disassembly and secure placement.



Image 3: The back and seat cushions are made from polyester material, designed for comfort. The cushion covers feature a zipper for easy removal and cleaning.

4.3 Assembling the Coffee Table

1. Unpack all coffee table components.
2. Assemble the table frame according to the instructions, ensuring all connections are secure.
3. Carefully place the tempered glass top onto the assembled table frame. Ensure it is seated properly and does not wobble.

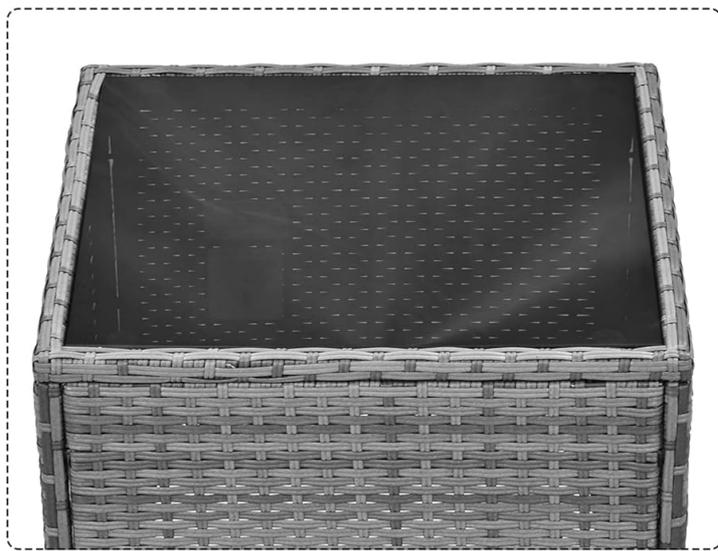

STYLISH DESIGN

The tempered glass desktop of the small side table exudes elegance and sophistication.



waterproof



easy to clean

Table top can accommodate fruit trays, coffee, and other leisure foods.



Image 4: The coffee table features a tempered glass desktop, which is waterproof and easy to clean. It is suitable for holding beverages, snacks, and other small items.

5. OPERATING INSTRUCTIONS

5.1 Adjusting the Seating Position

Each chair features an adjustable design, allowing you to recline the backrest to your preferred angle.

- To adjust the backrest, locate the controller on the right armrest of the chair.
- Engage the controller to release the locking mechanism.
- Lean back or forward to achieve the desired angle.
- Release the controller to lock the backrest into position.

ADJUSTABLE SEATING

The seat can be adjusted to the most comfortable angle for you with the controller on the right arm.



Image 5: The chair's backrest can be adjusted to various comfortable angles using a controller located on the right arm. This allows for personalized seating.

5.2 Using the Coffee Table

The coffee table is designed to hold light items such as beverages, books, or small decorative pieces. Avoid placing excessively heavy objects on the tempered glass top.

6. MAINTENANCE

6.1 Cleaning the Rattan Frame and Galvanized Steel

- Wipe down the HDPE rattan and galvanized steel frame with a soft cloth dampened with mild soap and water.
- Rinse thoroughly with clean water to remove any soap residue.
- Dry completely with a clean, dry cloth to prevent water spots or corrosion.
- Avoid using harsh chemicals, abrasive cleaners, or stiff brushes, as these can damage the materials.

6.2 Cleaning the Cushions

- The cushion covers are made of polyester and feature a zipper for easy removal.
- Remove the cushion covers and machine wash them in cold water with a mild detergent on a gentle cycle.

- Air dry the covers. Do not tumble dry or iron.
- For spot cleaning, use a mild soap solution and a soft brush, then rinse and air dry.

6.3 Cleaning the Tempered Glass Top

- Clean the tempered glass top with a standard glass cleaner and a soft, lint-free cloth.
- Avoid abrasive materials that could scratch the glass.

6.4 General Care

- Periodically check all bolts and connections to ensure they remain tight. Retighten as necessary.
- While the product is designed for outdoor use, consider covering it during prolonged periods of harsh weather or when not in use to extend its lifespan.

7. TROUBLESHOOTING

This section addresses common issues you might encounter.

Problem	Possible Cause	Solution
Chair wobbles after assembly.	Loose bolts or uneven surface.	Ensure all bolts are tightened. Move the chair to a flat, level surface.
Backrest does not adjust smoothly.	Mechanism obstruction or dirt.	Check for any obstructions in the adjustment mechanism. Clean any dirt or debris.
Cushions slip off the chair.	Velcro not properly engaged.	Ensure the Velcro strips on the cushions are securely attached to the chair frame.
Coffee table glass top is unstable.	Table frame not assembled correctly or uneven surface.	Verify the table frame assembly. Place the table on a flat, level surface.

8. SPECIFICATIONS

Feature	Detail
Model Number	XY00908
Brand	Merax
Material	HDPE Rattan, Galvanized Steel Frame, Tempered Glass (table top), Polyester (cushion cover), Foam+Fiber (cushion filling)
Single Chair Size (Highest)	25.5" W x 28.7" D x 44" H
Table Size	19.6" W x 19.6" D x 19.6" H
Single Chair Net Weight	28.6 lbs
Table Net Weight	15.4 lbs

Feature	Detail
Sofa Weight Capacity	352 lbs
Table Top Capacity	176 lbs
Color	Beige
Special Feature	Adjustable Design, with Coffee Table
Country of Origin	Vietnam

9. SUPPORT & WARRANTY

For any questions, missing parts, or issues with your Merax Outdoor Rattan Sofa Set, please contact our customer support team.

- **Website:** [Merax.com](https://merax.com)
- **Email:** csr@merax.com

Information regarding product warranty is typically provided with your purchase documentation. Please refer to your purchase receipt or contact customer support for specific warranty details.