

## Prasky BK688

# Prasky Portable Blender User Manual

Model: BK688

## INTRODUCTION

---

Thank you for choosing the Prasky Portable Blender. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new blender. Please read it thoroughly before first use and retain it for future reference.

### Key Features:

- 27oz capacity for various blending needs.
- Powerful 70W motor with 10 stainless steel blades.
- USB Type-C rechargeable for convenience.
- BPA-free materials for healthy use.
- Intelligent safety lock mechanism.
- Portable design with shoulder strap.

## SAFETY PRECAUTIONS

---

**WARNING: Failure to follow these safety instructions may result in fire, electric shock, or other injury or damage.**

- Do not immerse the motor base in water or any other liquid.
- Keep hands and utensils out of the blending cup while operating.
- Ensure the lid is securely tightened before blending. The intelligent safety lock prevents operation if not

properly secured (red light indicates not tightened, blue light indicates ready).

- Cut fruits into small pieces (approx. 1x1 cm) for optimal blending and to prevent motor strain.
- Always add water or other liquids for lubrication before blending.
- Avoid blending large ice cubes. This portable blender is not designed for heavy-duty ice crushing.
- Do not drop the motor part from a high place.
- Keep out of reach of children.
- Use only the provided USB Type-C cable for charging. Ensure the charging voltage is the international standard 5V.

## COMPONENTS

---

The Prasky Portable Blender consists of the following main components:

- Motor Base with 10-blade assembly
- 27oz Blending Cup
- Lid with Sip Spout
- Shoulder Strap
- USB Type-C Charging Cable



Image: The Prasky Portable Blender, showing the main unit, blending cup, lid, and the detachable blade assembly. Various fruits are depicted around it, suggesting its use for smoothies and juices.

## SETUP

---

### Initial Charging:

Before first use, fully charge the blender for 4 hours to extend battery life. The charging light will indicate charging status.

# 27 OZ Large Capacity

Squeeze Freshness, Anywhere You Roam



Image: The Prasky Portable Blender connected via a USB-C cable to a laptop, illustrating its rechargeable capability. Various fruits are arranged around the blender.

## Assembly:

1. Ensure the motor base is clean and dry.
2. Attach the blade assembly securely to the motor base.
3. Place the blending cup onto the motor base, aligning it properly.
4. Twist the blending cup clockwise until it is securely tightened. The intelligent safety lock requires proper alignment and tightening for operation.

## OPERATING INSTRUCTIONS

### Blending Process:

1. **Prepare Ingredients:** Cut fruits and other solid ingredients into small pieces, approximately 1x1 cm.

2. **Add Ingredients:** Place prepared ingredients into the blending cup. Do not exceed the maximum fill line.
3. **Add Liquid:** Pour in water, milk, or other liquids. This is crucial for proper blending and motor lubrication.
4. **Secure Lid:** Tighten the lid securely onto the blending cup. The indicator light will turn blue when properly secured and ready for operation. If the light is red, the lid is not tightened.
5. **Start Blending:** Double-click the power button to start the blending cycle.
6. **Shake (Optional):** For optimal blending, gently shake the blender at a 45-degree angle during operation.
7. **Finish:** The blending cycle typically takes about 40-60 seconds. The blender will stop automatically.
8. **Enjoy:** Unscrew the lid and enjoy your freshly blended drink. You can also replace the blending lid with the sip lid for on-the-go consumption.



Image: A six-step visual guide demonstrating how to use the Prasky Portable Blender, from preparing ingredients to enjoying the blended drink.

### Video Demonstration:

Your browser does not support the video tag.

Video: A short demonstration showcasing the ease of use and portability of the Prasky Portable Blender. This video highlights the product's functionality and convenience for daily use.

## MAINTENANCE AND CLEANING

### Cleaning the Blending Cup and Lid:

- The blending cup and lid are dishwasher-safe.
- Alternatively, they can be rinsed directly under tap water.

# Portable Blender

Easy-Open Sip Lid: Enjoy the Drink On the Go

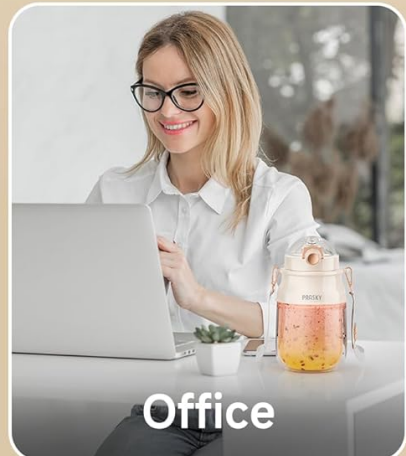
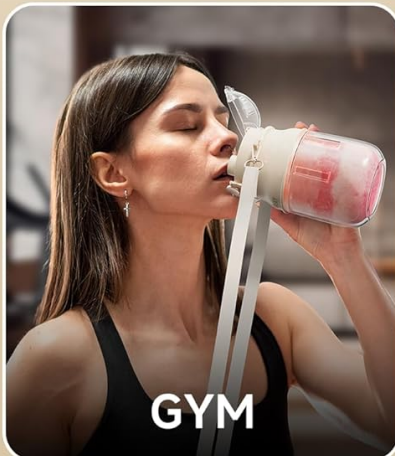


Image: The blending cup and lid of the Prasky Portable Blender placed inside a dishwasher, demonstrating their dishwasher-safe feature for easy cleaning.

### Cleaning the Motor Base and Blade Assembly:

- **DO NOT IMMERSE THE MOTOR BASE IN WATER.**
- Wipe the motor base with a damp cloth.
- The blade assembly can be rinsed under tap water. Ensure no water enters the motor housing.
- For thorough cleaning, detach the blade assembly from the motor base and rinse carefully.

### Storage:

Store the blender in a clean, dry place when not in use. Ensure all parts are completely dry before storing.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Blender does not start (Red light)	Lid not securely tightened.	Twist the lid clockwise until the indicator light turns blue.
Blender does not start (No light)	Battery is low or depleted.	Charge the blender using the USB Type-C cable. Ensure it's fully charged for 4 hours initially.
Blender stops during operation	Overload protection activated (too many ingredients, too large pieces, or not enough liquid).	Reduce ingredients, cut into smaller pieces, or add more liquid. Restart blending.
Poor blending results / Chunky texture	Ingredients too large or insufficient liquid.	Cut ingredients smaller. Add more liquid. Shake the blender gently during operation.
Leaking from the lid	Lid not properly sealed or overfilled.	Ensure the lid is tightly screwed on. Do not exceed the maximum fill line. Check the silicone seal for damage.

## SPECIFICATIONS

Feature	Detail
Brand	Prasky
Model Number	BK688
Capacity	27 oz (Normal), 32 oz (Full)
Power	70W (Average)
Battery Capacity	1500 mAh (2 batteries)
Charging Type	USB Type-C

Feature	Detail
Voltage	5V (DC)
Blade Material	304 Stainless Steel (10 blades)
Material Type Free	BPA Free
Dimensions	9"D x 18.98"W x 8"H
Item Weight	1.65 pounds

## WARRANTY AND SUPPORT

---

Prasky is committed to providing high-quality products. For any issues or inquiries regarding your portable blender, please contact Prasky customer support through the retailer's platform or the official Prasky website. Please retain your proof of purchase for warranty claims. For more information, visit the [Prasky Store on Amazon](#).