

Manuals.plus /
› ASHATA /
› ASHATA 6-Key Programmable Macro Keyboard User Manual (Model ASHATA30hrxwkf9b)

ASHATA ASHATA30hrxwkf9b

ASHATA 6-Key Programmable Macro Keyboard User Manual

Model: ASHATA30hrxwkf9b

1. INTRODUCTION

The ASHATA 6-Key Programmable Macro Keyboard is a compact and versatile input device designed for enhanced productivity and gaming. It features six customizable keys and two rotary knobs, allowing users to program complex actions, shortcuts, and media controls. Its hot-swappable design ensures easy maintenance and personalization.

Key Features:

- **Full Key Customization:** Program single keys or complex sequences for actions like copy, paste, volume control, and more.
- **Hot-Swappable Design:** Easily replace key switches without soldering.
- **Plug and Play:** No driver installation required for basic functionality.
- **Compact and Portable:** Space-saving design with 6 keys, ideal for various desktop setups.
- **Wide Application:** Suitable for office tasks, gaming, media control, industrial applications, and testing environments.



Image 1.1: The ASHATA 6-Key Programmable Macro Keyboard connected to a laptop, demonstrating its compact form factor and the two rotary knobs. This device requires no drivers for basic operation and supports keycap replacement.

2. SETUP

Setting up your ASHATA Programmable Macro Keyboard is a straightforward process. Follow these steps to begin using your device.

2.1 Package Contents

- 1 x ASHATA 6-Key Programmable Macro Keyboard
- 1 x USB Charging/Data Cable



Image 2.1: The ASHATA 6-Key Programmable Macro Keyboard shown alongside its USB cable, which is used for both power and data connection.

2.2 Connecting the Keyboard

1. Locate the USB Type-C port on the side of the macro keyboard.
2. Connect the smaller end of the provided USB cable to the keyboard's Type-C port.
3. Connect the larger USB-A end of the cable to an available USB port on your computer.
4. The keyboard is plug-and-play and should be recognized by your operating system automatically without requiring additional drivers.



Image 2.2: A detailed view of the USB Type-C port on the side of the macro keyboard, where the data and power cable connects.

3. OPERATING INSTRUCTIONS

The ASHATA 6-Key Programmable Macro Keyboard allows for extensive customization of its keys and knobs to suit your workflow or gaming needs.

3.1 Basic Operation

Once connected, the keyboard will function with its default programmed actions. These typically include common shortcuts or media controls. The rotary knobs can be used for actions such as volume adjustment or zooming, depending on their programmed function.

ONE-CLICK TO ACHIEVE COMPLEX ACTIONS

Copy, paste, silence, go up and down, knob to adjust volume, zoom in and out, etc.



Image 3.1: A user interacting with the macro keyboard, demonstrating its use for complex actions like copy, paste, and volume adjustment via the knobs.


3.2 Customizing Button Functions

To fully utilize the programmable features, you will need to use the dedicated customization software. This software allows you to assign specific functions to each key and knob. The following steps outline a general process for customization:

1. **Connect the Keyboard:** Ensure the Type-C data cable is connected between the keyboard and your computer.
2. **Launch Software:** Open the customization software (typically available for download from the manufacturer's website).
3. **Select Key:** In the software interface, select the key you wish to customize (e.g., "Key1").
4. **Assign Action:** Choose the desired action. For complex shortcuts, you may need to select modifier keys (e.g., CTRL, SHIFT, ALT) and then the primary key. For example, to assign "Copy", you would select "CTRL" and "C".
5. **Download/Apply:** Click the "Download" or "Apply" button within the software to save the new configuration to the keyboard.

CUSTOMIZE BUTTON FUNCTIONS

1. Connect the Type C data cable
2. Click "Key1" on the software interface

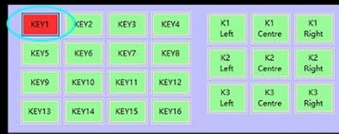

3. CLICK "CTRL SHIFT ALT", THEN CLICK "CTRL +"



4. CLICK "KEY", THEN CLICK "C"



5. CLICK "DOWNLOAD" TO COMPLETE THE CUSTOM BUTTON



Image 3.2: A visual guide demonstrating the steps to customize button functions using the dedicated software interface. This includes connecting the cable, selecting a key, assigning a function like 'Ctrl+C', and saving the changes.

4. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your ASHATA Macro Keyboard.

4.1 Cleaning

- Disconnect the keyboard from your computer before cleaning.
- Use a soft, dry cloth to wipe the surface of the keyboard.
- For stubborn dirt, a slightly damp cloth with a mild cleaning solution can be used, ensuring no liquid enters the keyboard.
- Avoid abrasive cleaners or solvents.

4.2 Hot-Swappable Switches

The keyboard features a hot-swappable design, allowing you to easily replace individual key switches without soldering. This is useful for customizing the typing feel or replacing a faulty switch.

- To remove a keycap, gently pull it upwards.
- To remove a switch, use a switch puller tool (not included) to carefully grip and pull the switch upwards from its socket.
- To install a new switch, align its pins with the holes in the PCB and press down firmly until it clicks into place. Ensure pins are not bent.
- Replace the keycap by pressing it onto the switch stem.

FULL KEY SUPPORT FOR HOT-SWAPPABLE SHAFT DESIGN

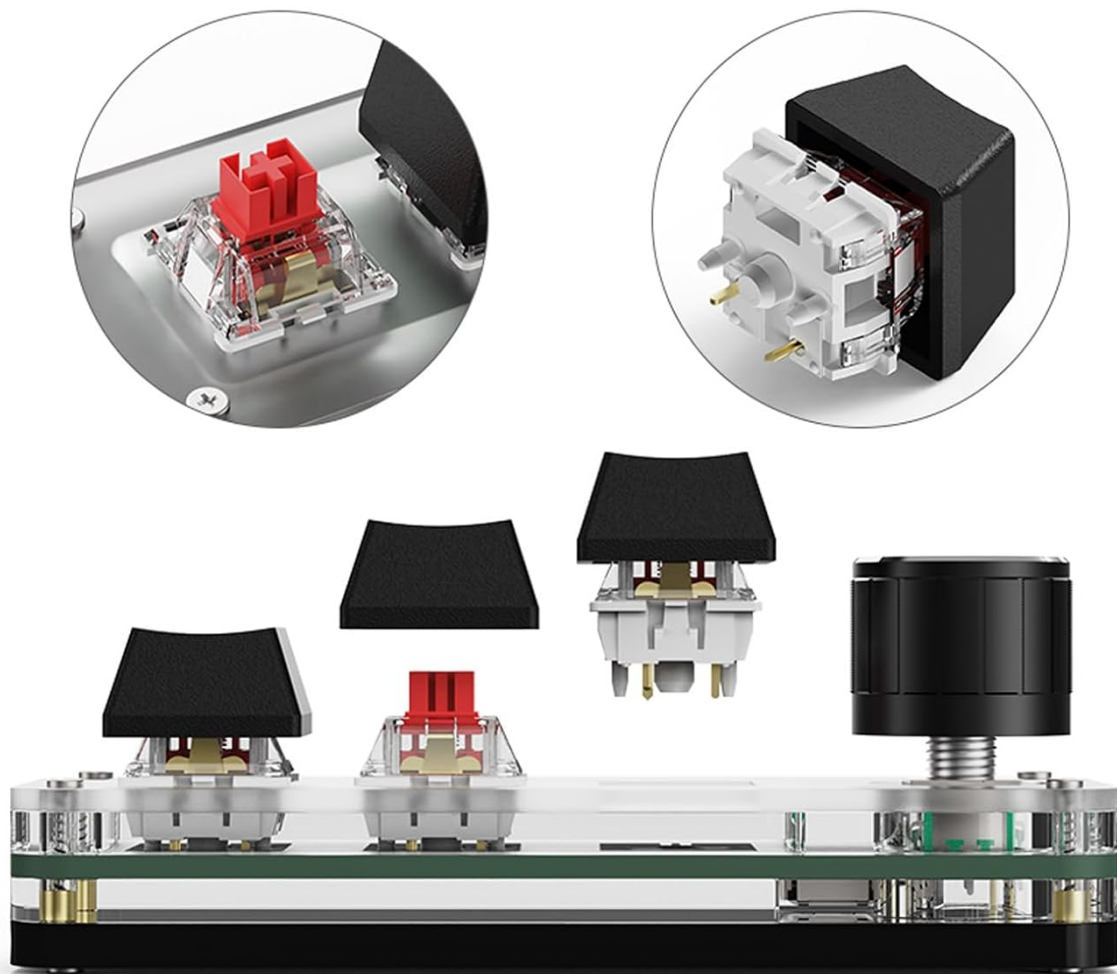


Image 4.1: An illustration detailing the hot-swappable nature of the keyboard's switches and keycaps, showing how they can be removed and replaced.

5. TROUBLESHOOTING

If you encounter issues with your ASHATA Macro Keyboard, refer to the following common problems and solutions.

5.1 Keyboard Not Recognized

- **Check Cable Connection:** Ensure the USB cable is securely connected to both the keyboard and your computer. Try unplugging and re-plugging.

- **Try Different USB Port:** Connect the keyboard to a different USB port on your computer.
- **Restart Computer:** A system restart can often resolve connectivity issues.
- **Test on Another Computer:** If possible, test the keyboard on another computer to determine if the issue is with the keyboard or your system.

5.2 Keys Not Responding

- **Check Customization:** Verify that the keys have been correctly programmed using the customization software.
- **Inspect Switches:** Due to the hot-swappable design, ensure that the key switches are fully seated in their sockets. Remove the keycap and gently press down on the switch.
- **Replace Switch:** If a specific key is not responding, the switch itself might be faulty. Consider replacing it with a new one (refer to Section 4.2).

5.3 Customization Software Issues

- **Software Version:** Ensure you are using the latest version of the customization software.
- **Administrator Privileges:** Run the software as an administrator to avoid permission-related issues.
- **Reinstall Software:** If problems persist, try uninstalling and reinstalling the customization software.

6. SPECIFICATIONS

Feature	Specification
Model Number	ASHATA30hrxwkf9b
Number of Keys	6
Product Material	Acrylic
Connectivity	USB (Type-C to Type-A cable included)
Key Features	Programmable, Hot-Swappable Switches, Plug and Play
Package Dimensions	4.72 x 3.54 x 1.97 inches (12 x 9 x 5 cm)
Item Weight	5.9 ounces (167 grams)
Manufacturer	ASHATA
Date First Available	April 8, 2025

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official ASHATA website. Warranty terms may vary by region and retailer.

If you require further assistance or have questions not covered in this manual, please contact ASHATA customer support through their official channels.

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F44GJZCY>

More documents and user manuals: <https://manuals.plus/>