

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Funscile](#) /

› [Funscile 4ft Kids Fun Pool Instruction Manual P3040412C](#)

Funscile P3040412C

Funscile 4ft Kids Fun Pool Instruction Manual

Model: P3040412C

1. PRODUCT OVERVIEW

The Funscile 4ft Kids Fun Pool, model P3040412C, is designed for outdoor water play for toddlers and young children. This compact, above-ground pool features an easy-to-assemble snap-in frame and durable materials, making it suitable for small outdoor spaces. It can also be repurposed as a sand pit or ball pit during cooler months.



Image 1.1: The Funsicle 4ft Kids Fun Pool, fully assembled and ready for use.

2. IMPORTANT SAFETY INFORMATION

WARNING: Failure to follow these instructions can result in serious injury or death.

- **Adult Supervision Required:** Always provide active adult supervision to children in and around the pool. Keep children in your direct sight.
- **No Diving or Jumping:** This is a shallow pool. Do not dive or jump into the pool.
- **Clear Area:** Ensure the pool is set up on a level surface, free from sharp objects, rocks, or debris. Maintain a clear area around the pool.
- **Water Depth:** Do not overfill the pool. The maximum recommended water depth is 10 inches (25 cm).
- **Empty When Not in Use:** Always empty the pool completely after each use to prevent accidental drowning.
- **Chemicals:** Do not use harsh chemicals in the pool. Use only water.
- **Electrical Devices:** Keep all electrical devices away from the pool area.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, do not proceed with assembly and contact customer support.

- Pool Liner (1)
- Frame Pipes (various lengths, quantity as per diagram in physical manual)
- Corner Connectors (4)
- Foot Caps (4)
- Instruction Manual (this document)

4. SETUP AND ASSEMBLY

The Funsicle 4ft Kids Fun Pool features a convenient snap-in frame design for quick and straightforward setup.

1. **Prepare the Site:** Choose a flat, level, and clear outdoor area for the pool. Remove any sharp objects, stones, or debris that could damage the pool liner.
2. **Unfold the Liner:** Carefully unfold the pool liner in the chosen area. Ensure the Funsicle logo is facing outwards.
3. **Assemble the Frame:** Insert the frame pipes into the sleeves along the top edge of the pool liner. Connect the pipes using the corner connectors, ensuring they snap securely into place.
4. **Attach Foot Caps:** Place the foot caps onto the bottom ends of the vertical frame pipes for stability and to protect the ground surface.
5. **Check Stability:** Once assembled, gently push on the frame to ensure all connections are secure and the pool structure is stable.



Image 4.1: Illustration highlighting the convenient snap-in design and durable material of the pool frame.

5. OPERATING INSTRUCTIONS

5.1. Filling the Pool

1. Ensure the pool is fully assembled and stable on a level surface.
2. Using a garden hose, slowly fill the pool with clean water.
3. Fill only to the recommended maximum water depth of 10 inches (25 cm) or to the fill line indicated on the liner, if present. Do not overfill.

5.2. Draining the Pool

1. Locate the drain plug, typically at the bottom or side of the pool liner.
2. Remove the drain plug to allow water to flow out. Direct the water to a suitable drainage area, away from foundations or areas where standing water could cause damage.
3. Once empty, wipe down the interior of the pool liner to remove any residue.

6. MAINTENANCE

6.1. Cleaning

- Regularly inspect the pool liner for dirt, leaves, or other debris. Remove these promptly.
- Wipe down the interior surfaces of the pool with a soft cloth and mild soap (if necessary) and rinse thoroughly. Avoid abrasive cleaners.

6.2. Water Care

- For hygiene, it is recommended to change the water frequently, especially after heavy use or if it appears dirty.
- Do not use pool chemicals designed for larger pools, as they may be too strong for this product and harmful to children.

7. STORAGE

Proper storage will extend the life of your Funsicle Kids Fun Pool.

1. **Clean and Dry:** After draining, thoroughly clean the pool liner and frame components. Ensure all parts are completely dry to prevent mold or mildew growth.
2. **Disassemble:** Carefully disassemble the frame by reversing the assembly steps.
3. **Fold and Store:** Fold the pool liner neatly. Store the liner and frame components in a cool, dry place, away from direct sunlight and extreme temperatures. Keep away from rodents and insects.

8. TROUBLESHOOTING

- **Water Leakage:**

Possible Cause: Puncture in the liner or loose drain plug.

Solution: Inspect the liner for small holes. If found, use a vinyl repair kit (not included) to patch. Ensure the drain plug is securely closed.

- **Unstable Frame:**

Possible Cause: Frame pipes not fully snapped into connectors or uneven ground.

Solution: Recheck all frame connections to ensure they are secure. Move the pool to a more level surface.

- **Water Not Draining:**

Possible Cause: Drain plug obstructed or clogged.

Solution: Ensure the drain plug is fully open and clear of debris.

9. PRODUCT SPECIFICATIONS

Feature	Specification
Brand	Funsicle
Model Number	P3040412C
Product Dimensions	48" L x 48" W x 12" H (122cm L x 122cm W x 30cm H)
Shape	Square

Capacity	71 Gallons (approx. 269 Liters)
Material	Polyvinyl Chloride (PVC) - 3-ply Toughmesh™
Color	Heavenly Blue
Item Weight	18.6 Pounds (approx. 8.4 kg)
Assembly Required	Yes
Indoor/Outdoor Usage	Outdoor
UPC	195545017207

10. WARRANTY AND CUSTOMER SUPPORT

For warranty information, missing parts, or customer support inquiries, please refer to the contact details provided on the product packaging or visit the official Funsicle website. Keep your purchase receipt as proof of purchase.