

[Manuals.plus](#) /

› [HOUSBRUSH](#) /

› HOUSBRUSH U9 Cordless Vacuum Cleaner User Manual

HOUSBRUSH U9

HOUSBRUSH U9 Cordless Vacuum Cleaner User Manual

Model: U9

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Retain this manual for future reference.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

2. PRODUCT OVERVIEW

The HOUSBRUSH U9 is a versatile cordless stick vacuum cleaner designed for efficient cleaning across various surfaces. It features a lightweight design, powerful suction, and a multi-layer filtration system.



This image displays the HOUSBRUSH U9 cordless vacuum cleaner in its full stick configuration, along with its handheld mode and included accessories like the crevice tool and 2-in-1 brush.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

Ultra-flexible Head

Maneuvers corners with ease



180°
left&right



90°
up&down



This image displays all the components included in the package: crevice nozzle, 2-in-1 brush, electric floor brush, two HEPA filters, power adapter, wall bracket, adjustable metal tube, and the main engine.

1. Main Engine (Vacuum Unit)
2. Adjustable Metal Tube
3. Electric Floor Brush with S-Shape Anti-tangle Design
4. Crevice Nozzle
5. 2-in-1 Multifunctional Brush
6. HEPA Filter (x2)
7. Power Adapter
8. Wall Bracket

4. ASSEMBLY

Follow these steps to assemble your HOUSBRUSH U9 Cordless Vacuum Cleaner:

1. **Attach the Metal Tube:** Insert the adjustable metal tube into the main engine until it clicks securely into place.
2. **Connect the Floor Brush:** Attach the electric floor brush to the other end of the metal tube, ensuring it locks firmly.
3. **Install Battery (if separate):** If the battery is not pre-installed, slide it into the designated slot on the main engine until it clicks.
4. **Optional Attachments:** For handheld use or specific cleaning tasks, detach the metal tube and floor brush, then connect the crevice nozzle or 2-in-1 brush directly to the main engine.

5. CHARGING THE BATTERY

Before first use, fully charge the vacuum cleaner for optimal performance.

1. Connect the power adapter to the charging port on the main engine.
2. Plug the adapter into a wall outlet.
3. The charging indicator light will illuminate, typically showing charging status (e.g., blinking while charging, solid when fully charged).
4. Once fully charged, disconnect the power adapter.

Note: Do not leave the vacuum charging for extended periods after it is fully charged to prolong battery life. If the vacuum will not be used for a long time, charge it periodically.

6. OPERATION

6.1 Power On/Off and Suction Control

Press the power button on the main engine to turn the vacuum on. The HOUSBRUSH U9 operates with a single power level, providing consistent suction for various cleaning tasks. Press the power button again to turn it off.

6.2 Self-Standing Feature

The vacuum is designed with a self-standing mechanism, allowing it to stand upright independently. This feature is useful for pausing during cleaning or for convenient storage without needing to lean it against a wall.




The vacuum is shown standing upright independently, demonstrating its self-standing capability for convenient pausing during cleaning.

6.3 Using Attachments

The HOUSBRUSH U9 comes with versatile attachments for different cleaning needs:

- **Electric Floor Brush:** Ideal for cleaning carpets, hard floors, and tiles. Its S-shape anti-tangle design helps prevent hair from wrapping around the brush roll.
- **Crevice Nozzle:** Use for narrow gaps, corners, and hard-to-reach areas like between sofa cushions or car seats.
- **2-in-1 Multifunctional Brush:** Suitable for cleaning delicate surfaces, upholstery, keyboards, and desktops.

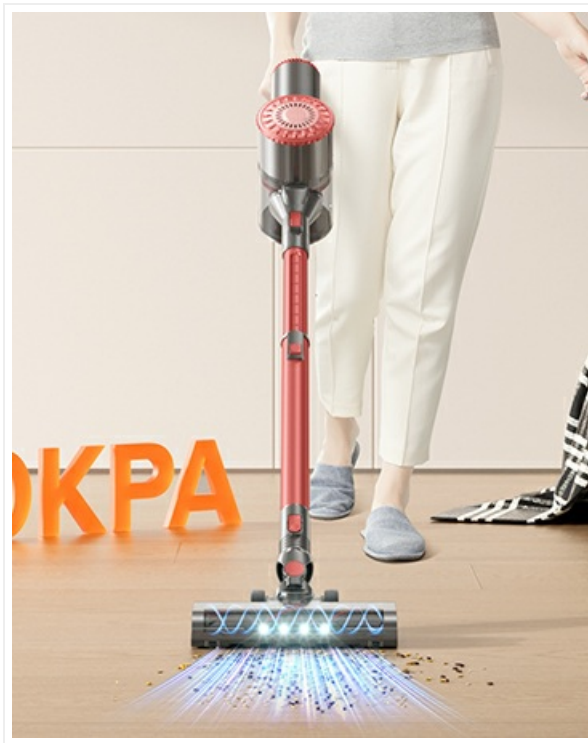


A user is shown cleaning a keyboard with the vacuum in handheld mode, utilizing a brush attachment for detailed cleaning.



A user is depicted cleaning a sofa with the vacuum in handheld mode, using the crevice tool to reach tight spaces and remove pet hair.

6.4 Flexible Head Maneuverability

 The vacuum's floor brush head offers enhanced flexibility, allowing it to swivel 180 degrees left and right, and 90 degrees up and down. This enables easy navigation around furniture and access to low-clearance areas.



This image illustrates the ultra-flexible head of the vacuum, capable of maneuvering 180 degrees horizontally and 90 degrees vertically, allowing easy cleaning under furniture and around corners.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the MAX line is reached, to maintain suction power.

1. Hold the main engine over a trash can.
2. Press the dustbin release button (usually located near the bottom of the dustbin) to open the lid and empty the contents.
3. Close the dustbin lid securely until it clicks.



A visual guide demonstrating how to hygienically empty the dustbin with a single touch, showing debris falling into a trash can.

7.2 Cleaning Filters

The HOUSBRUSH U9 features a 7-layer filtration system, including a HEPA filter. Clean the filters regularly to prevent clogging and maintain suction.




An exploded view diagram illustrating the seven layers of the vacuum's filtration system, including the dust cup, metal filter, cyclone filtration, secondary cyclone filtration, high-efficiency filter cotton, built-in sponge, and air outlet filtration system.

1. Twist and pull to remove the filter assembly from the dustbin.
2. Separate the HEPA filter and other filter components.
3. Tap off loose dirt over a trash can.
4. Rinse the washable filters under cold running water until the water runs clear. Do not wash the main engine or battery.
5. Allow all filter components to air dry completely for at least 24 hours before reassembling and placing them back into the vacuum. Ensure they are completely dry to prevent mold or damage.

7.3 Cleaning the Brush Roll

The S-shape anti-tangle brush roll minimizes hair wrapping, but occasional cleaning may still be necessary.

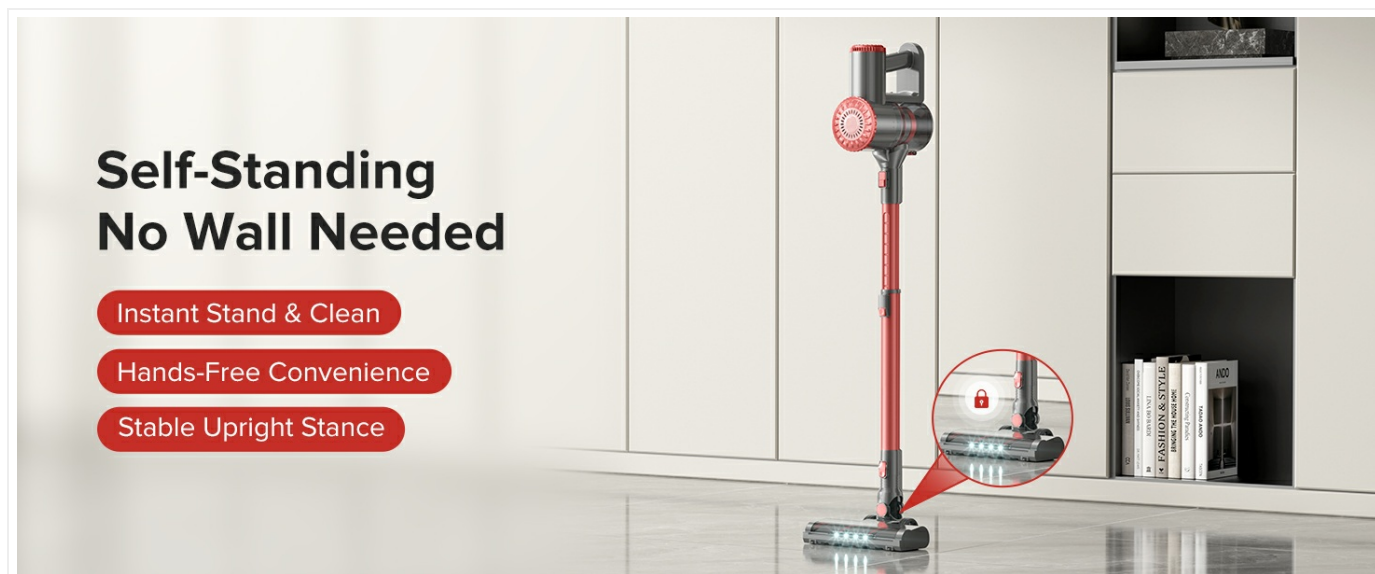

This image highlights the S-shaped anti-tangle brush design of the U9 model, contrasting it with a traditional brush roll to illustrate its effectiveness in preventing hair entanglement.

1. Turn off the vacuum and disconnect it from any power source.
2. Locate the brush roll cover on the bottom of the electric floor brush.
3. Use a coin or screwdriver to unlock the brush roll cover.
4. Remove the brush roll.
5. Carefully remove any tangled hair or debris from the brush roll using scissors or your fingers.
6. Reinsert the brush roll and secure the cover.

8. TROUBLESHOOTING

If you encounter issues with your HOUSBRUSH U9, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure the battery is fully charged and correctly inserted into the main engine.

Problem	Possible Cause	Solution
Reduced suction power.	Dustbin is full, filters are clogged, or an attachment/hose is blocked.	Empty the dustbin. Clean or replace the filters. Check for and remove any blockages in the floor brush, tube, or attachments.
Brush roll not spinning.	Hair or debris tangled in the brush roll, or brush roll is jammed.	Turn off the vacuum and remove any obstructions from the brush roll. Refer to the 'Cleaning the Brush Roll' section.
Vacuum stops during operation.	Battery is depleted or vacuum is overheating.	Recharge the battery. If overheating, turn off the vacuum and allow it to cool down for at least 30 minutes before resuming use. Check for blockages that might cause overheating.

9. SPECIFICATIONS

Feature	Detail
Brand	HOUSBRUSH
Model Number	U9
Special Features	Anti-Tangle Design, Lightweight, Self-Standing
Filter Type	HEPA Filter (7-Layer Filtration)
Cordless	Yes
Recommended Uses	Carpet, Hard Floor
Portability	Portable
Number of Power Levels	1
Indoor/Outdoor Usage	Indoor
Product Dimensions	10.8 x 5.5 x 17.5 inches
Item Weight	6.59 pounds
UPC	702367886296

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact HOUSBRUSH customer service. Contact details can typically be found on the manufacturer's official website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

How do I change the battery on the HOUSBRUSH U9 Cordless Vacuum Cleaner?

The provided manual for the HOUSBRUSH U9 Cordless Vacuum Cleaner does not contain specific instructions on how to change the battery. However, it does mention battery installation during assembly: Install Battery (if separate): If...

[Read full answer](#)

Why are both lights flashing on my HOUSBRUSH U9 cordless vacuum, and why is it not working?

When the lights on your HOUSBRUSH U9 are flashing and the vacuum is not operating, it typically indicates a battery, charging, or safety protection issue. Based on the manual, please check the following: Battery...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B0F47GSXNL>

More documents and user manuals: <https://manuals.plus/>