

[manuals.plus](#) /

› [ALLSTAND](#) /

› [ALLSTAND 63-inch Floating TV Stand with Doors Instruction Manual \(Model FAST0146ABRUSY\)](#)

ALLSTAND FAST0146ABRUSY

ALLSTAND 63-inch Floating TV Stand with Doors Instruction Manual

Model: FAST0146ABRUSY

Brand: ALLSTAND

INTRODUCTION

This manual provides comprehensive instructions for the assembly, installation, operation, and maintenance of the ALLSTAND 63-inch Floating TV Stand with Doors, Model FAST0146ABRUSY. Designed for TVs up to 80 inches, this wall-mounted entertainment center offers two tiers of storage with barn-door style cabinets. Please read all instructions carefully before beginning assembly and installation.



Figure 1: The ALLSTAND 63-inch Floating TV Stand with Doors.

SAFETY INFORMATION

WARNING:

- Always ensure the product is securely mounted to a suitable wall structure (brick, wooden, or concrete wall). Avoid mounting on plasterboard walls without proper reinforcement.
- Do not exceed the maximum weight capacity of 110 lbs (50 kg) for the TV stand.
- Exercise caution during transportation and assembly. Inspect packaging for damage upon receipt. If damage is observed, refuse delivery or contact customer support immediately.
- Use appropriate tools and follow all assembly steps to prevent injury or damage to the product.
- Keep small parts and packaging materials away from children to prevent choking hazards.

Carries up to 110lbs

It is constructed from high-density wood panels that are not only lightweight but also possess an impressive load bearing capacity of up to 110 lbs.



Figure 2: The TV stand is constructed from high-density wood panels and can support up to 110 lbs.

PARTS LIST

Before assembly, verify that all components listed below are present and undamaged. Refer to the included assembly diagram for visual identification.

- Top Panel (1)
- Bottom Panel (1)
- Side Panels (2)
- Middle Divider Panels (2)
- Adjustable Shelf (1)
- Barn-Door Style Cabinet Doors (2)
- Door Handles (2)
- Mounting Brackets (Metal)
- Wall Anchors (for various wall types)
- Screws (various sizes)
- Screwdriver (1)

- Allen Wrench (1)



Figure 3: Exploded view of the TV stand components, highlighting storage areas.

SETUP AND ASSEMBLY

Assembly typically takes approximately 30-60 minutes. Two individuals are recommended for the wall mounting process to ensure stability and safety.

Tools Required (Included):

- Screwdriver
- Allen Wrench

Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out. Match each part to the provided parts list and assembly diagram.
2. **Assemble the Main Frame:** Connect the side panels and middle dividers to the bottom panel using the provided screws and metal joints. Ensure all connections are secure.
3. **Install the Top Panel:** Attach the top panel to the assembled frame. The top panel features pre-drilled holes for cable management.
4. **Attach Cabinet Doors:** Install the barn-door style cabinet doors. These doors feature magnetic closures for secure storage.
5. **Install Adjustable Shelf:** Place the adjustable shelf in the central open compartment at your desired height.
6. **Prepare for Wall Mounting:**
 - Identify suitable wall type: This unit is designed for brick, wooden, or concrete walls. **Do not mount directly onto plasterboard without additional structural support.**
 - Determine mounting height: Consider the optimal viewing height for your TV.
 - Mark drilling points: Use the pre-installed metal mounting brackets on the back of the TV stand

as a template to mark the drilling locations on your wall. Ensure marks are level.

7. **Drill Holes and Insert Anchors:** Drill holes at the marked locations. Insert the appropriate wall anchors for your wall type.
8. **Mount the TV Stand:** With assistance, carefully lift the assembled TV stand and align the mounting brackets with the installed wall anchors. Secure the unit to the wall using the provided screws. Ensure the stand is level and firmly attached.

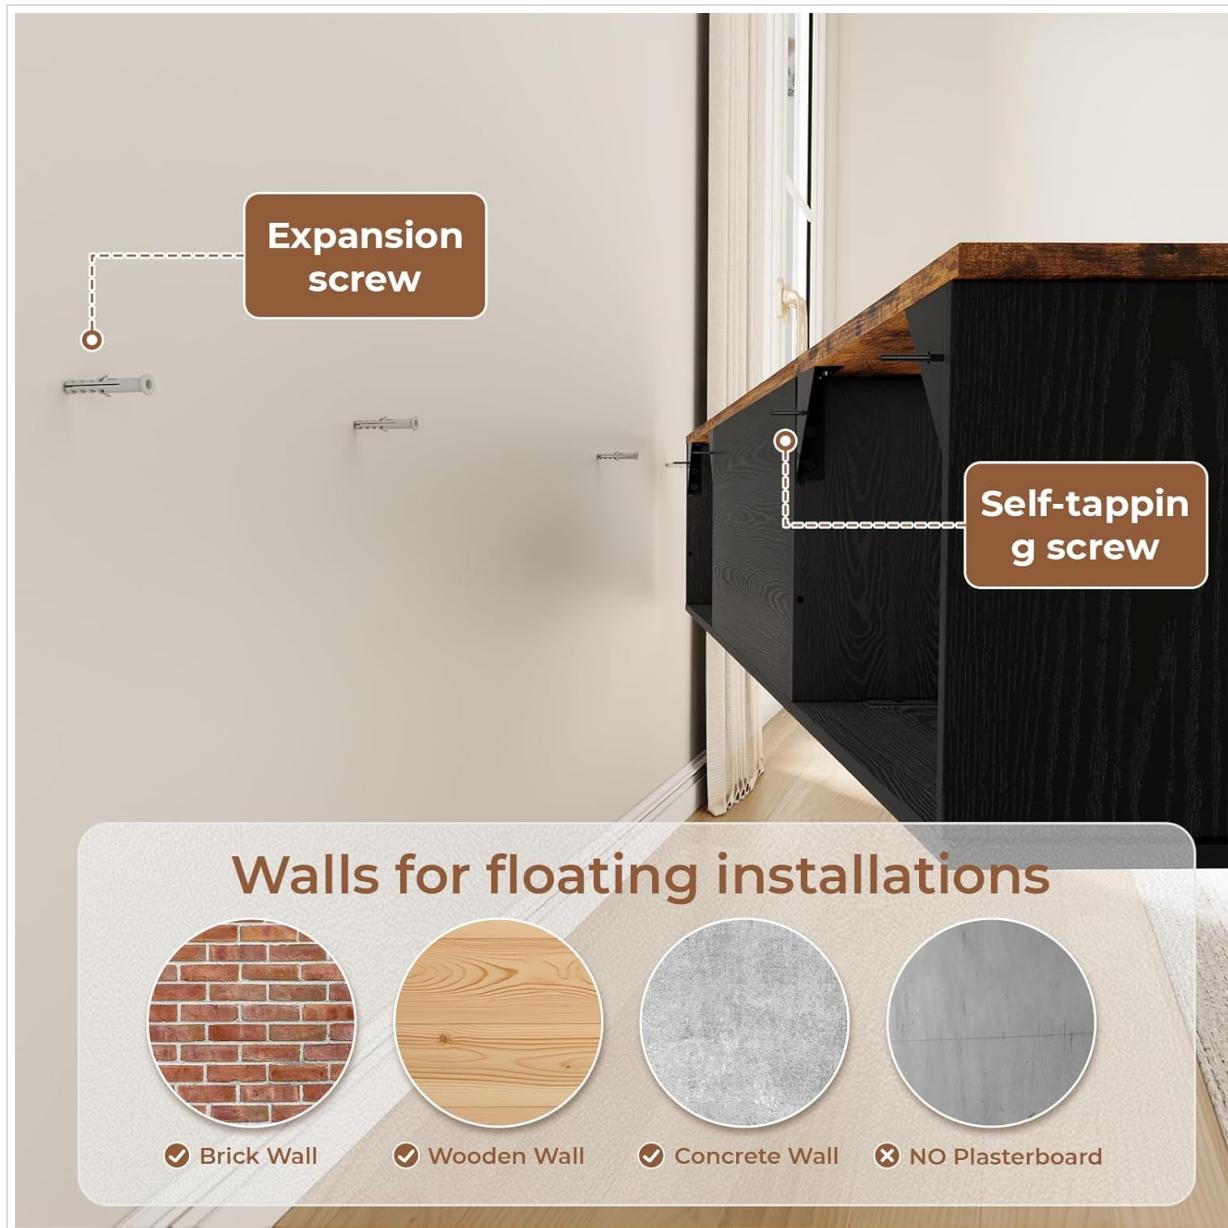


Figure 4: Wall compatibility for mounting. Ensure your wall type is suitable for secure installation.

Your browser does not support the video tag.

Video 1: Overview of the ALLSTAND Floating TV Stand, highlighting features and assembly process.

OPERATING INSTRUCTIONS

The ALLSTAND Floating TV Stand is designed for convenient storage and display of your entertainment devices.

- **Open Storage:** The central open compartments are ideal for media players, gaming consoles, or decorative items.
- **Concealed Storage:** The two side cabinets with barn-door style doors provide hidden storage for items

you wish to keep out of sight. The magnetic closures ensure doors remain shut.

- **Cable Management:** Utilize the pre-drilled holes on the top and shelves to route and organize cables, maintaining a tidy appearance.



Figure 5: Detail of cable management features and magnetic door design.

Your browser does not support the video tag.

Video 2: Demonstration of the 63-inch Floating TV Shelf's storage and design elements.

MAINTENANCE

To maintain the appearance and longevity of your ALLSTAND Floating TV Stand, follow these simple care instructions:

- **Cleaning:** Wipe the surfaces with a damp cloth. Avoid using harsh chemicals or abrasive cleaners, which can damage the finish.
- **Dusting:** Regularly dust with a soft, dry cloth.
- **Inspection:** Periodically check all screws and mounting hardware to ensure they remain tight and secure. Tighten as necessary.

TROUBLESHOOTING

If you encounter any issues during or after installation, please refer to the following common solutions:

- **Unit is not level:** Re-check the wall markings and adjust the mounting points as needed. Ensure the wall anchors are properly installed and secure.
- **Doors do not close properly:** Verify that the magnetic closures are correctly aligned and that no obstructions are preventing the doors from fully closing.
- **Wobbly or insecure:** Ensure all screws are tightened, and the unit is firmly anchored to the wall studs or appropriate wall anchors. If using drywall anchors, consider upgrading to heavy-duty anchors if the provided ones feel insufficient for your specific wall condition.

For further assistance, please contact ALLSTAND customer support.

SPECIFICATIONS

Model Number	FAST0146ABRUSY
Dimensions (L x W x H)	62.99 x 11.8 x 11.6 inches
Item Weight	42.8 pounds
Material	Wood
Color	Black (with wood grain top)
Number of Shelves	2 (open compartments)
Max TV Size Supported	Up to 80 inches
Weight Capacity	110 lbs
Special Features	Anti-Tipping, Dent Resistant, Dustproof, Fade Resistant, Fire Resistant, Cable Management
Product Care	Wipe with Damp Cloth



Figure 6: Dimensions of the TV stand and supported TV sizes.

SUPPORT

For any questions, concerns, or assistance with your ALLSTAND Floating TV Stand, please contact our customer support team. We are committed to resolving any issues within 24 hours.

Note: This product does not include an explicit manufacturer's warranty beyond standard consumer rights. Third-party protection plans may be available for purchase separately.