

Outsunny A20-387V00GY

Outsunny Family Camping Tent User Manual

Model: A20-387V00GY | **Brand:** Outsunny

1. INTRODUCTION

Thank you for choosing the Outsunny Family Camping Tent. This tent is designed for 4-5 people, featuring two separate rooms and a central living area, offering comfort and protection for your outdoor adventures. With a 3000 mm waterproof rating and excellent ventilation, it is suitable for various weather conditions. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure you get the most out of your tent.

2. SAFETY INSTRUCTIONS

Please read and understand all safety instructions before setting up and using the tent. Failure to follow these instructions may result in injury or damage to the product.

- **Fire Safety:** Keep all flame and heat sources away from the tent fabric. The tent is not fireproof.
- **Ventilation:** Ensure adequate ventilation, especially when using cooking equipment or heaters inside the tent, to prevent carbon monoxide buildup.
- **Weather Conditions:** Do not set up the tent in extreme weather conditions such as strong winds, heavy rain, or lightning. Securely stake and guy out the tent in moderate conditions.
- **Site Selection:** Choose a flat, clear area free of sharp objects, rocks, and debris. Avoid setting up under trees with dead branches.
- **Children:** Keep children away from the tent during setup and takedown. Supervise children at all times when they are inside or around the tent.
- **Structural Integrity:** Do not modify the tent structure or use it for purposes other than intended.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- 1 x Outsunny Family Camping Tent
- Support Poles (Fiberglass)
- 16 x Ground Stakes
- 8 x Guy Ropes
- 1 x Carry Bag
- 1 x Illustrated Assembly Manual



Description: An image of the product's shipping box, clearly marked with '1x PAQUET' (1x PACKAGE), indicating the number of items in the shipment.

4. SETUP INSTRUCTIONS

Follow these steps for easy and quick assembly of your Outsunny Family Camping Tent:

1. **Unpack and Lay Out:** Remove all components from the carry bag. Lay the tent fabric flat on your chosen campsite, ensuring the floor is spread out evenly.
2. **Assemble Poles:** Connect the fiberglass pole sections. Identify the different pole lengths and colors (if applicable) and match them to the corresponding sleeves on the tent fabric.
3. **Insert Poles:** Slide the assembled poles through the fabric sleeves. Be careful not to snag the fabric.
4. **Raise the Tent:** Once all poles are in place, gently lift the tent structure. Insert the ends of the poles into the grommets or pin-and-ring systems at the base of the tent.
5. **Secure with Stakes:** Drive the ground stakes through the tent's corner loops and along the base to secure it to the ground. Use a mallet if necessary.
6. **Attach Guy Ropes:** Extend the guy ropes from the designated attachment points on the tent and stake them firmly into the ground at an angle, away from the tent. Adjust the tensioners to make the tent taut and stable.
7. **Set Up Interior:** Once the main structure is stable, you can set up the interior. The tent features two separate bedrooms and a central living area.



Description: This image shows the Outsunny family camping tent from the front, highlighting its grey and white design and overall structure.



Chambre
à coucher


3 000 mm Étanchéité

Chambre
à coucher

Salon

ABRI DE CAMPING PROTECTEUR À TROIS PIÈCES

Description: This diagram illustrates the internal layout of the tent, featuring two separate sleeping chambers and a central living space, providing ample room for families.

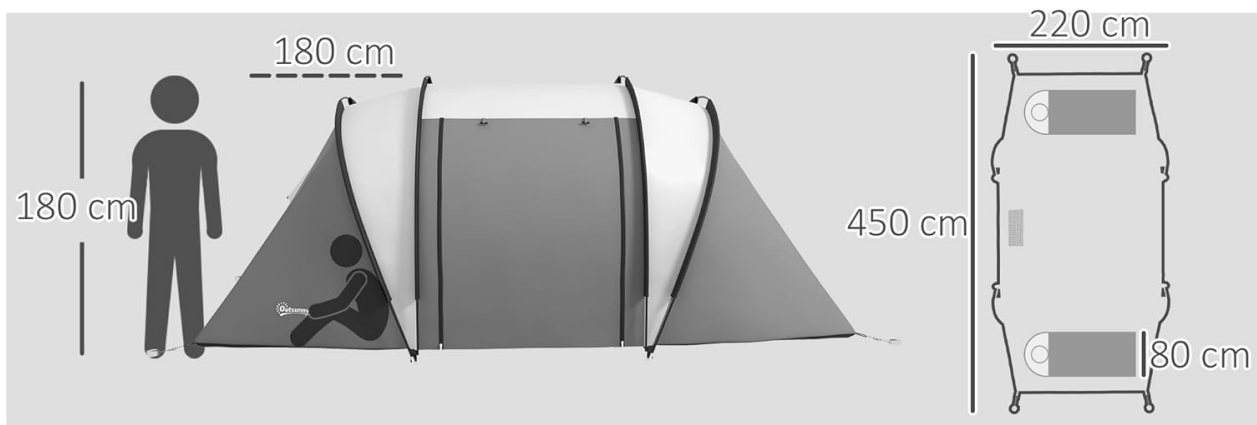

Description: A technical drawing providing precise measurements of the tent, including its length, width, and height, along with internal room dimensions.

5. OPERATING THE TENT

Your Outsunny tent is designed for comfort and convenience. Here's how to utilize its features:

- **Doors:** The tent features three doors: one for the central living area and one for each of the two bedrooms. Use the zippers to open and close them.
- **Windows:** Mesh windows provide optimal ventilation and light. They can be covered with fabric flaps for privacy or protection from rain.
- **Ventilation:** Ensure proper airflow by keeping mesh windows open when weather permits. This helps reduce condensation inside the tent.
- **Lantern Hook:** A central hook is provided in the living area for hanging a camping lantern, illuminating your space at night.

TROIS PORTES



Description: The image details the tent's three access points: one main door for the living area and two additional doors for each bedroom, enhancing accessibility and ventilation.

DÉTAILS INTÉRIEURS



Description: This view highlights interior features such as mesh windows for airflow, a central hook for hanging a lantern, and the durable, waterproof floor designed to keep the interior dry.

6. MAINTENANCE

Proper care and maintenance will extend the life of your tent:

- **Cleaning:** Clean the tent with a soft sponge and mild soap (non-detergent) and lukewarm water. Do not use harsh chemicals, bleach, or washing machines, as this can damage the waterproof coating.
- **Drying:** Always ensure the tent is completely dry before packing it away. Packing a damp tent can lead to mildew, mold, and fabric degradation. Air dry in a shaded, well-ventilated area.
- **Storage:** Store the tent in its carry bag in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Pole Care:** Inspect poles for cracks or damage before and after each use. Clean any dirt from pole sections.
- **Zipper Care:** Keep zippers clean and free of dirt. Lubricate with a silicone-based spray if they become stiff.

PORTABLE AVEC SAC

Emballé dans un sac à double
poignée facile à transporter



16 piquets de terre et
8 cordes de haubanage inclus



Description: The tent is shown packed in its double-handled carry bag, being easily transported by a person, emphasizing its portability and the inclusion of stakes and guy ropes.

7. TROUBLESHOOTING

Here are solutions to common issues you might encounter:

- **Condensation Inside Tent:** Ensure proper ventilation by opening mesh windows and doors when conditions allow. Condensation is natural and can be reduced by airflow.
- **Tent Not Standing Firmly:** Check that all poles are fully assembled and correctly inserted into their sleeves and grommets. Ensure all stakes are driven firmly into the ground and guy ropes are taut and properly angled.
- **Water Leaks:** While the tent is 3000 mm waterproof, extreme conditions or improper setup can lead to leaks. Check for tears in the fabric or seams. Ensure all zippers are fully closed. Re-apply seam sealer if necessary.
- **Difficulty Zipping:** Clean the zipper teeth. If still stiff, apply a small amount of zipper lubricant or silicone spray.

8. SPECIFICATIONS

Feature	Detail
Model Number	A20-387V00GY
Brand	Outsunny
Occupancy	4-5 People
Product Dimensions (L x W x H)	450 x 220 x 180 cm (177.2 x 86.6 x 70.9 inches)
Item Weight	8.4 Kilograms (18.5 lbs)
Color	Grey
Main Material	Polyester
Water Resistance Level	3000 mm
Seasons	3 Season
UV Protection	Yes
Special Features	Carry bag included, 3000 mm water resistant, Good ventilation, Spacious, Lantern hook
Components Included	Guy ropes, Carry bag, Support poles, Tent stakes

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Outsunny website. Keep your proof of purchase for any warranty claims.