

[Manuals.plus](#) /

› [Lefant](#) /

› Lefant M210 Robot Vacuum Cleaner Instruction Manual

Lefant M210



Lefant M210 Robot Vacuum Cleaner

INSTRUCTION MANUAL

Introduction

The Lefant M210 Robot Vacuum Cleaner is designed to provide efficient and convenient floor cleaning for your home. Featuring a compact design, powerful suction, and smart control options, it is ideal for managing pet hair and maintaining hard floors. This manual provides essential information for setting up, operating, and maintaining your robot vacuum.



Figure 1: Lefant M210 Robot Vacuum Cleaner with included accessories.

Setup

1. **Unpack Components:** Carefully remove all components from the packaging. Ensure you have the robot vacuum, charging adapter, docking station, side brushes, and filter.
2. **Install Side Brushes:** Attach the side brushes to the designated posts on the underside of the robot vacuum until they click into place.
3. **Position Charging Dock:** Place the charging dock against a wall in an open, uncluttered area. Ensure there is at least 0.5 meters (1.6 feet) of clear space on either side and 1.5 meters (4.9 feet) in front of the dock. Plug the charging adapter into the dock and a power outlet.
4. **Initial Charge:** Place the robot vacuum onto the charging dock. The indicator light will show charging status. For first use, fully charge the robot (approximately 4-5 hours).
5. **Download Lefant App:** Scan the QR code in the manual or search for "Lefant" in your mobile app store to download the official app. Follow the in-app instructions to connect your M210 to your 2.4 GHz Wi-Fi network. *Note: The M210*

only supports 2.4 GHz Wi-Fi.

Your browser does not support the video tag.

Video 1: "Lefant M210 Robot Vacuum - Your Smart Cleaning Assistant!" - This video demonstrates the initial setup and key features of the M210 robot vacuum.

Operating the Robot Vacuum

The Lefant M210 offers various cleaning modes and control options for a customized cleaning experience.

1. Power On/Off

- **Power On:** Press the power button on the robot or use the Lefant app.
- **Power Off:** Press and hold the power button until the indicator light turns off, or use the app.

2. Cleaning Modes

Select the appropriate cleaning mode via the Lefant app or by pressing the power button on the robot to cycle through modes.

- **Zigzag Mode:** Cleans in an efficient S-shaped pattern, covering large open areas.
- **Random Mode:** Navigates randomly, suitable for complex layouts or when a thorough, non-linear clean is desired.
- **Spot Mode:** Focuses on a specific dirty area, cleaning in a spiral pattern.
- **Edge Mode:** Cleans along walls and furniture edges to ensure no dust is missed.
- **Scheduled Cleaning:** Set specific times for the robot to automatically start cleaning.
- **Manual Control:** Use the app's remote control feature to direct the robot manually.

Powerful brushless suction port

The suction port with strong suction can clean all hair and dust



Figure 2: Illustration of the various cleaning modes available on the M210.

3. Smart App & Voice Control

Enhance your cleaning experience using the Lefant app or voice commands.

- **Lefant App:** Monitor cleaning paths, schedule cleaning tasks, adjust suction levels, and switch between cleaning modes.
- **Voice Control:** Compatible with Amazon Alexa and Google Assistant. Link your Lefant account to your smart home device to start or stop cleaning with simple voice commands (e.g., "Alexa, turn on the M210 robot").

Upgraded FreeMove Technology 3.0



Figure 3: Control your M210 via the Lefant app or voice assistants.

Your browser does not support the video tag.

Video 2: "App Control Makes Your Cleaning Easier" - This video highlights the convenience of controlling the M210 through its dedicated mobile application.

Your browser does not support the video tag.

Video 3: "Quiet Robot Vacuum Ideal for Pet Family" - Demonstrates the M210's quiet operation and effectiveness, particularly for homes with pets.

Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your Lefant M210.

1. Emptying the Dustbin

- The M210 features a 500ml large dust box. It is recommended to empty the dustbin after each cleaning cycle, especially if you have pets.
- To empty, open the top cover of the robot, remove the dustbin, and dispose of collected debris.

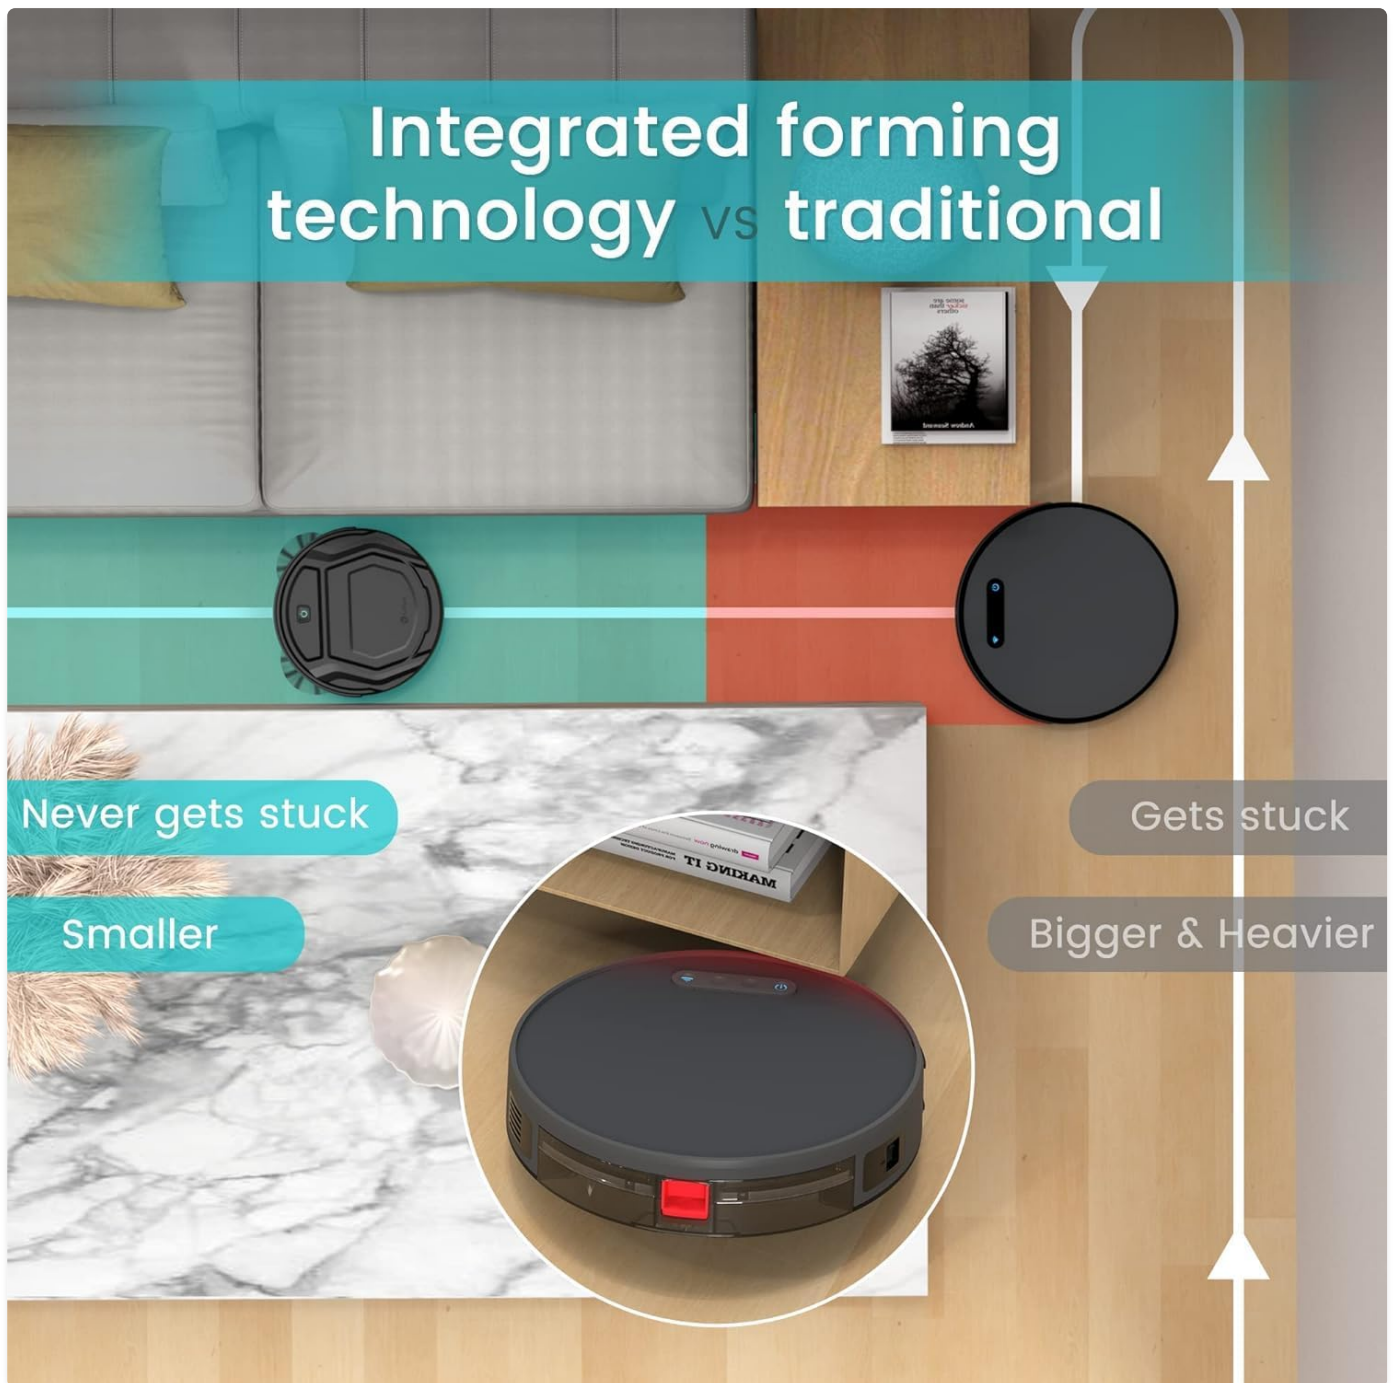


Figure 4: The 500ml large dust box design for easy emptying.

2. Cleaning the Filter

- The robot uses HEPA filtration. Tap the filter gently to remove loose dirt. For deeper cleaning, rinse the filter with water and allow it to air dry completely before reinserting.

3. Cleaning Brushes and Suction Port

- The M210 features a unique brushless suction port and dual side brushes. This design minimizes hair tangling, making it ideal for pet owners.
- Regularly check and clean the side brushes for any tangled hair or debris.
- Inspect the suction port to ensure it is clear of obstructions for optimal performance.

Tangle-Free Vacuuming

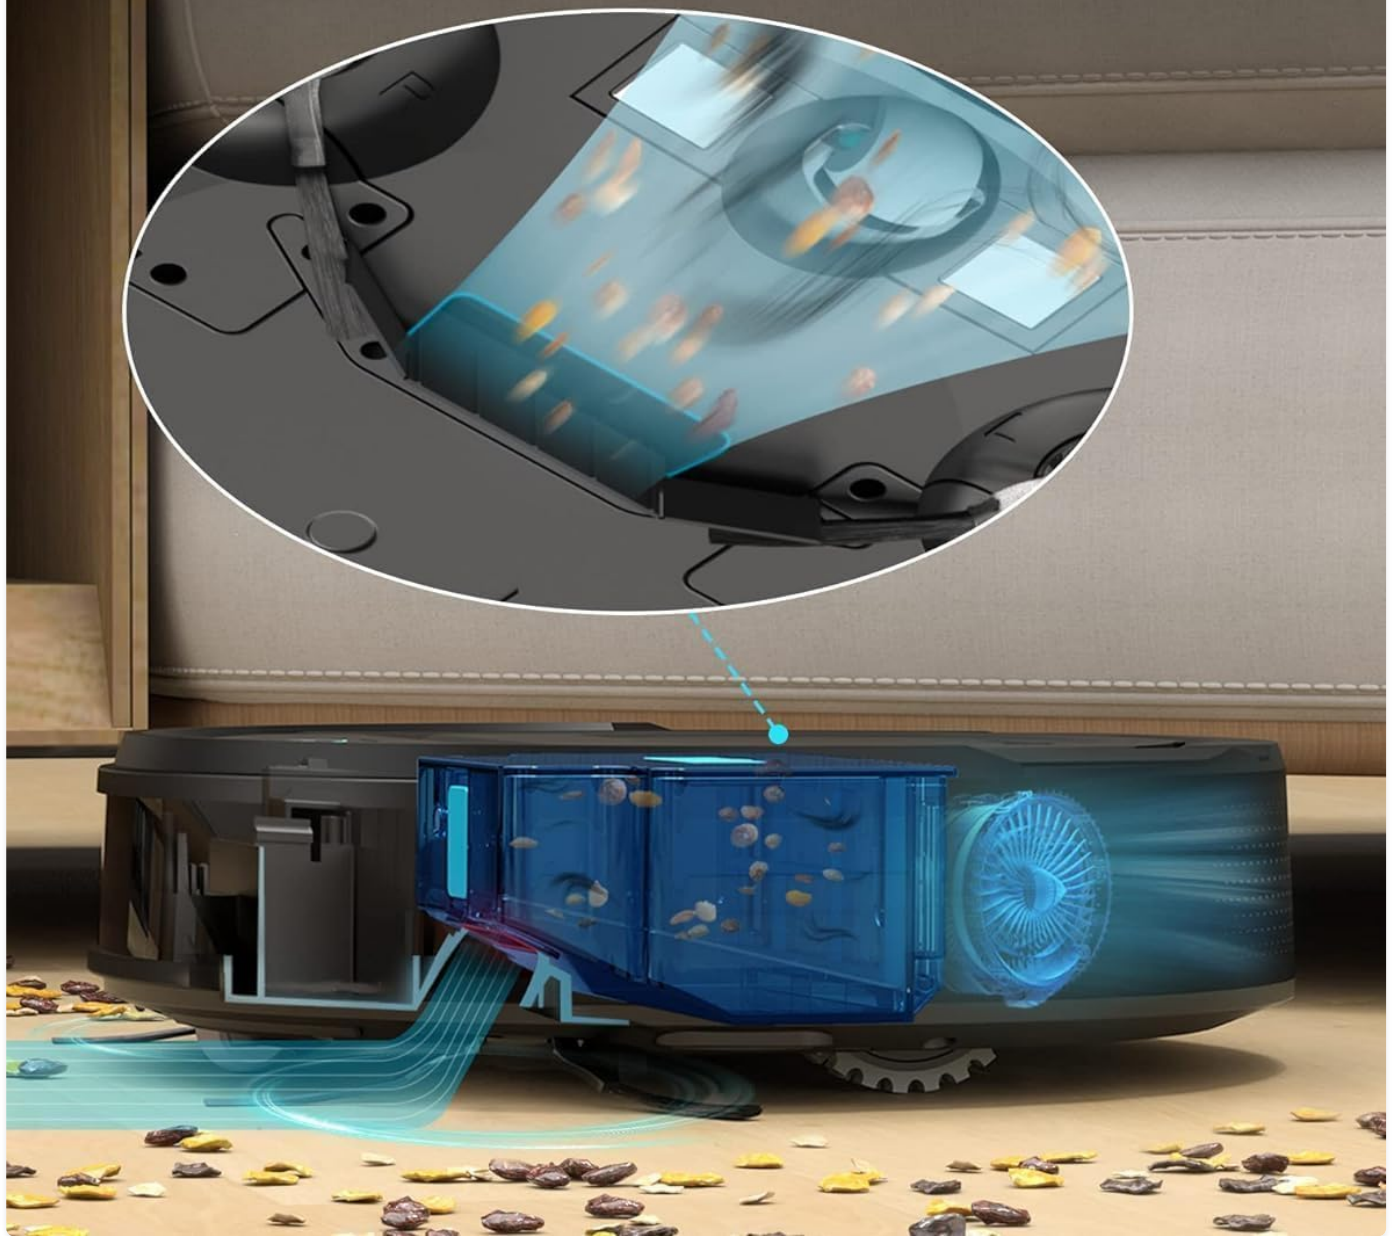


Figure 5: The tangle-free suction port design effectively collects hair and debris.

Long Battery Life

$120m^2$
 $120min$



Figure 6: The powerful brushless suction port and dual side brushes ensure thorough cleaning.

Troubleshooting

If you encounter issues with your Lefant M210, refer to the following common solutions:

- **Robot gets stuck frequently:** The M210 is equipped with Upgraded FreeMove Technology 3.0 to prevent getting stuck. Ensure the cleaning area is free of excessive cables, small objects, or high thresholds that might impede movement.
- **Robot does not charge:** Ensure the charging dock is properly plugged in and the robot is correctly aligned with the charging contacts. Clean the charging contacts on both the robot and the dock if they appear dirty.
- **Wi-Fi connection issues:** Confirm your home Wi-Fi network is 2.4 GHz. The M210 does not support 5 GHz networks. Ensure the robot is within range of your Wi-Fi router.
- **Reduced suction power:** Empty the dustbin and clean the HEPA filter. Check the suction port and side brushes for any blockages or tangled hair.



Figure 7: FreeMove Technology 3.0 helps the M210 navigate and avoid getting stuck.

Specifications

Feature	Detail
Brand	Lefant
Model Name	M210
Special Feature	Edge Cleaning, Anti-Fall, Pet Hair Pick Up, Low Noise, Auto-Docking
Color	Black
Product Dimensions	11"L x 11"W x 2.99"H
Included Components	Filter, Battery, Charging Adapter, Docking Station, Side Brush
Filter Type	HEPA Filtration
Battery Life	120 minutes
Voltage	12.8 Volts
Capacity (Dustbin)	500 Milliliters
Power Source	Battery Powered
Are Batteries Included	Yes
Control Method	App, Remote, Touch, Voice
Compatible Devices	Smartphones, Amazon Echo, Tablets, Google Home
Form Factor	Robotic
UPC	850074159117
Item Weight	5.2 pounds
Manufacturer	Lefant
Item model number	M210

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0F48C83K4>

More documents and user manuals: <https://manuals.plus/>