

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Dytol](#) /
- › [Dytol Wireless Headphones for TV - User Manual](#)

Dytol TV001-V3

Dytol Wireless Headphones for TV - User Manual

Model: TV001-V3

Wireless Headphones for TV, TV Headphones Wireless for Seniors, Versatile Charging Dock with Transmitter, Instant Audio Sync, 65-Hour Battery Life.

WHAT'S INCLUDED

Your Dytol Wireless Headphones package includes the following components:

- Wireless Headphones
- Charging Base
- Optical Audio Cable
- 3.5mm AUX Audio Cable
- RCA Adapter Cable
- USB Charging Cable
- User Manual (this document)



Image: Dytole Wireless Headphones resting on their charging dock, with various connection cables laid out in front.

SETUP GUIDE

1. Initial Setup

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Place Charging Base:** Position the charging base near your TV or audio source.

3. **Connect Power:** Connect the USB charging cable to the charging base and plug the other end into a power source (e.g., USB wall adapter, TV USB port). The charging indicator light on the base will illuminate.
4. **Charge Headphones:** Place the headphones onto the charging base. Ensure the charging contacts align. The charging indicator on the base will turn red while charging and solid green when fully charged. A full charge takes approximately 2.5 hours.

2. Connecting to Your TV

The Dytol Wireless Headphones offer multiple connection options to ensure compatibility with most televisions. The recommended method is Optical for optimal audio quality and minimal latency.

Optical Connection (Recommended)

This method provides the best audio quality and lowest latency.

1. Locate the "Optical Out" or "Digital Audio Out" port on your TV.
2. Connect one end of the Optical Audio Cable to the Optical port on your TV.
3. Connect the other end of the Optical Audio Cable to the "Digital Optical" input on the back of the headphone charging base.
4. On your TV's audio settings, select "Optical Out" or "Digital Audio Out" as the audio output.



Image: The charging dock with various connection ports (Optical, RCA, AUX) and icons representing compatible devices like TVs, phones, and computers.

AUX 3.5mm Connection

Use this method if your TV has a 3.5mm audio output (headphone jack).

1. Connect one end of the 3.5mm AUX Audio Cable to the headphone jack on your TV.
2. Connect the other end of the 3.5mm AUX Audio Cable to the "Aux" input on the back of the headphone charging base.
3. On your TV's audio settings, select "Headphone Out" or "Analog Audio Out" as the audio output.

RCA Connection

Use this method if your TV has red and white RCA audio output ports.

1. Connect the RCA Adapter Cable (red and white plugs) to the corresponding red and white "Audio Out" ports on your TV.
2. Connect the 3.5mm plug of the RCA Adapter Cable to the "Aux" input on the back of the headphone charging base.
3. On your TV's audio settings, select "Analog Audio Out" as the audio output.

Your browser does not support the video tag.

Video: An instructional video demonstrating the various connection methods for the Dytale Wireless Headphones to a TV, including Optical, AUX, and RCA connections.

3. Bluetooth Pairing (for Mobile Devices/Computers)

While primarily designed for TV, these headphones can also connect to other Bluetooth-enabled devices.

1. Ensure the headphones are charged and powered on.
2. On your mobile device or computer, enable Bluetooth and search for available devices.
3. Select "Dytale TV001" (or similar) from the list of found devices.
4. Once paired, the headphones will indicate a successful connection (e.g., solid blue LED on the base).

OPERATING INSTRUCTIONS

Power On/Off

- To power on the headphones, slide the power switch located on the right earcup to the "ON" position.
- To power off, slide the switch to the "OFF" position.

Volume Control

- Use the volume up (+) and volume down (-) buttons on the right earcup to adjust the headphone volume.
- For optimal sound, ensure your TV's volume is set to a moderate level before adjusting the headphone volume.

Lossless Sound Quality

Experience Pure and Immersive Audio



Image: A man relaxing on a couch, wearing the Dytol Wireless Headphones and holding a TV remote, illustrating the immersive audio experience.

Charging

- Place the headphones onto the charging base when not in use. The base will automatically begin charging.
- The charging indicator on the base will be red during charging and turn solid green when fully charged.
- The headphones offer up to 65 hours of battery life on a single charge.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the headphones and charging base. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones on the charging base in a cool, dry place when not in use. Avoid extreme temperatures.

- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly.

TROUBLESHOOTING

Problem	Possible Cause / Solution
No sound from headphones.	<p>Ensure headphones are powered on and charged.</p> <p>Verify the audio cable is securely connected to both the TV and the charging base.</p> <p>Check TV audio output settings (Optical/AUX/RCA selected correctly).</p> <p>Increase headphone volume.</p> <p>Ensure TV volume is not muted or too low.</p>
Audio delay (latency).	<p>Ensure you are using the Optical connection for lowest latency (<40ms).</p> <p>Some TVs may introduce slight processing delay; check TV audio settings for "Game Mode" or "Bypass" options.</p>
Headphones not charging.	<p>Ensure the USB charging cable is properly connected to the base and power source.</p> <p>Verify the headphones are correctly seated on the charging contacts of the base.</p> <p>Check if the power adapter is working.</p>
Poor sound quality / Static.	<p>Check cable connections for looseness or damage.</p> <p>Ensure the headphones are within the 30-meter/100-foot range of the charging base (transmitter).</p> <p>Minimize interference from other wireless devices.</p>

SPECIFICATIONS

- **Model:** TV001-V3
- **Connectivity Technology:** Wireless (Bluetooth 5.2)
- **Audio Inputs:** Optical Fiber, 3.5mm AUX, RCA
- **Battery Life:** Up to 65 Hours
- **Charging Time:** Approximately 2.5 Hours
- **Wireless Range:** Up to 30 meters (100 feet)
- **Noise Control:** Active Noise Cancellation
- **Earpiece Type:** Over-Ear
- **Material:** Plastic
- **Audio Driver Type:** Dynamic Driver
- **Frequency Range:** 20 Hz to 20,000 Hz

- **Impedance:** 32 Ohm
- **Item Weight:** 1.81 pounds

WARRANTY AND SUPPORT

Dytolo products are designed for durability and performance. For any issues with your order or to inquire about warranty information, please contact us directly.

Email: DY_Business@outlook.com

Please provide your order details when contacting support for faster assistance.

Related Documents - TV001-V3

 <p>AquaTech Imaging Solutions</p> <p>SYNC Transmitter Housing Instruction Manual</p>	<p>AquaTech SYNC Transmitter Housing Instruction Manual</p> <p>Comprehensive instruction manual for the AquaTech SYNC Transmitter Housing, covering setup, operation, safety guidelines, maintenance, warranty, and service information for underwater photography.</p>
 <p>Instant Pot AIR FRYER LID 6 Quart</p> <p>User Manual</p>	<p>Instant Pot Air Fryer Lid 6 Quart User Manual - Cooking Guide & Safety</p> <p>Discover how to use your Instant Pot Air Fryer Lid 6 Quart with this comprehensive user manual. Learn about setup, smart programs, cooking times, cleaning, troubleshooting, and important safety safeguards for healthy, delicious meals.</p>
 <p>AS90C AS90C</p>	<p>Avantree AS90C: How to Add a Second Pair of Headphones to Opera</p> <p>Step-by-step guide to pair a second Avantree AS90C headphone with the Avantree Opera transmitter, including LED indicator status and reconnection instructions.</p>
 <p>RAM</p> <p>GDS Locking Vehicle Phone Dock</p>	<p>GDS Locking Vehicle Phone Dock Installation and Care Guide</p> <p>Comprehensive guide for installing and maintaining the RAM Mounts GDS Locking Vehicle Phone Dock, including troubleshooting tips and warranty information.</p>
 <p>get started</p> <p>INSTANT POT DUO PLUS</p> <p>Instant</p>	<p>Instant Pot Duo Plus: User Guide and Safety Instructions</p> <p>Comprehensive guide to the Instant Pot Duo Plus, covering safety precautions, setup, operation, cleaning, and warranty information. Learn how to use its various cooking functions effectively and safely.</p>



[Instant Pot Duo Multi-Use Pressure Cooker User Manual and Guide](#)

Comprehensive user manual for the Instant Pot Duo Multi-Use Pressure Cooker, covering important safeguards, product parts, setup, pressure cooking, other cooking styles like slow cook and sauté, care, cleaning, storage, and troubleshooting. Includes models Duo Mini v3, Duo 60 v4, and Duo 80 v3.