

Powerffy A17-NEW1

Powerffy A17 Cordless Stick Vacuum Cleaner User Manual

Model: **A17-NEW1** | Brand: **Powerffy**

Sections:

[Safety Instructions](#) [Product Overview](#) [Setup & Assembly](#) [Operating Instructions](#) [Maintenance](#)
[Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the Powerffy A17 Cordless Stick Vacuum Cleaner. Retain this manual for future reference.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- Do not use in an enclosed space where vapors are present from oil base paint, paint thinner, some mothproofing substances, flammable dust, or other explosive or toxic vapors.

- Do not use on hard, sharp objects like glass or metal shards.
- Always turn off this appliance before connecting or disconnecting the motorized nozzle.
- Store the appliance indoors. Put away after use to prevent accidents.

2. PRODUCT OVERVIEW & WHAT'S INCLUDED

The Powerffy A17 Cordless Stick Vacuum Cleaner is designed for efficient cleaning across various surfaces. It features a powerful 450W motor, up to 40KPA suction, and a smart LED touch display.

Key Features:

- **450W/40KPA Powerful Suction:** Equipped with a robust 450W motor for strong suction, ideal for embedded debris and pet hair.
- **Removable Battery:** Features a detachable battery for convenient charging and extended runtime (up to 55 minutes in ECO Mode).
- **Smart Touch Display:** Digital screen to monitor and adjust suction power levels in real-time with stepless adjustment.
- **Anti-Tangle Brush with LED Light:** 270° rotatable floor brush with soft/hard bristles and 4 LED lights for cleaning in dark areas.
- **New Upgraded Accessories:** Includes a sofa brush, crevice brush, 2-in-1 brush, and two spare filters for versatile cleaning.
- **1.2L Large Capacity Dust Cup:** One-click emptying for easy disposal of collected debris.

Package Contents:



Main Motor, Floor
Brush, Dust Cup,
Battery, Sofa Brush,
Stainless Steel Filter,
Roller, Crevice Brush,
Telescopic Tube, Mini
Cleaning Brush, Outlet
Filter, HEPA Filter,
Charger, Wall Mount
Bracket, Instruction
Manual.

3. SETUP & ASSEMBLY

3.1 Assembly

1. **Attach the Telescopic Tube:** Connect the telescopic tube to the main motor unit until it clicks into place.
2. **Attach the Floor Brush:** Connect the floor brush to the other end of the telescopic tube, ensuring it clicks securely.
3. **Install the Battery:** Insert the removable battery into the main motor unit until it locks.
4. **Attach Accessories (Optional):** For handheld use, attach the desired accessory (sofa brush, crevice brush, 2-in-1 brush) directly to the main motor unit.

450W/40KPA Super Suction

Quickly Clean Up Any Debris



15kPa



22kPa



40kPa

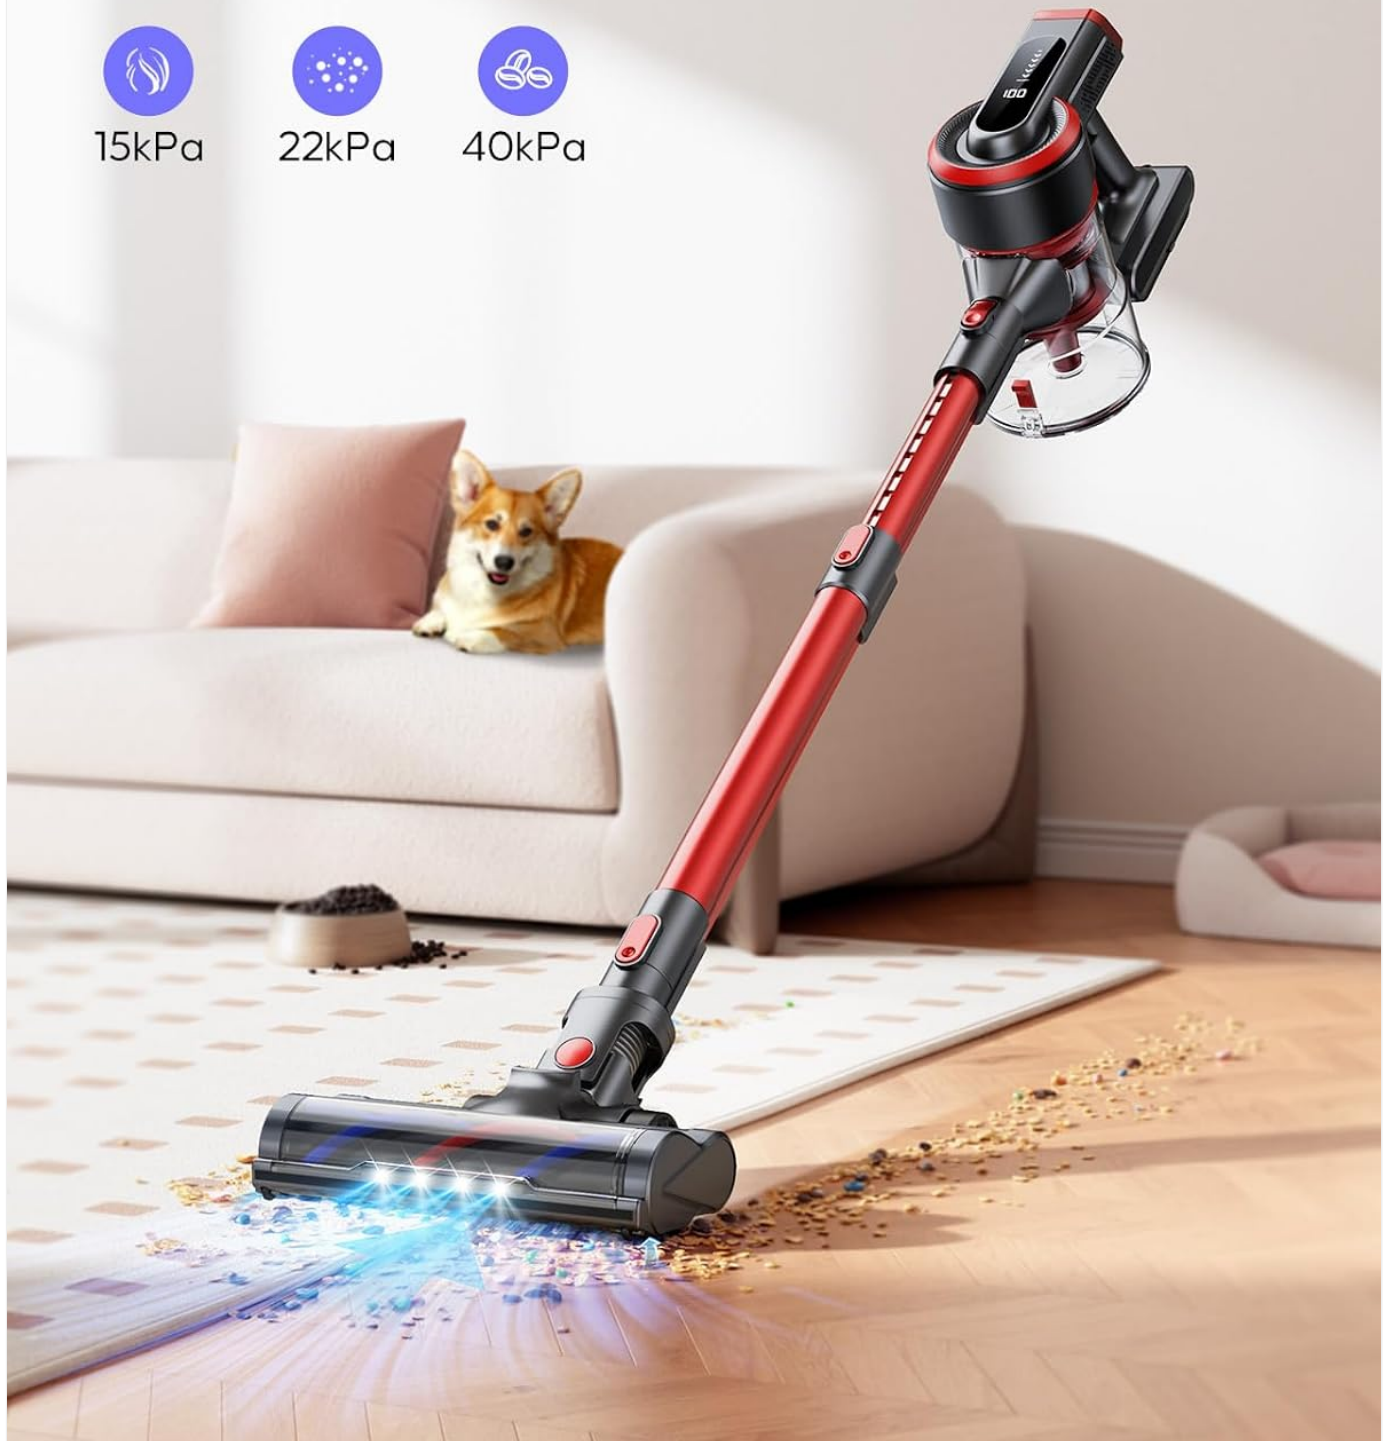


Image: Fully assembled Powerffy A17 Cordless Stick Vacuum Cleaner, ready for use.

3.2 Charging

The Powerffy A17 features a removable battery and a wall-mounted charging station for convenience.

1. **Wall-Mounted Charging:** Install the wall mount bracket in a suitable location. Hang the vacuum cleaner on the bracket. Connect the charger to the wall mount and plug it into a power outlet. The battery will begin charging.
2. **Direct Battery Charging:** The battery can also be removed from the main unit and charged independently using the charger.

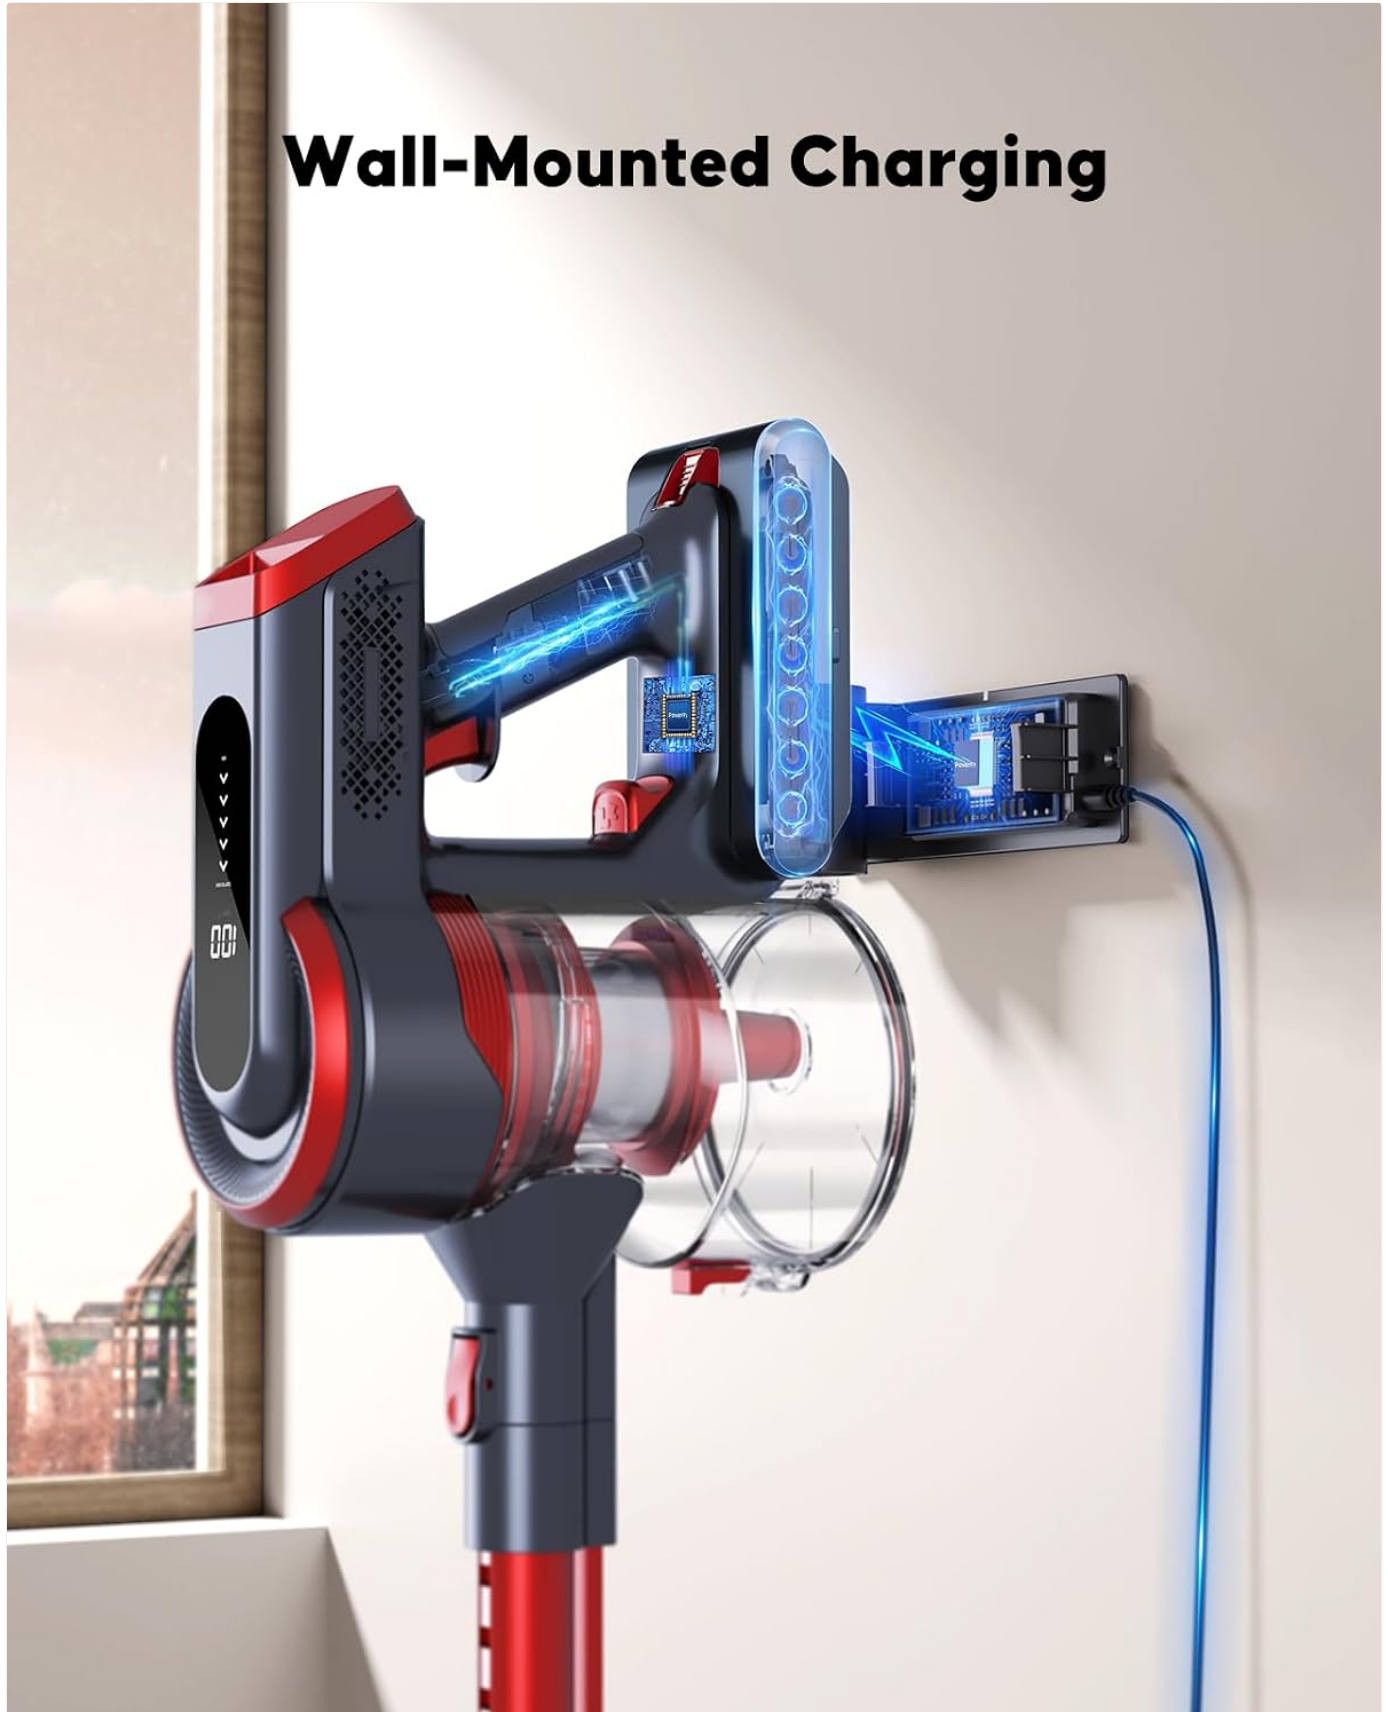


Image: Powerffy A17 Cordless Vacuum Cleaner mounted on its wall charging station.



Image: Close-up of the removable battery for the Powerffy A17 vacuum cleaner.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Suction Adjustment

Press the power button to turn the vacuum cleaner on or off. Use the digital touch screen to adjust the suction power.

- **Smart Touch Display:** The LED display shows battery indicator, brush roller tangled status, filter blockage, and a suction adjustment slider.
- **Suction Modes:** The vacuum offers multiple suction levels, including an ECO Mode for extended runtime (up to 55 mins) and a Max Mode for powerful cleaning (12-15 mins). Adjust by sliding your finger on the touch display.

Smart LED Display



Battery
Indicator



Brush Roller
Tangled



Filter
Blockage



Suction
Slider



Image: Close-up of the Powerffy A17's smart LED touch display showing battery and suction settings.



Image: Detailed view of the LED Smart Display indicating battery, brush roller tangled, air channel & dust cup blocked, and suction adjustment slider.

4.2 Cleaning Different Surfaces

- **Floor Brush:** The 270° rotatable anti-tangle floor brush is suitable for both hard floors and carpets. It has soft and hard bristles, eliminating the need to switch brush heads.

- **LED Headlights:** The floor brush is equipped with 4 LED lights to illuminate dark areas, ensuring thorough cleaning under furniture and in corners.
- **Telescopic Extension Tube:** Adjust the length of the tube for comfortable cleaning at various heights, including ceilings and high shelves.
- **Handheld Mode:** Detach the telescopic tube and attach accessories for cleaning furniture, car interiors, and tight spaces.



Image: The floor brush with LED lights, demonstrating its flexibility for cleaning under furniture.

Includes a Sofa Brush

For lightweight cleaning on furniture



Image: Powerffy A17 in handheld mode with the sofa brush attachment, cleaning a sofa.

4.3 Official Product Video: Powerffy Cordless Vacuum Cleaner in Action

Your browser does not support the video tag.

Video: An official product video demonstrating the Powerffy Cordless Vacuum Cleaner's features and cleaning capabilities on various surfaces, including hard floors and carpets, and using different attachments.

5. MAINTENANCE

5.1 Emptying the Dust Cup

The 1.2L dust cup can be emptied with a single click. It is recommended to empty the dust cup after each use or when it reaches the MAX fill line to maintain optimal suction performance.

1. Hold the main motor unit over a trash bin.
2. Press the dust cup release button to open the bottom flap and empty the contents.
3. Close the flap securely until it clicks.

1.2L Large Capacity

One-Click Emptying



Image: Demonstrating the one-click emptying mechanism of the 1.2L dust cup on the Powerffy A17 vacuum.

5.2 Filter Cleaning

Regular cleaning of the filters is crucial for maintaining suction power and preventing blockages. The vacuum includes two spare filters.

1. Remove the dust cup from the main unit.
2. Locate and remove the internal filters (Stainless Steel Filter, HEPA Filter, Outlet Filter).

- 3. Tap off loose dirt or rinse filters under cold water. Ensure filters are completely dry before reassembling.
- 4. Replace filters as needed, using the provided spare filters.



Image: Diagram illustrating the high-efficiency filtration system, capturing fine dust and preventing secondary pollution.

5.3 Anti-Tangle Brush Maintenance

Periodically check the brush roller for tangled hair or debris. The anti-tangle design minimizes this, but occasional cleaning may be necessary.

- 1. Turn off the vacuum and detach the floor brush.
- 2. Open the brush roller cover (refer to diagram in physical manual if available).
- 3. Remove any tangled hair or debris from the brush roller.
- 4. Reassemble the brush roller and cover securely.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly installed.	Ensure battery is fully charged and correctly inserted.
Low suction power.	Dust cup is full, filters are clogged, or brush roller is tangled.	Empty dust cup, clean/replace filters, clear brush roller of debris.
Brush roller stops rotating.	Hair or debris tangled in the brush roller.	Turn off the vacuum, remove the floor brush, and clear any obstructions from the brush roller.
Battery indicator shows low charge quickly.	Using Max mode frequently, or battery needs replacement.	Use ECO mode for longer runtime. If battery life significantly degrades, contact customer support.

7. SPECIFICATIONS

- Brand:** Powerffy
- Model Name:** A17-NEW1
- Wattage:** 450 watts
- Maximum Suction:** 40KPA (40 Inches)
- Battery Life:** Up to 55 minutes (ECO Mode)
- Battery Type:** 7 Lithium Ion batteries (included)
- Dust Cup Capacity:** 1.2 Liters
- Filter Type:** HEPA Filter
- Product Dimensions:** 9"L x 10"W x 43"H
- Item Weight:** 5.9 pounds
- Color:** Red
- Special Features:** Upgraded 450W Brushless Motor, 40KPA Powerful Suction, LED Touch Screen, 7-in-1 Cordless Vacuum Cleaner, Large Capacity Dust Container, One Button Release, Upgraded Sofa Brush.
- Surface Recommendation:** All floors, Carpet

8. WARRANTY & SUPPORT

Powerffy is committed to providing high-quality products and customer satisfaction.

- **Warranty:** Powerffy provides 3 years of service for this product.
- **Customer Service:** For any issues or inquiries regarding your vacuum cleaner, please contact Powerffy customer service. They aim to provide satisfactory service within 24 hours.
- **Return Policy:** A 30-day exchange & money-back policy is available.



Image: Powerffy Customer Service Policy details: Up to 36-month After-sale, 30-day Exchange & Money-back, Within 24H Online Service, 100% Satisfactory.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question