

Manuals.plus /

› Herenear /

› Herenear Children's Play Tent Instruction Manual - Model LX5307

Herenear LX5307

Herenear Children's Play Tent Instruction Manual

Model: LX5307

1. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Keep this manual for future reference.

- Not suitable for children under 3 years of age.
- Use only under direct adult supervision.
- Keep away from open flames and heat sources.
- Ensure all components are securely assembled before allowing children to play.
- Regularly inspect the tent for any damage or wear. Discontinue use if damaged.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- Children's Play Tent Fabric *1
- Tent Base Mat *1
- 3-meter LED String Lights *1
- Colorful Triangular Flag Decoration *1
- Instruction Manual *1
- PVC Poles and Connectors (various sizes)



Figure 2.1: Package Contents and Dimensions

3. SETUP INSTRUCTIONS

Follow these steps for easy assembly of your play tent:

1. **Unpack Components:** Carefully remove all items from the packaging and lay them out on a clean, flat surface. Identify all PVC poles and connectors.
2. **Assemble the Frame:** Connect the PVC poles using the provided connectors to form the tent's structural frame. Refer to the graphic instructions in the included manual for specific pole configurations. Ensure all connections are firm and secure.
3. **Drape the Fabric:** Carefully drape the tent fabric over the assembled PVC frame. Align the fabric with the frame structure, ensuring the openings for doors and windows are correctly positioned.
4. **Secure the Fabric:** Fasten the fabric to the frame using any ties or loops provided on the tent material. This ensures the fabric remains taut and stable.
5. **Place the Base Mat:** Lay the tent base mat inside the assembled tent.
6. **Add Decorations:** Install the LED string lights and triangular flag decorations as desired. The LED

lights typically require batteries (not included).

MONTAJE FÁCIL



Figure 3.1: Easy Assembly Process

4. OPERATING YOUR PLAY TENT

The Herenear Children's Play Tent is designed for versatile and imaginative play.

4.1 Double Door Design

The tent features two doors, allowing for multiple entry and exit points and enhancing play scenarios. The main door and a side door can be opened or closed as needed.

DISEÑO DE DOBLE PUERTA



Figure 4.1: Double Door Configuration

4.2 Ventilated Windows and Mosquito Net

The tent includes ventilated windows with curtains that can be adjusted. A mosquito net is also integrated to provide privacy and protection while allowing air circulation.

4.3 LED Lights and Bunting

Enhance the play experience with the included LED string lights and decorative bunting. The lights create a cozy atmosphere, especially during evening play.



Figure 4.2: Detailed Features of the Play Tent

4.4 Usage Scenarios

This play tent is suitable for various activities, including reading nooks, imaginative play, or as a cozy resting spot. It can be used both indoors and in sheltered outdoor areas.



Exterior



Interior



Día



Noche

Figure 4.3: Versatile Usage of the Play Tent

5. MAINTENANCE

Proper care will extend the life of your play tent.

- **Fabric Care:** The tent fabric is made of durable polyester and can be machine washed. Use a gentle cycle with cold water and mild detergent. Air dry only; do not tumble dry.
- **Frame Care:** Wipe PVC poles and connectors with a damp cloth as needed. Avoid harsh chemicals.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place away from direct sunlight to prevent material degradation.

6. TROUBLESHOOTING

If you encounter any issues, please refer to the following common solutions:

- **Tent is unstable:** Ensure all PVC poles are fully inserted into their connectors. Check that the fabric is evenly draped and securely fastened to the frame.
- **LED lights not working:** Verify that batteries are correctly installed and are not depleted. Check for any loose connections in the light string.
- **Fabric wrinkles:** Minor wrinkles are normal after unpacking. These typically smooth out with use or can be gently steamed (avoid direct iron contact).

7. SPECIFICATIONS

Feature	Detail
Model Number	LX5307
Dimensions (L x W x H)	120 x 100 x 127 cm (47 x 39.2 x 49.9 inches)
Product Weight	2.79 kg (6.15 lbs)
Material (Fabric)	Polyester Fiber
Material (Frame)	Polyvinyl Chloride (PVC)
Recommended Age	6 years and up (Manufacturer's recommendation)
Assembly Required	No (Pre-assembled components for quick setup)
Batteries Required	No (for tent), Yes (for LED lights, not included)

8. WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details, please refer to the purchase documentation or contact your retailer.

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact Heregear customer support through your original point of purchase or visit the official Heregear website for contact information.