

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [tectake](#) /

> [tectake 3x3m Green Open Party Tent Instruction Manual, Model 405961](#)

tectake 405961

tectake 3x3m Green Open Party Tent Instruction Manual

Model: 405961

1. INTRODUCTION

Thank you for choosing the tectake 3x3m Green Open Party Tent. This manual provides essential information for the safe and correct assembly, operation, and maintenance of your new party tent. Please read these instructions carefully before use and retain them for future reference.

This gazebo is designed to provide shade and light rain protection for outdoor events, picnics, camping, and recreational activities. It features a robust powder-coated steel frame and a durable, UV-resistant, and waterproof polyethylene canopy.

2. SAFETY WARNINGS

WARNING: This tent must be properly anchored to ensure stability, especially in windy conditions. Failure to do so can result in damage to the product or personal injury.

- Always ensure the tent is securely anchored using all provided guy ropes and pegs.
- Do not use the tent in strong winds, heavy rain, or snow. Disassemble and store the tent during adverse weather conditions.
- Keep all flame and heat sources away from the tent fabric. The fabric is not fireproof.
- Ensure all frame connections are fully engaged and secure during assembly.
- Supervise children around the tent to prevent accidents.
- Do not hang heavy objects from the tent frame.
- Regularly check the stability and anchoring of the tent during use.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components listed below are present and undamaged.

AFMETINGEN

Totale afmetingen
300 x 300 x 250 cm

Doorgangshoogte
180 cm

Afmetingen zijn bij benadering

TECHNISCHE DETAILS

Stofdikte dak 95 g/m²

UV-bescherming 30+

Gewicht ca. 6,5 kg

Materiaal gepoedercoat staal,
polyethyleen, polypropyleen

INHOUD

Paviljoenframe

Dakzeil

4 scheerlijnen

8 haringen

Montagehandleiding



Image 3.1: Overview of included components.

- Pavilion Frame (powder-coated steel tubes and connectors)
- Roof Tarp (polyethylene, green)
- 4 Guy Ropes
- 8 Pegs
- Assembly Instructions (this manual)

4. SETUP INSTRUCTIONS

Assembly requires at least two people. Choose a flat, level surface for setup.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on the ground. Check against the package contents list (Section 3).
2. **Assemble the Roof Frame:** Connect the steel tubes for the roof structure using the intelligent click system. Ensure all

connections are fully engaged and secure.



Image 4.1: Details of the plug-in system and tarp attachment.

3. **Attach the Roof Tarp:** Drape the polyethylene roof tarp over the assembled roof frame. Secure the tarp to the frame using the integrated Velcro fasteners. Ensure the tarp is taut and evenly distributed.
4. **Assemble the Legs:** Attach the leg poles to the roof frame. Extend the legs to the desired height, ensuring the passage height is approximately 180 cm.
5. **Anchor the Tent:** Once the frame is fully assembled and the tarp is in place, secure the tent to the ground.
 - Insert the 8 pegs through the base plates of the tent legs and into the ground.
 - Attach the 4 guy ropes to the designated points on the roof frame. Extend the ropes outwards at an angle and secure them firmly to the ground using additional pegs (not included, but recommended for extra stability) or by tying them to sturdy objects.

IMPORTANT: Proper anchoring is crucial for stability. Never leave the tent unattended without proper anchoring.



Weerbestendige zeilen
gemaakt van duurzaam,
waterdicht kunststof



Supersnelle opbouw
dankzij het eenvoudige
insteeksysteem



Hoge stabiliteit
middels 4 voetelementen
& 4 trekkabels



Robuust frame
stabiel stalen frame met
poedercoating



Ruimtebesparend design
is ideaal voor kleinere
buitenruimtes



Stevige verankering
met 8 haringen voor extra
ondersteuning

Image 4.2: Assembled tent highlighting key features.

5. OPERATING INSTRUCTIONS

The tectake party tent is designed for temporary outdoor use, providing shade and protection from light rain and UV rays.

- **Weather Conditions:** The tent offers UV protection (30+) and is waterproof. However, it is not designed for extreme weather. In case of strong winds, heavy rain, or snow, disassemble the tent to prevent damage.

WIND- & Weerbestendig

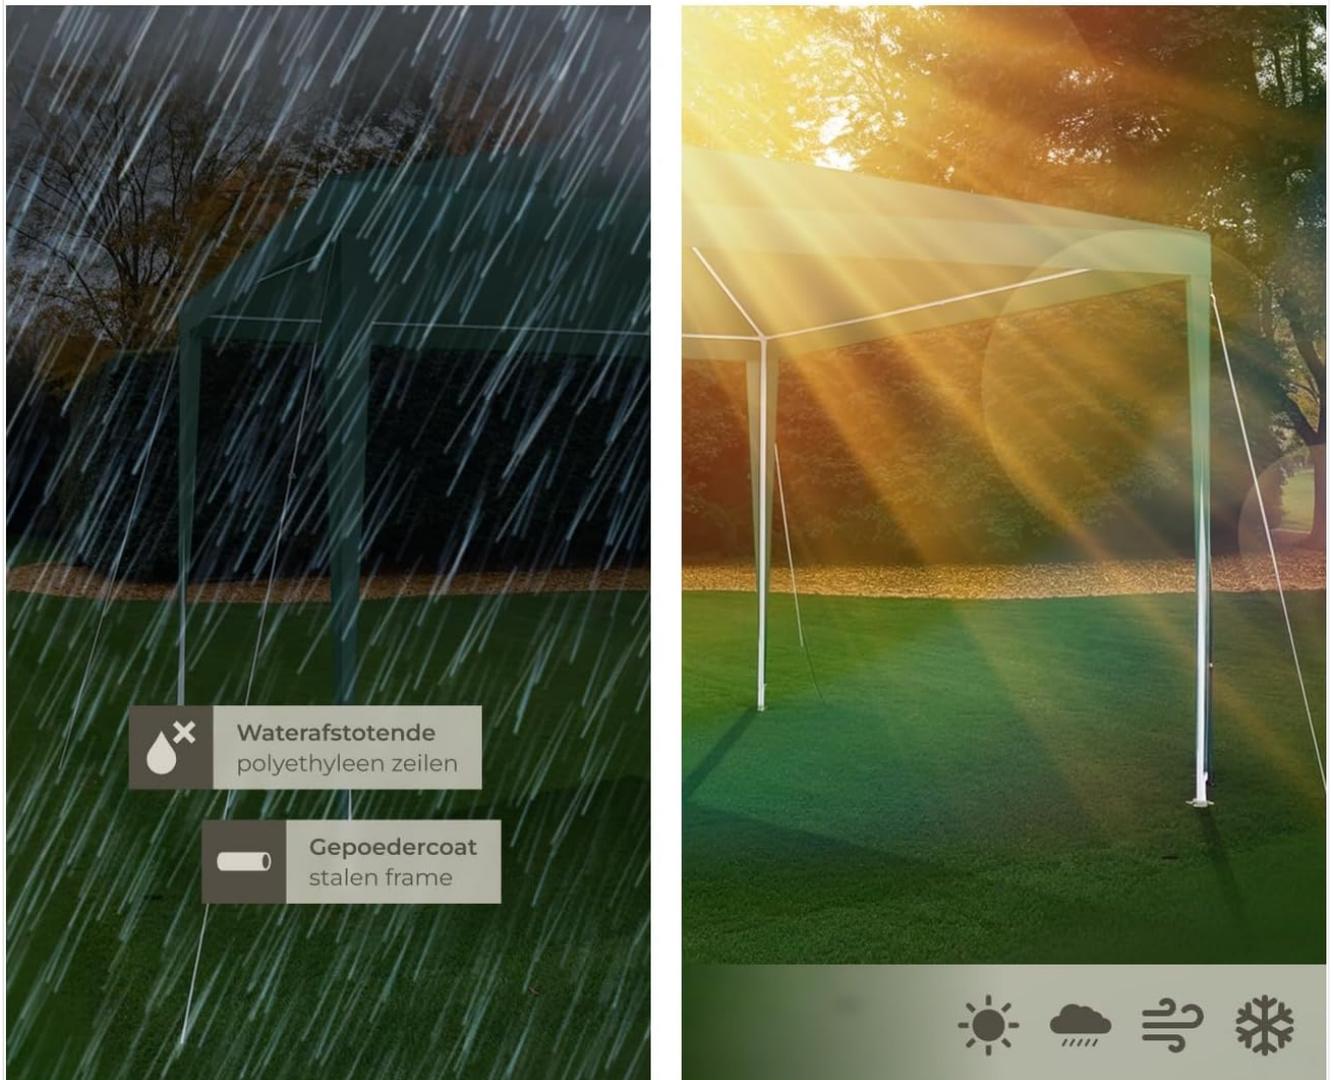


Image 5.1: Tent's resistance to rain and sun.

- **Usage:** Use the tent for outdoor gatherings, as a temporary shelter, or for recreational activities. Do not use it as a permanent structure.
- **Disassembly:** To disassemble, reverse the assembly steps. Ensure the tarp is clean and dry before folding and storing to prevent mold and mildew.

6. MAINTENANCE

Regular maintenance will extend the life of your party tent.

- **Cleaning the Tarp:** Clean the polyethylene tarp with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Cleaning the Frame:** Wipe the powder-coated steel frame with a damp cloth. Dry thoroughly to prevent rust.
- **Storage:** Store the tent in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure all components are clean and dry before storage.
- **Inspection:** Periodically inspect the frame for any signs of damage or rust. Check the tarp for tears or excessive wear. Replace damaged parts as necessary.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tent is unstable or wobbly.	<ul style="list-style-type: none">• Improper anchoring.• Loose frame connections.• Uneven ground.	<ul style="list-style-type: none">• Ensure all 8 pegs are fully inserted and guy ropes are taut.• Check all frame joints for full engagement.• Relocate to a flatter surface or use shims under legs if necessary.
Water pooling on the roof.	<ul style="list-style-type: none">• Tarp not taut enough.• Frame not fully extended or uneven.	<ul style="list-style-type: none">• Re-adjust tarp tension using Velcro fasteners.• Ensure all frame poles are correctly assembled and extended.
Difficulty connecting frame poles.	<ul style="list-style-type: none">• Poles are misaligned.• Debris in connection points.	<ul style="list-style-type: none">• Ensure correct orientation of poles.• Clear any obstructions from the connection points.

8. SPECIFICATIONS

AFMETINGEN

Totale afmetingen
300 x 300 x 250 cm

Doorgangshoogte
180 cm

Afmetingen zijn bij benadering

TECHNISCHE DETAILS

Stofdikte dak 95 g/m²

UV-bescherming 30+

Gewicht ca. 6,5 kg

Materiaal gepoedercoat staal,
polyethyleen, polypropyleen

INHOUD

Paviljoenframe

Dakzeil

4 scheerlijnen

8 haringen

Montagehandleiding



Image 8.1: Detailed product dimensions and technical specifications.

- **Model Number:** 405961
- **Total Dimensions (L x W x H):** Approximately 300 x 300 x 250 cm (3L x 3W x 2.5H meters)
- **Passage Height:** Approximately 180 cm
- **Tarp Thickness:** 95 g/m²
- **UV Protection:** 30+
- **Weight:** Approximately 6.6 kg
- **Frame Material:** Powder-coated steel (Alloy Steel)
- **Tarp Material:** Polyethylene, Polypropylene
- **Color:** Green
- **Water Resistance Level:** Waterproof
- **Recommended Use:** Outdoor events, picnics, camping, recreational activities

9. WARRANTY AND SUPPORT

Information regarding specific warranty terms is not available in the provided product details. For warranty claims, technical support, or to inquire about spare parts, please contact your retailer or the manufacturer directly.

Please have your model number (405961) and proof of purchase ready when contacting support.

- **Manufacturer:** tectake
- **Product Reference:** 405961
- **Spare Parts Availability:** Information unavailable. Please contact tectake customer service.