



Manuals.plus /

- › WOCKODER /
- › WOCKODER HQ-KZ001 All-in-one Record Player Turntable User Manual

WOCKODER HQ-KZ001

WOCKODER HQ-KZ001 All-in-one Record Player Turntable User Manual

Model: HQ-KZ001

1. INTRODUCTION

Thank you for purchasing the WOCKODER HQ-KZ001 All-in-one Record Player Turntable. This device is designed to provide a high-fidelity audio experience with the convenience of modern features. It includes built-in stereo speakers, wireless playback capabilities, and multiple connectivity options. Please read this manual thoroughly before use to ensure proper operation and to maximize your enjoyment of this product.



BUILT-IN 4 UPGRADE STEREO SPEAKERS

With 2 tweeters and 2 mid-bass speakers, you can enjoy stereo sound impact.

Image 1.1: WOCKODER HQ-KZ001 All-in-one Record Player Turntable. This image displays the complete turntable unit with its vintage brown wooden finish and clear dust cover.

2. SAFETY INSTRUCTIONS

- Read all instructions before operating the unit.
- Keep this manual for future reference.
- Do not use this apparatus near water.
- Clean only with a dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been

damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

3. PACKAGE CONTENTS

Carefully unpack all components and ensure you have received the following items:

- 1 x Turntable Unit
- 1 x Platter
- 1 x Dust Cover
- 1 x Counterweight
- 1 x Drive Belt
- 1 x 45 RPM Adaptor
- 1 x Mat
- 1 x Power Cord
- 1 x User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your WOCKODER HQ-KZ001 turntable.

4.1 Key Features



Image 4.1: All-in-one Turntable Features. This image highlights the various input and output options available on the turntable, including AUX IN, Phono/Line Out, and L/R RCA Output.

- **Built-in Stereo Speakers:** Equipped with four speakers (two high-pitched and two low-pitched) for powerful stereo sound.
- **Wireless Playback:** Connect your smartphone or other devices via Bluetooth.
- **AUX-in:** Connect external audio devices.
- **RCA Output:** Connect to external active speakers or an audio system.
- **PH Output:** Connect to external passive speakers (requires an amplifier with phono input).
- **Two Speeds:** Supports 33 and 45 RPM records.
- **Auto-Stop Function:** Automatically stops the platter when a record finishes playing.
- **Adjustable Counterweight:** Ensures proper tracking force for optimal sound and record protection.
- **Dynamic Magnetic Stylus (AT-3600L):** Provides clear, pure HiFi sound and protects records from scratches.
- **'S' Shape Tonearm:** Designed for better tracking performance.

4.2 Stylus and Tonearm

HIGH-QUALITY MOVING MAGNETIC STYLUS OF WELL-KNOWN BRANDS

- AT-3600L Stylus
- Perform clear pure HiFi sound
- Protect your records from scratches

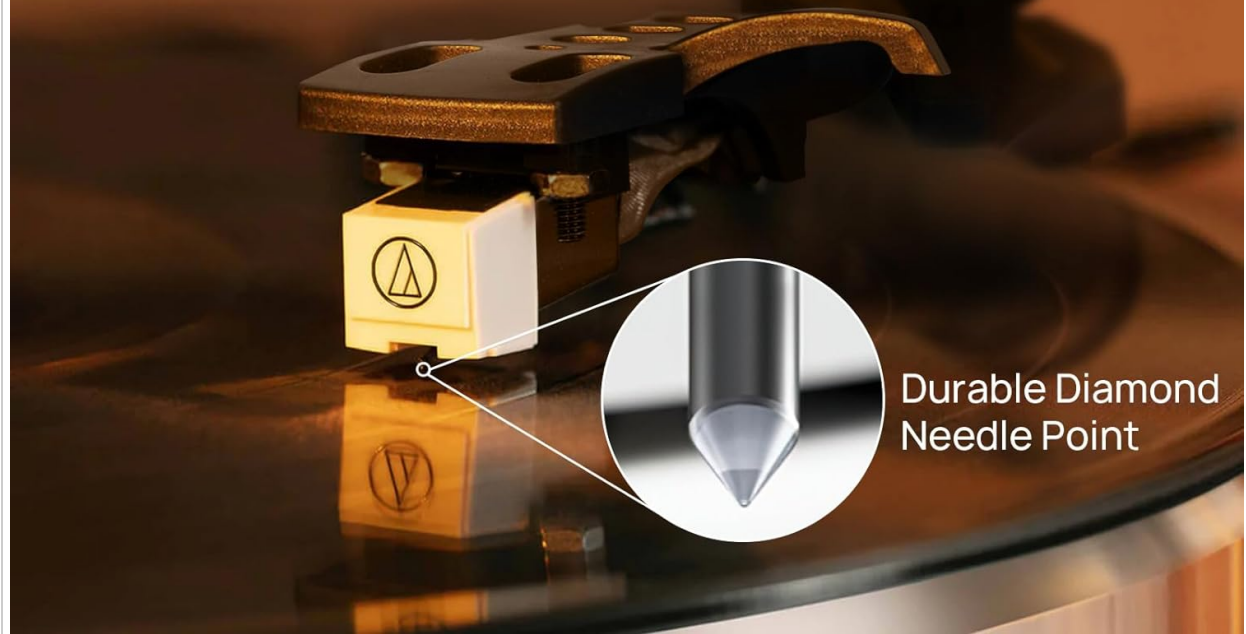


Image 4.2: High-Quality Moving Magnetic Stylus. This image provides a close-up view of the AT-3600L stylus and its durable diamond needle point, emphasizing its role in sound quality and record protection.

The turntable features a high-quality AT-3600L dynamic magnetic stylus with a durable diamond needle point, mounted on an 'S' shape tonearm. This combination ensures precise tracking and excellent sound reproduction while minimizing wear on your vinyl records.

4.3 Built-in Speakers



Image 4.3: Built-in 4 Upgrade Stereo Speakers. This image illustrates the internal speaker configuration, showing two tweeters and two mid-bass speakers for enhanced stereo sound.

The unit integrates four speakers: two high-pitched tweeters and two low-pitched mid-bass speakers. This configuration delivers a balanced and powerful stereo sound experience directly from the turntable.

5. SETUP

5.1 Unpacking and Placement

1. Carefully remove the turntable from its packaging.
2. Place the unit on a flat, stable surface away from direct sunlight, heat sources, and excessive dust or vibrations.
3. Remove any protective materials or ties from the tonearm and platter.

5.2 Platter and Drive Belt Installation

1. Place the platter onto the turntable spindle.
2. Locate the drive belt (usually pre-installed or found separately in the packaging).
3. Carefully stretch the drive belt around the motor pulley and the inner rim of the platter. Ensure the belt is

not twisted.

4. Place the mat on top of the platter.

5.3 Counterweight Adjustment

1. Slide the counterweight onto the rear of the tonearm.
2. Adjust the counterweight until the tonearm is balanced and floats horizontally.
3. Once balanced, rotate the numbered ring on the counterweight to '0' without moving the counterweight itself.
4. Rotate the entire counterweight counter-clockwise to set the recommended tracking force (refer to stylus specifications, typically 2.5-3.5 grams for AT-3600L).

5.4 Dust Cover Installation

Insert the hinges of the dust cover into the corresponding slots at the back of the turntable unit.

5.5 Power Connection

Connect the power cord to the DC input on the back of the turntable, then plug the other end into a suitable wall outlet.

6. OPERATING INSTRUCTIONS

6.1 Playing Vinyl Records



Image 6.1: Record Size and Speed Compatibility. This image visually confirms the turntable's compatibility with 7-inch, 10-inch, and 12-inch records, and its support for both 33 RPM and 45 RPM playing speeds.

1. Ensure the turntable is powered on.
2. Select the appropriate speed (33 or 45 RPM) using the speed selector switch, matching the record you intend to play. Use the 45 RPM adaptor for 7-inch singles if needed.
3. Place your vinyl record on the platter.
4. Lift the tonearm using the cueing lever.
5. Move the tonearm over the desired track on the record.
6. Gently lower the tonearm using the cueing lever. The stylus will make contact with the record, and playback will begin.
7. Adjust the volume using the volume knob.
8. The auto-stop function will automatically stop the platter rotation when the record finishes playing. To disable auto-stop, use the auto-stop switch.

6.2 Wireless Playback (Bluetooth)



Image 6.2: Wireless Streaming Music. This image shows a smartphone connected wirelessly to the turntable, illustrating the Bluetooth streaming capability for playing music from digital devices.

1. Turn on the turntable.
2. Switch the mode selector to 'BT' (Bluetooth). The indicator light will flash, indicating it is in pairing mode.
3. On your smartphone or other Bluetooth-enabled device, search for 'WOCKODER' (or similar device name) in the Bluetooth settings.
4. Select the turntable to pair. Once connected, the indicator light will stop flashing.
5. Play music from your device. Adjust volume on both your device and the turntable for optimal sound.

6.3 AUX Input

1. Connect an external audio device (e.g., MP3 player, CD player) to the 'AUX IN' port on the turntable using a 3.5mm audio cable (not included).
2. Switch the mode selector to 'AUX'.
3. Play audio from your connected device. Adjust volume on both the external device and the turntable.

6.4 RCA Output

The turntable features RCA output jacks (L/R) on the rear panel, allowing you to connect it to external active speakers or an amplifier with line-level inputs for a more powerful audio experience.

1. Connect an RCA cable (not included) from the 'LINE OUT' jacks on the turntable to the corresponding audio input jacks on your external amplifier or active speakers.
2. Ensure the mode selector on the turntable is set to 'LINE OUT' or 'PH' depending on your amplifier's input type. If connecting to an amplifier's phono input, select 'PH'. If connecting to a standard line-level input, select 'LINE OUT'.
3. Adjust the volume on your external audio system.

7. MAINTENANCE

7.1 Cleaning the Unit

- Always unplug the unit from the power outlet before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces. Do not use abrasive cleaners, waxes, or solvents.
- The dust cover can be cleaned with a soft, damp cloth. Avoid harsh chemicals.

7.2 Stylus Care

- The stylus is delicate. Handle it with extreme care.
- Clean the stylus regularly using a soft brush, brushing gently from back to front.
- A dirty or worn stylus can damage your records and degrade sound quality. Replace the stylus when signs of wear appear (typically after 300-500 hours of playback).

7.3 Record Care

- Always handle records by their edges or the label.
- Store records vertically in their sleeves, away from heat and direct sunlight.
- Clean records regularly with a dedicated record cleaning brush or solution to remove dust and static.

8. TROUBLESHOOTING

If you encounter any issues with your turntable, please refer to the following troubleshooting guide:

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet not working	Ensure power cord is securely plugged in; Try a different outlet.
No sound from speakers	Volume too low; Incorrect mode selected; Stylus protector still on	Increase volume; Select correct mode (PH for records, BT for Bluetooth, AUX for AUX-in); Remove stylus protector.
Record skipping	Dirty or scratched record; Incorrect tracking force; Turntable not level	Clean record; Re-adjust counterweight; Place turntable on a level surface.
Bluetooth not connecting	Turntable not in pairing mode; Device too far; Already connected to another device	Ensure turntable is in BT pairing mode (flashing light); Move device closer; Disconnect from other devices.
Platter not spinning	Drive belt dislodged; Auto-stop engaged (if record finished)	Check and re-seat the drive belt; Ensure a record is playing or auto-stop is off.

9. SPECIFICATIONS

Feature	Specification
Brand	WOCKODER
Model	HQ-KZ001
Speeds Supported	33 1/3, 45 RPM
Stylus Type	Dynamic Magnetic (AT-3600L)
Connectivity	Bluetooth, AUX-in, RCA Line Out, PH Output
Built-in Speakers	Yes (4 speakers: 2 high-pitched, 2 low-pitched)
Drive Type	Belt-Drive
Material	Wood
Dimensions (L x W x H)	51 x 46.5 x 28.4 cm (approx.)
Weight	5.9 kg (approx.)
Compatible Devices	Audio System, Smartphone, Speaker

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included in your package or contact WOCKODER customer service directly. Please have your model number (HQ-KZ001) and purchase details ready when contacting support.

Contact information can typically be found on the manufacturer's official website or on the product packaging.

