

WeCool FW-5100-R2

WeCool Fairwhale Sports Analog Digital Watch

Model: FW-5100-R2

INTRODUCTION

This instruction manual provides detailed information on the operation, maintenance, and features of your WeCool Fairwhale Sports Analog Digital Watch. Please read this manual carefully to ensure proper use and to maximize the lifespan of your watch.

PRODUCT FEATURES

- **Military Sporty Design:** Fashionable large dial (50mm) with scratch-resistant mineral glass and a durable resin band.
- **Multi-functional:** Analog and digital dual time display, alarm, LED backlight, date, stopwatch, 12/24H format, and shock resistance.
- **Imported Japanese Quartz Movement:** Ensures precise timekeeping.
- **50M Water Resistance:** Suitable for cold water, rain, and swimming. Avoid steam and hot water.
- **Comfort and Durability:** Soft and durable PU watch band, lightweight metal case.

PARTS IDENTIFICATION

Familiarize yourself with the different parts and buttons of your watch:

FUNCTION DESCRIPTION

Luminous Button:

Can be seen clearly in dark

Mode Button:

Can switch between 3 modes



Start Button:

Stop watch start/pause and adjust corresponding function numbers

Reset Mode:

Stop watch reset, and switch hour, minute, week mode functions

Image: Front view of the WeCool Fairwhale watch highlighting the "Light", "Mode", "Start", and "Reset" buttons, along with their primary functions.

- **Light Button (Top Left):** Activates the LED backlight for visibility in low light conditions.
- **Mode Button (Bottom Left):** Cycles through different modes: Time, Alarm, Stopwatch.
- **Start Button (Top Right):** Used to start/pause the stopwatch and adjust numerical values during setting.
- **Reset Button (Bottom Right):** Used to reset the stopwatch and switch between hour, minute, and week modes during setting.
- **Analog Crown (Right Side):** Used to set the analog time. Pull out to adjust, push in to lock.

SETUP AND INITIAL CONFIGURATION

Setting Analog Time:

1. Pull out the crown on the right side of the watch.
2. Rotate the crown to adjust the analog hands to the desired time.
3. Once set, push the crown back in to secure the time and ensure water resistance.

Setting Digital Time and Date:

1. From the normal time display, press the **Mode Button** repeatedly until the seconds start flashing. This indicates you are in setting mode.
2. Press the **Reset Button** to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **Start Button** to increase the flashing value. Hold it down for faster adjustment.
4. To switch between 12-hour and 24-hour format, press the **Start Button** when the hour is flashing.
5. Once all settings are adjusted, press the **Mode Button** to exit the setting mode and return to the normal time display.

OPERATING INSTRUCTIONS

Using the LED Backlight:

Press the **Light Button** (top left) to illuminate the digital display. The backlight will remain on for a few seconds.



SUPER-LUMINOUS
Cool & Easy to Read in the Dark
Glow continually after absorbing light

Image: The watch display showing the activated green LED backlight, making the digital time visible in the dark.

Using the Stopwatch:

1. From the normal time display, press the **Mode Button** until "ST" or "STOP" appears on the digital display, indicating stopwatch mode.
2. Press the **Start Button** to begin timing.
3. Press the **Start Button** again to pause the stopwatch.
4. Press the **Reset Button** to clear the stopwatch to zero.
5. Press the **Mode Button** to return to the normal time display.

Setting and Using the Alarm:

1. From the normal time display, press the **Mode Button** until "AL" or "ALARM" appears on the digital display.
2. Press the **Reset Button** to select the hour or minute to set. The selected value will flash.
3. Use the **Start Button** to adjust the flashing hour or minute.
4. Press the **Mode Button** to exit the alarm setting mode.
5. To activate/deactivate the alarm, press the **Start Button** while in alarm mode. An alarm icon will appear/disappear on the display.
6. When the alarm sounds, press any button to stop it.

MAINTENANCE AND CARE

- **Water Resistance:** The watch is 50M water resistant. This means it is suitable for splashes, rain, and short periods of swimming in cold water. *Do not* press any buttons underwater. *Avoid* hot water, steam, and saunas, as these can compromise the waterproof seals.
- **Cleaning:** Wipe the watch case and band regularly with a soft, damp cloth. For stubborn dirt, use a mild soap solution and rinse thoroughly, then dry.
- **Battery Replacement:** When the display becomes dim or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance. The watch uses 1 AAA battery.
- **Storage:** Store your watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.
- **Shock Resistance:** While designed to be shock-resistant, avoid unnecessary impacts or dropping the watch to prevent damage.



Image: A composite image illustrating key features of the watch: 30M water resistance, high hardness coated glass mirror, premium TPU band, and lightweight metal case.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery (1 AAA battery). Consult a professional if unsure.
Analog hands are not moving or are incorrect.	Crown is not pushed in, or battery issue.	Ensure the crown is fully pushed in. If still not working, the analog movement battery may be depleted (separate from digital). Seek professional service.
Watch is not water resistant after battery change.	Seal not properly re-installed.	Always have battery replacement done by a professional to ensure water resistance is maintained.

Problem	Possible Cause	Solution
Buttons are unresponsive.	Stuck button or internal malfunction.	Gently try to free the button. If still unresponsive, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	FW-5100-R2
Product Dimensions	20 x 5 x 2 cm
Item Weight	50 g
Case Diameter	50 Millimetres
Band Material Type	Polyurethane (TPU)
Band Colour	Black
Watch Movement Type	Quartz
Water Resistance Depth	50 Meters (5 ATM)
Mirror Material	Mineral reinforced coated glass
Battery Type	1 AAA battery (included)
Country of Origin	China



Image: A visual representation of the watch's technical specifications, including dimensions and materials.


 



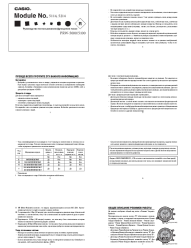
WARRANTY AND SUPPORT

Your WeCool Fairwhale Sports Analog Digital Watch comes with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or contact WeCool customer support. If you have any questions or require assistance with your watch, please contact WeCool customer support through Amazon or visit the official WeCool store page:

[Visit the WeCool Store on Amazon](#)

WeCool is committed to providing a professional after-sales team to answer your questions and ensure your satisfaction.

© 2025 WeCool. All rights reserved.

	<p>WeCool S2 Selfie Stick Tripod User Manual Features, Setup, and Specifications</p> <p>User manual for the WeCool S2 Selfie Stick Tripod. Learn how to use the Bluetooth remote, set up the tripod, check compatibility, and find specifications and warranty information for this extendable smartphone accessory.</p>
	<p>WeCool Gimbal G1 User Manual: Setup, Operation, and Specifications</p> <p>Detailed user guide for the WeCool Gimbal G1 handheld gimbal stabilizer. Learn how to set up, connect your phone, use tripod and selfie stick modes, charge the device, and understand its specifications and warranty.</p>
	<p>WeCool Just Dough Premium: Crafting Fuzzy, Quirk, Bunbun & Chip Characters</p> <p>Discover creative fun with WeCool's Just Dough Premium modeling dough. This guide offers step-by-step instructions to sculpt adorable characters like Fuzzy, Quirk, Bunbun, and Chip, suitable for ages 3+.</p>
	<p>WeCool Moonwalk M1 True Wireless Earbuds: Instruction Manual & Features</p> <p>Comprehensive instruction manual for WeCool Moonwalk M1 True Wireless Earbuds. Learn how to pair, charge, operate, and troubleshoot your Bluetooth 5.0 earbuds.</p>
	<p>WeCool Moonwalk Mini True Wireless Bluetooth Earbuds User Manual</p> <p>User manual for the WeCool Moonwalk Mini True Wireless Bluetooth Earbuds, detailing Bluetooth pairing, button operations, product features, specifications, and brand warranty information.</p>
	<p>Casio PRW-5000/5100 Watch User Manual - Features and Operation</p> <p>Comprehensive user manual for Casio PRW-5000/5100 series watches (models 5114, 5214), detailing timekeeping, world time, stopwatch, alarms, barometer, altimeter, thermometer, and compass functions.</p>