

WeCool FW-4300-1

WeCool Fairwhale Sports Analog Digital Watch User Manual

Model: FW-4300-1 | Brand: WeCool

INTRODUCTION

Thank you for choosing the WeCool Fairwhale Sports Analog Digital Watch. This watch combines classic analog timekeeping with modern digital functionalities, designed for durability and versatility. It features a robust build, water resistance, and multiple functions including alarm, stopwatch, and LED backlight, making it suitable for various activities and daily wear.



Figure 1: WeCool Fairwhale Sports Analog Digital Watch on Wrist

This manual provides detailed instructions on how to set up, operate, and maintain your watch to ensure optimal performance and longevity. Please read it carefully before using your watch.

PRODUCT OVERVIEW

Familiarize yourself with the main components and buttons of your WeCool Fairwhale watch:

FUNCTION DESCRIPTION



Figure 2: Watch Components and Button Functions

- **LIGHT Button:** Activates the LED backlight.
- **MODE Button:** Cycles through different modes (Time, Alarm, Stopwatch).
- **RESET Button:** Used for resetting stopwatch or adjusting settings.
- **START Button:** Used for starting stopwatch or adjusting settings.
- **ADJUST Button:** Used for entering setting mode and confirming selections.

SETUP AND INITIAL CONFIGURATION

Setting Digital Time and Date

1. In normal time display mode, press the **MODE** button three times to enter the time setting mode. The seconds will flash.
2. Press the **RESET** button to cycle through the settings: Seconds → Hour → Minute → Month → Date → Day of Week.
3. Use the **START** button to adjust the flashing value. Hold to increase rapidly.

4. Once all settings are correct, press the **MODE** button to exit the setting mode.

Setting Analog Time

The analog hands are set independently. Pull out the crown (small knob on the right side of the watch) and rotate it to adjust the analog time. Push the crown back in when finished.



Figure 3: WeCool Fairwhale Sports Analog Digital Watch

OPERATING INSTRUCTIONS

Using the LED Backlight

Press the **LIGHT** button (top left) to illuminate the digital display. The backlight will stay on for a few seconds, allowing you to read the time in low-light conditions.



Figure 4: Super-Luminous Display in the Dark

Using the Stopwatch

1. From normal time display, press the **MODE** button once to enter Stopwatch mode. The display will show "00:00:00".
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to "00:00:00".
5. Press the **MODE** button to return to normal time display.

Setting and Using the Alarm

1. From normal time display, press the **MODE** button twice to enter Alarm setting mode. The hour digits will flash.
2. Press the **RESET** button to select between hour and minute settings.
3. Use the **START** button to adjust the flashing value.
4. Once the desired alarm time is set, press the **MODE** button to exit.
5. To turn the alarm ON/OFF, in Alarm mode, press the **START** button. An alarm icon will appear/disappear on the display.

CARE AND MAINTENANCE

- **Cleaning:** Wipe the watch regularly with a soft, dry cloth to remove dirt and sweat. For stubborn dirt, use a slightly damp cloth and then dry thoroughly.
- **Water Resistance:** This watch is water-resistant up to 50 meters (5 ATM). It is suitable for cold water, rain, and swimming. **DO NOT** press any buttons underwater. Avoid exposure to steam and hot water, as this can damage the waterproof seal.
- **Temperature:** Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods.
- **Chemicals:** Keep the watch away from solvents, detergents, perfumes, and other chemicals that may damage the band or case.
- **Battery Replacement:** When the display becomes dim or functions become erratic, it may be time to replace the battery. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance is maintained.



Figure 5: 50M Water-Resistant Feature

TROUBLESHOOTING

Problem	Possible Cause	Solution
Digital display is blank or dim.	Low battery.	Replace the battery.
Analog hands are not moving or incorrect.	Crown is pulled out; battery issue.	Push the crown back in. If still not working, replace battery.
Buttons are unresponsive.	Watch may be in a locked mode or battery is low.	Try pressing all buttons firmly. If issue persists, replace battery.
Water inside the watch.	Buttons pressed underwater; exposure to hot water/steam; damaged seal.	Immediately take to a professional watch repair service. Avoid further water exposure.

SPECIFICATIONS

Feature	Detail
Model Number	FW-4300-1
Movement Type	Imported Japanese Quartz Movement
Display Type	Analog and Digital
Case Diameter	52mm (2 inch)
Band Material	Eco-friendly Resin / Polyurethane
Water Resistance	5 ATM (50 meters)
Special Features	LED Backlight, Dual Time Display, Stopwatch, Alarm, Shock-Resistant, 12/24H Format
Battery	1 AAA battery (included)
Item Weight	50 g
Product Dimensions	20 x 5 x 2 cm

WATCH PARAMETERS. SCIENCE RATIO

ERGONOMIC DESIGN



Mirror material:	Mineral reinforced coated glass
Band material:	Eco-friendly resin
Dial size:	51MM
Dial thickness:	18MM
Band width:	30MM

G

SHOCKPROOF

50

WATERPROOF

EL

LIGHTING

TIMING

REMIND

A STOPWATCH

CALENDER

24 HRS

DAILY ALARM

Tips: All dimensions are manually measured, there are reasonable errors, please refer to the actual product

Figure 6: Watch Parameters and Key Features

WARRANTY AND SUPPORT

Your WeCool Fairwhale Sports Analog Digital Watch comes with a limited warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official WeCool website.

If you encounter any issues or have questions regarding your watch, please do not hesitate to contact our professional after-sales team through Amazon. We are committed to providing satisfactory answers and support.

You can reach us via the Amazon messaging system by visiting the product page and clicking on the seller's name, "WeCool Technology", then selecting "Ask a question".

For more information, visit [WeCool Store on Amazon](#)