

## SINGER 2277

# SINGER 2277 Sewing Machine & Portable Bobbin Winder User Manual

Model: 2277

## INTRODUCTION

Welcome to the SINGER family! This manual provides comprehensive instructions for the safe and efficient operation of your new SINGER 2277 Sewing Machine and the accompanying Portable Bobbin Winder. Please read this manual thoroughly before using your machine to ensure proper setup, operation, and maintenance. Keep this manual for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

- Read all instructions before using this sewing machine.
- Keep these instructions in a suitable place near the machine.
- Unplug the machine from the electrical outlet immediately after using and before cleaning, removing covers, lubricating, or making any other user servicing adjustments mentioned in the instruction manual.
- Do not allow to be used as a toy. Close attention is necessary when this appliance is used by or near children.
- Use this appliance only for its intended use as described in this manual.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.

## PRODUCT OVERVIEW

Your SINGER 2277 Sewing Machine is designed for ease of use and versatility, featuring 23 built-in stitches, an automatic needle threader, and a one-step buttonhole function. The included Portable Bobbin Winder provides convenience for preparing bobbins independently.



**Figure 1:** The SINGER 2277 Sewing Machine (top) and the Portable Bobbin Winder with accessories (bottom). The sewing machine is white with green accents, featuring stitch selection dials and a reverse lever. The bobbin winder is also white, shown open with yellow thread spools.

### Key Components (Sewing Machine)

- **Spool Pin:** Holds the thread spool.
- **Thread Guide:** Directs the thread path.
- **Tension Dial:** Adjusts upper thread tension.
- **Stitch Length Dial:** Controls the length of stitches.
- **Stitch Width Dial:** Controls the width of zigzag and decorative stitches.
- **Pattern Selector Dial:** Selects the desired stitch pattern.
- **Reverse Lever:** For sewing in reverse to secure seams.
- **Needle Bar:** Holds the needle.
- **Presser Foot:** Holds fabric against the feed dogs.

- **Feed Dogs:** Moves fabric under the presser foot.
- **Bobbin Cover:** Protects the bobbin area.
- **Handwheel:** Manually raises and lowers the needle.
- **Power Switch:** Turns the machine on/off.
- **Foot Controller Jack:** Connects the foot controller.

## Key Components (Portable Bobbin Winder)

- **Spool Pin:** For holding the thread spool to be wound onto the bobbin.
- **Bobbin Pin:** Where the empty bobbin is placed for winding.
- **Start/Stop Button:** Initiates and stops the winding process.
- **Power Input:** For connecting the power adapter.
- **Automatic Shut-off Sensor:** Detects when the bobbin is full.

## SETUP

---

### 1. Unpacking and Placement

- Carefully remove the machine and all accessories from the packaging.
- Place the sewing machine on a stable, flat surface.
- Ensure adequate lighting for your work area.

### 2. Power Connection

- Connect the foot controller plug into the machine's foot controller jack.
- Plug the power cord into a suitable electrical outlet.
- Turn on the power switch, usually located on the side of the machine.

### 3. Winding the Bobbin (Using Portable Bobbin Winder)

The SINGER Portable Bobbin Winder allows you to wind bobbins independently of your sewing machine.

1. Connect the power adapter to the bobbin winder and plug it into an electrical outlet.
2. Place a spool of thread onto the spool pin of the winder.
3. Guide the thread through the thread guide.
4. Place an empty Class 15 or 15J bobbin onto the bobbin pin.
5. Wrap the thread around the bobbin a few times clockwise.
6. Press the Start/Stop button. The winder will automatically stop when the bobbin is full.
7. Remove the full bobbin and cut the thread.

### 4. Inserting the Bobbin (Sewing Machine)

1. Raise the needle to its highest position by turning the handwheel towards you.
2. Open the bobbin cover plate.
3. Insert the full bobbin into the bobbin case, ensuring the thread unwinds in the correct direction (usually counter-clockwise).
4. Guide the bobbin thread through the tension spring and into the thread guide slot.
5. Close the bobbin cover plate.

### 5. Threading the Upper Thread (Sewing Machine)

1. Place a spool of thread on the spool pin.
2. Guide the thread through the upper thread guide.
3. Follow the numbered threading path down the front of the machine, around the tension discs, and up to the take-up lever.
4. Bring the thread down through the take-up lever and into the needle bar thread guide.
5. Use the automatic needle threader or manually thread the needle from front to back.

## 6. Automatic Needle Threader

To use the automatic needle threader:

1. Raise the needle to its highest position.
2. Lower the presser foot.
3. Pull the needle threader lever down as far as it will go.
4. Hook the thread under the small hook on the threader.
5. Release the lever slowly. The thread will be pulled through the needle eye.
6. Pull the loop of thread through the needle eye from the back.

## OPERATING THE SEWING MACHINE

---

### 1. Selecting a Stitch

- Turn the Pattern Selector Dial to choose one of the 23 built-in stitches.
- Refer to the stitch chart on the machine for recommended stitch length and width settings.

### 2. Adjusting Stitch Length and Width

- **Stitch Length:** Use the Stitch Length Dial to adjust the length. Shorter lengths for stronger seams, longer lengths for basting or gathering.
- **Stitch Width:** Use the Stitch Width Dial to adjust the width for zigzag and decorative stitches.

### 3. Sewing Basics

- Place fabric under the presser foot.
- Lower the presser foot lever.
- Gently press the foot controller to start sewing.
- To secure a seam, press and hold the Reverse Lever at the beginning and end of your seam.

### 4. One-Step Buttonhole

1. Attach the buttonhole foot.
2. Select the buttonhole stitch pattern on the Pattern Selector Dial.
3. Place the button you are using into the buttonhole foot's gauge to automatically set the buttonhole size.
4. Position your fabric and lower the presser foot.
5. Begin sewing. The machine will automatically sew all four sides of the buttonhole and stop when complete.

## MAINTENANCE

---

### 1. Cleaning

- Always unplug the machine before cleaning.

- Use a soft brush to remove lint and dust from the bobbin area and feed dogs.
- Wipe the exterior of the machine with a soft, damp cloth. Do not use harsh chemicals.

2. Needle Replacement

- Replace the needle regularly (after 8-10 hours of sewing) or if it becomes bent or dull.
- Ensure the flat side of the needle faces the back of the machine when inserting.
- Use only SINGER brand needles for optimal performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Skipped Stitches	Incorrect needle, bent needle, improper threading.	Replace needle, re-thread machine correctly.
Thread Breaking	Incorrect tension, poor quality thread, bent needle, improper threading.	Adjust tension, use quality thread, replace needle, re-thread.
Fabric Puckering	Stitch length too short, tension too tight.	Increase stitch length, loosen tension.
Machine Not Starting	Power cord not plugged in, foot controller not connected, power switch off.	Check all connections, turn power switch on.

SPECIFICATIONS

- **Model:** SINGER 2277 Tradition
- **Stitches:** 23 Built-in Stitches (Essential, Decorative, Stretch)
- **Needle Threader:** Automatic
- **Buttonhole:** 1-Step Automatic
- **Stitch Length/Width:** Adjustable
- **Bobbin Type:** Class 15 / 15J (for Portable Winder compatibility)
- **Power:** Standard Household Electrical Outlet





WARRANTY & SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official SINGER website. You can also contact SINGER customer service for assistance with any questions or issues not covered in this manual.

 
SINGER Official Website: [www.singer.com](http://www.singer.com)



Related Documents

 <p><b>SINGER Scholastic Model 5523</b></p> <table border="1"> <thead> <tr> <th>Feature</th> <th>Benefit</th> </tr> </thead> <tbody> <tr> <td>23 Built-in Stitches</td> <td>From basic to decorative, Scholastic Model 5523 offers a wide range of stitch options for all your sewing projects.</td> </tr> <tr> <td>Automatic Needle Threader</td> <td>Simply insert the needle into the threader and pull the thread through. No more fumbling with the needle and thread.</td> </tr> <tr> <td>1,100 Stitches per Minute</td> <td>Fast and efficient sewing speed for all your projects.</td> </tr> <tr> <td>60% Stronger Motor</td> <td>Powerful motor for easy sewing of all fabric types.</td> </tr> <tr> <td>Comprehensive Accessories</td> <td>Includes everything you need to get started, from bobbins to a sewing kit.</td> </tr> <tr> <td>Easy-to-use Controls</td> <td>Simple controls for easy operation and adjustment.</td> </tr> <tr> <td>Sturdy Construction</td> <td>Durable and reliable for long-lasting use.</td> </tr> <tr> <td>Compact Design</td> <td>Perfect for home use or classroom settings.</td> </tr> <tr> <td>Easy-to-clean</td> <td>Simple to maintain and keep in good condition.</td> </tr> </tbody> </table>	Feature	Benefit	23 Built-in Stitches	From basic to decorative, Scholastic Model 5523 offers a wide range of stitch options for all your sewing projects.	Automatic Needle Threader	Simply insert the needle into the threader and pull the thread through. No more fumbling with the needle and thread.	1,100 Stitches per Minute	Fast and efficient sewing speed for all your projects.	60% Stronger Motor	Powerful motor for easy sewing of all fabric types.	Comprehensive Accessories	Includes everything you need to get started, from bobbins to a sewing kit.	Easy-to-use Controls	Simple controls for easy operation and adjustment.	Sturdy Construction	Durable and reliable for long-lasting use.	Compact Design	Perfect for home use or classroom settings.	Easy-to-clean	Simple to maintain and keep in good condition.	<p><a href="#">Singer Scholastic Model 5523 Sewing Machine: Features and Benefits</a></p> <p>Explore the Singer Scholastic Model 5523 sewing machine, detailing its 23 built-in stitches, automatic needle threader, 1,100 stitches per minute, 60% stronger motor, and comprehensive included accessories for crafts, home decor, and garment construction.</p>
Feature	Benefit																				
23 Built-in Stitches	From basic to decorative, Scholastic Model 5523 offers a wide range of stitch options for all your sewing projects.																				
Automatic Needle Threader	Simply insert the needle into the threader and pull the thread through. No more fumbling with the needle and thread.																				
1,100 Stitches per Minute	Fast and efficient sewing speed for all your projects.																				
60% Stronger Motor	Powerful motor for easy sewing of all fabric types.																				
Comprehensive Accessories	Includes everything you need to get started, from bobbins to a sewing kit.																				
Easy-to-use Controls	Simple controls for easy operation and adjustment.																				
Sturdy Construction	Durable and reliable for long-lasting use.																				
Compact Design	Perfect for home use or classroom settings.																				
Easy-to-clean	Simple to maintain and keep in good condition.																				
 <p><b>SINGER Quantum Stylist 9960</b></p> <p>600 Stitches, Automatic Features, and a Wide Range of Accessories.</p>	<p><a href="#">Singer Quantum Stylist 9960 Sewing Machine - Features and Accessories</a></p> <p>Discover the Singer Quantum Stylist 9960, a computerized sewing machine with 600 stitches, automatic features, and a wide range of accessories. Learn about its capabilities and included items.</p>																				
 <p><b>ILLUSTRATION MANUAL</b></p> <p>SINGER</p>	<p><a href="#">Singer 15-Class Sewing Machine Illustration Manual</a></p> <p>Comprehensive illustration manual for the Singer 15-Class sewing machine, detailing parts, threading, bobbin winding, and maintenance procedures with clear visual guides.</p>																				
<p><b>Instruction Book</b></p> <p>M1000 / M1005</p>  <p><b>SINGER</b></p>	<p><a href="#">Singer M1000 / M1005 Sewing Machine Instruction Manual</a></p> <p>A comprehensive guide for Singer M1000 and M1005 sewing machines, covering essential safety instructions, setup procedures, basic sewing techniques, machine care, and troubleshooting tips.</p>																				

Documents - SINGER – 2277

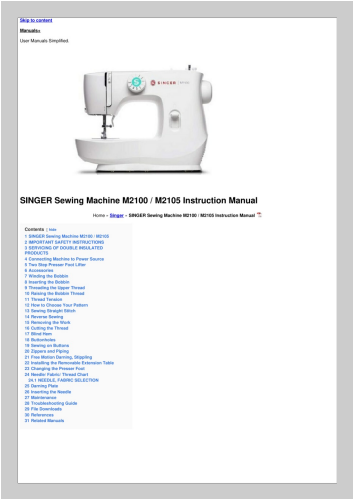

[SINGER Sewing Machine M2100 / M2105 Instruction Manual](#)

Comprehensive instruction manual for the SINGER Sewing Machine models M2100 and M2105, covering setup, operation, maintenance, and troubleshooting.


lang:en score:42 filesize: 670.21 K page\_count: 18 document date: 2021-08-16

SINGER® 2277		
English   Spanish   French		
English		
1	STRAIGHT STITCH	Seams
2	STRAIGHT STITCH	Quilt Piecing
3	STRAIGHT STITCH	Topstitching
4	STRAIGHT STITCH	Edge Stitching
5	STRAIGHT STITCH	Basting

[pdf] Guide Accessories

2277 Stitch Applications Guide Tradition™ Sewing Machine Singer SINGER NA res cloudinary singer sewing image upload v1593109935 Website Library |||

 English 1 STRAIGHT STITCH 2 STRAIGHT STITCH 3 STRAIGHT STITCH 4 STRAIGHT STITCH 5 STRAIGHT STITCH SINGER **2277** English Spanish French Seams Quilt Piecing Topstitching Edge Stitching Basting The most common use for the straight stitch is for joining fabrics together with a seam. The machine nee... lang:en score:31 filesize: 1.36 M page\_count: 80 document date: 2020-06-25

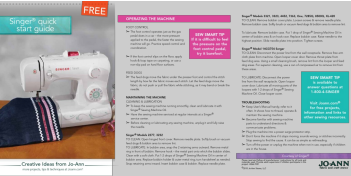

[pdf] User Manual Quick Start Guide Guide

SINGER 2277 01 MANUAL drive google u 0 uc id 1gRFV9fBczxYYURoaK4xcPeIV0 9X9MQR export ||| Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs... lang:en score:31 filesize: 353 K page\_count: 2 document date: 2015-06-26



[pdf] User Manual Quick Start Guide Guide Catalog

Singer® quick start guide Joann Keep User s Manual handy refer to it often It shows how thread operate maintain the sewing machine ~ Become familiar with 4453871P59 joann on demandware static Sites project catalog default dw67059c5b images hi res Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs... lang:en score:30 filesize: 359.95 K page\_count: 2 document date: 2014-11-17

[pdf] Instructions Guide Price List

Singer Sewing Machine 114W100 User Guide 8c7a837a b8c2 6bb4 99d8 201cdced33d5 text archive org manualsonline id SINGER 114W100 Form, 2fl7 w December. 1912 PRICE LIST PARTS MACHINE No. 114 w 100 THE SINGER MAN ... NG, RIGHT HAND, ROUND BELT, TWO SPEED No. Plate Name Each 227270 2a; i2 201100 201101 20 1102 **227772** 2021711 202400 2041 07 **227742** 202401 204107 20 nos lio 1 io 2041 III 201111 204112 20072le ... lang:en score:27 filesize: 2.24 M page\_count: 18 document date: 2020-09-27

SINGER  
114W100

**SINGER**  
114W101

[\[pdf\]](#) Instructions Guide

Singer Sewing Machine 114W101 User Guide 496f0bbe d25a 1cf4 ad35 6c9d76ba76c5 text archive org manualsonline id

SINGER 114W101 BRIG LIST OF PARTS MACHINE No. 114w 101 THE SINGER MANUFACTURING COMPANY Copyrigh ... TWO SPEED No. Plate Name Each 227370 2; .4 2 201100 204101 204102 227553 202459 202460 204105 **227743** 202461 25303 1 1126 Cone Pulley grooved , two speed. lit and in, holt diam., with 2275:7:1...

lang:en **score:26** filesize: 2.3 M page\_count: 21 document date: 2020-09-27

**ADCOM**

**HIGH CURRENT  
POWER AMPLIFIER  
GFA-555ms**

The contents of this manual are subject to change. Please check our website [www.adcom-usa.com](http://www.adcom-usa.com) or [info@adcom-usa.com](mailto:info@adcom-usa.com) for the most current version.

Copyright © 2011 ADCOM LLC

[\[pdf\]](#) User Manual Instructions Guide

GFA 555ms user manual rev2 1 012511 Adcom Stereo Amplifier 555MS User Guide 02d754ca e802 4aa5 9722 03ca7eca1fd0 archive org manualsonline id

HIGH CURRENT POWER AMPLIFIER GFA-555ms The contents of this manual are subject to change. Please ch ... rough Friday PO BOX 54096 9:00AM to 4:00PM Arizona Time PHOENIX, AZ 85078 Phone Number: 480-607-**2277** U.S.A. email: info ADCOM-usa.com When calling or writing about your GFA-555ms, be sure to n...

 
lang:en **score:26** filesize: 172.44 K page\_count: 22 document date: 2011-01-25



[\[pdf\]](#) User Manual Quick Start Guide Guide

SINGER 7363 01 MANUAL drive google uc id 1sJgkADdDYflo8YLFyhUyXwfTyaU22kFw export ||| Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...


lang:en **score:26** filesize: 353 K page\_count: 2 document date: 2015-06-26

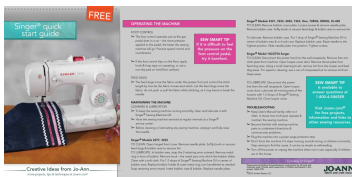

[\[pdf\]](#) User Manual Quick Start Guide Guide

SINGER 3321 01 MANUAL drive google uc id 19JT29sv1CKumJNw7XnUwmBwaMAS5rv9e export ||| Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

 lang:en **score:26** filesize: 353 K page\_count: 2 document date: 2015-06-26

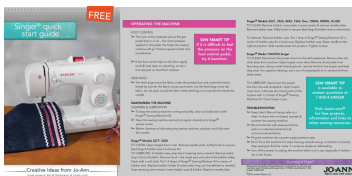


[\[pdf\]](#) User Manual Quick Start Guide Guide

SINGER 14CG754 03 MANUAL drive google uc id 1q9EaqdNCW8bn9HYlyz67zaV4tRDpQCPw export ||| Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

 lang:en **score:26** filesize: 353 K page\_count: 2 document date: 2015-06-26



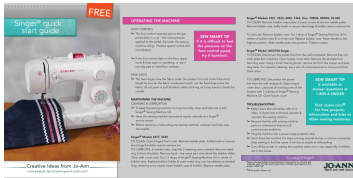


[\[pdf\]](#) User Manual Quick Start Guide Guide

SINGER 3232 02 MANUAL drive google uc id 1 cbDKhXArWgJHzFRQsK4xDLqiiOnCE3d export |||

Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

 lang:en **score:25** filesize: 353 K page\_count: 2 document date: 2015-06-26

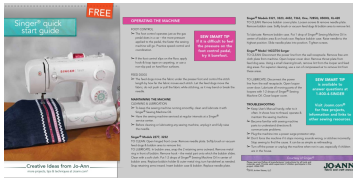

[\[pdf\]](#) User Manual Quick Start Guide Guide

SINGER 8500Q 01 MANUAL drive google uc id 1WVxJiEKH7u 1WeBHD5fPTUyXGfjCX7ex export |||

Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

lang:en **score:25** filesize: 353 K page\_count: 2 document date: 2015-06-26

 


[\[pdf\]](#) Instructions Guide

Singer Sewing Machine 110W121 User Guide 097c7324 8c1a 1c24 1d6a 3aae719a8b84 text archive org manualsonline id

SINGER 110W121 I ORM i r ; v TOUKI 11 2 PRINTED IN IT. 8, a LIST OF PARTS MACHINE No. 110w ... 6 Screw 2 . Parts for Machine No. 110w121 ii No. Plate Name 210011 2021:1.5 200 17: n **227771** 2500851**227708** **227700** **227710** 2:17712 Md77 1417 1 1417 1 14282 14170 14170 14180 14170 14170 ...

lang:en **score:25** filesize: 3.22 M page\_count: 21 document date: 2020-09-27

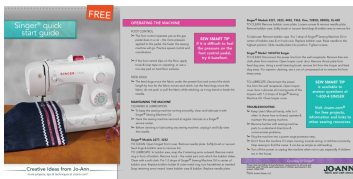


[\[pdf\]](#) User Manual Quick Start Guide Guide

SINGER 4452 02 MANUAL drive google u 0 uc id 108BdLcnn4jU8XPqG7oF3iiRoUPzqg5ZP export |||

Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

 lang:en **score:25** filesize: 353 K page\_count: 2 document date: 2015-06-26

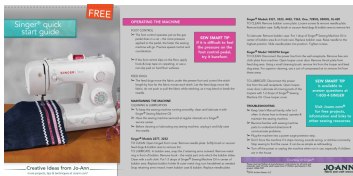


[\[pdf\]](#) User Manual Quick Start Guide Guide

SINGER ONE 01 MANUAL drive google u 0 uc id 1tchksYH674XYRBy39 n2tiaR1LRfmDhY export |||

Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

 lang:en **score:25** filesize: 353 K page\_count: 2 document date: 2015-06-26

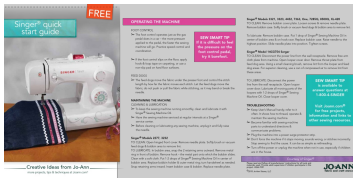


### [\[pdf\] User Manual Quick Start Guide Guide](#)

SINGER XL 420 01 MANUAL drive google uc id 1mrcrqu mQn Jtqys0l5vA34yHMXDOBCC export |||

Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

 lang:en score:25 filesize: 353 K page\_count: 2 document date: 2015-06-26

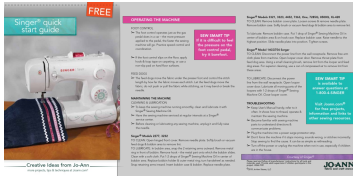

### [\[pdf\] User Manual Quick Start Guide Guide](#)

SINGER 7285Q 01 MANUAL drive google u 0 uc id 1c 4hXtoNojkBRojewtF99NpAZruUstZ export |||

Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

 
lang:en score:25 filesize: 353 K page\_count: 2 document date: 2015-06-26



### [SINGER Sewing Machine Accessory User Guide 2022](#)

Explore the SINGER Accessory User Guide 2022, a comprehensive resource for sewing enthusiasts. This guide details various SINGER sewing machine accessories, including presser feet, needles, scissors, bobbins, extension tables, and embroidery hoops. Learn how to use each accessory for utility garment sewing, decorative crafting, quilting, and overlock embellishment. Find compatibility information for SINGER sewing machine models and enhance your creative projects with expert guidance.

lang:en score:25 filesize: 10.53 M page\_count: 72 document date: 2024-03-11

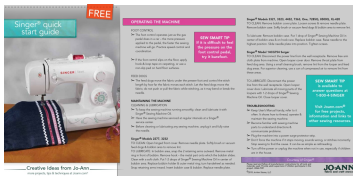

### [\[pdf\] User Manual Quick Start Guide Guide](#)

SINGER 3323 02 MANUAL drive google u 0 uc id 1nJzGbAEooaFI 7TB6xY8 5HlrmKYtLuW export |||

Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

lang:en score:24 filesize: 353 K page\_count: 2 document date: 2015-06-26

### [\[pdf\] Instructions Guide](#)

Singer Sewing Machine 12W208 User Guide 6eda4d7a 7971 9f04 a9e8 d6835be6e6b7 text archive org manualsonline id

SINGER 12W208,W209 Form 2i71w August, 1931 PRINTED IN U. S. A. LIST OF PARTS MACHINES Nos. 12w208 ... lide Lever 200991k 201525k 22.3014 20012211 223017 207837 204717 200658k 2 l034 k 204479 204249 20**2277** 200072k 207S35 2 05 lk \*207840 200420k 204757 12787 10494 12787 12787 -- 12785 12787 12787

...

lang:en score:24 filesize: 3.09 M page\_count: 25 document date: 2020-09-27


**SINGER**  
12W208,W209


SINGER  
114W100

[\[pdf\]](#) User Manual Instructions Price List  
Singer 114W100 user manual 577650 text archive org manualsbase id  
SINGER 114W100 Form, 2fltr w December. 1912 PRICE LIST PARTS MACHINE No.  
114 w 100 THE SINGER MAN ... NG, RIGHT HAND, ROUND BELT, TWO SPEED  
No. Plate Name Each 227270 2a; i2 201100 201101 20 1102 **227772** 2021711  
202400 2041 07 **227742** 202401 204107 20 nos lio 1 io 2041 III 201111 204112  
20072le ...  
lang:en **score:24** filesize: 2.24 M page\_count: 18 document date: 2020-10-02

SINGER  
72W13,W18

[\[pdf\]](#) Instructions Guide  
Singer Sewing Machine W18 User Guide 039c6058 43cd 37d4 7d76 af795be69c26 text archive org  
manualsonline id  
SINGER 72W13,W18 Form in2 - w OCTOBEK, 1919 LIST O F PARTS MACHINES  
Nos. 72w13 and 72 w18 THE ... ink Hin ;e Screw Stltd Nnl . 204249 1 :i 1 1 4 .Needle  
Hai- Conneeliii ;- Stud with 200072c and **202277** . Needle liar Conneeliii ; Sind Oil l o  
M 7: liiii ISO 2IJ0O80C 2i:i250 212227 \*1 2 :vyM ...  
lang:en **score:24** filesize: 3.83 M page\_count: 40 document date: 2020-09-27

 **SINGER** Tradition.



Model 2277

Feature	Benefit
23 Built-in Stitch Patterns	6 Basic Stitches, 11 Decorative Stitches, 5 Stretch Stitches, 1 Buttonhole—plenty of stitches for any project
Automatic Needle Threader	Easily threads the needle without frustration or eye strain
Fully Automatic 1-step Buttonhole	Create beautiful buttonholes in a simple 1-step process
Adjustable Stitch Length & Width	Personalize stitch length and width with just a turn of a dial
Automatic Tension	This system ensures excellent straight stitch quality, whatever type of fabric is being sewn
Included Accessories	Darning Plate, Thread Spool Cap, Holders, Sewer's Kit, All Purpose Foot, Buttonhole Foot, Button Sewing Foot, Zipper Foot, Edge/Cutting Guide, Bottoms, Needle, Lint Brush/Clean Ripper and Oil Bottle
Snap-On Presser Foot	Easily change from one presser foot to another—no need for screwdrivers
Quick Start Guide	Great for beginners, illustrates how to thread the machine and get started sewing
Heavy Duty Metal Frame	The internal skeleton of the sewing machine. The rigid support holds all the mechanism in perfect alignment for perfect sewing and durability
25 Year Limited Warranty	Limited 25-year on the sewing machine head, limited 2-year on electrical, limited 30-day warranty on labor

SINGER and Tradition are exclusive trademarks of The Singer Company Ltd. or its affiliates. ©2011 The Singer Company Limited or its affiliates.

[\[pdf\]](#) Quick Start Guide Guide Warranty Accessories  
Model 2277 singer traditional media rainpos 2063 |||  
Model **2277** Feature Benefit 23 Built-in Stitch Patterns 6 Basic Stitches, 11 Decorative Stitches, 5 Stretch Stitches, 1 Buttonhole-- plenty of stitches for any project Automatic Needle Threader Easily threads the needle without frustration or eye strain Fully Automatic 1-step Buttonhole Creat...  
lang:en **score:23** filesize: 243.79 K page\_count: 2 document date: 2011-06-28



[Singer Sewing Accessories User Guide 2022](#)  
Explore the comprehensive Singer Sewing Accessories User Guide 2022, featuring a wide range of presser feet, needles, scissors, and other essential notions. This guide provides detailed descriptions and instructions to enhance your sewing, quilting, embroidery, and crafting projects, helping you select the right accessories for any task. Discover compatible accessories for various Singer sewing machine models, including Heavy Duty, Quantum Stylist, Featherweight, and Legacy series.  
lang:es **score:23** filesize: 19.19 M page\_count: 72 document date: 2024-03-11

 


## [\[pdf\] User Manual Instructions](#)

021K5B0107 A cdr Manuel d Instruction Manual de Instrucciones Always unplug sewing machine from the electrical outlet when removing covers lubricating or making any other user servicing adjustments mentioned in original content syndigo asset 18cd6c72 9dba 4dbe b97d 4b389a7eb54b

PUSH Instruction Manual **2277** Manual de Instrucciones Manuel d Instruction GB IMPORTANT SAFETY INSTRUCTIONS When using an electrical appliance, basic safety should always be followed, including the following: Read all instructions before using this sewing machine. DANGER - To reduce the risk of el...

lang:en score:23 filesize: 958.54 K page\_count: 62 document date: 2011-09-22

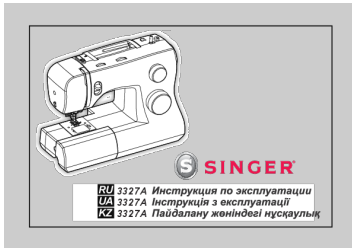

## [\[pdf\] Instructions](#)

3323 ukr indd yaroslav Скачать инструкцию Швейная машина Singer Talent 3327A белый купить недорого в Москве интернет магазине abc ru низкие цены характеристики отзывы 1540216608

5872v10ozcmry 8d esposycgchn46lexpumpzlc upload instructions v1 0o |||

RU 3327A UA 3327A KZ 3327A . . , ...

.....**2277**

lang:i-klngon score:23 filesize: 9.77 M page\_count: 112 document date: 2017-06-27



## [\[pdf\] User Manual Quick Start Guide Troubleshooting Guide Guide Catalog](#)

Singer Models 3321 3323 4452 7363 One 7285Q 8500Q XL ® quick loopers with 1 2 drops of Singer® Sewing Machine Oil Close looper cover TROUBLESHOOTING Keep User s Manual handy refer to it often It shows how thread operate maintain the sewing machine Become familiar parts understand directions communicate problems Plug into a power surge protector strip start guide 420 TO CLEAN Remove bobbin plate Loosen screws remove needle case Softly brush or vacuum feed dogs area lint To lubricate Put drop in ~ Keep 2265878P60 joann on demandware static Sites project catalog default dwd8822da7 images hi res edgesuite net aamm prd dw73410ebc

Singer quick start guide FREE Creative Ideas from Jo-Ann more projects, tips techniques at Joann ... ore cleaning or lubricating any sewing machine, unplug it and fully raise the needle. Singer Models **2277**, 3232 T O CLEAN: Open hinged front cover. Remove needle plate. Softly brush or vacuum feed dogs...

lang:en score:23 filesize: 362.89 K page\_count: 2 document date: 2015-06-26

 


## [SINGER Sewing Machine Accessory User Guide 2022](#)

Explore the SINGER Accessory User Guide 2022, a comprehensive catalog and instruction manual for SINGER sewing machine presser feet, embroidery hoops, needles, scissors, and other essential sewing notions. Learn how to use various SINGER accessories for quilting, garment sewing, crafting, and embellishment to enhance your creative projects.

lang:en score:22 filesize: 14.68 M page\_count: 72 document date: 2023-02-07



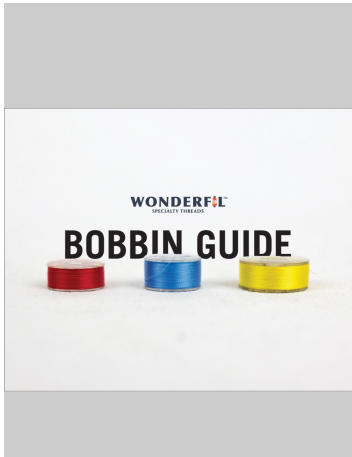

### [\[pdf\]](#) Guide

Bobbin Machine Guide Size Resources WonderFil Europe 9172681024553398784 cdn.shopify.com/files/1/618/9609/

TM TM BOBBIN GUIDE DISCLAIMER This bobbin guide is made available for use by WonderFil Specialty T ... 10 Superb 206K 206K25 20U 20U13 20U33 2250 Tradition 2259 Tradition 2263 2263 Simple 2273 Esteem II **2277** Tradition 2282 Tradition 237 239 251 2662 281 2932 306K 306K25 306W 3116 Simple 319 319K 3210 ...  
lang:en score:21 filesize: 1.28 M page\_count: 19 document date: 2017-02-14



### [SINGER Sewing Machine and Accessory Guide 2022](#)

Explore the SINGER 2022 User Guide for sewing machine accessories, including presser feet, needles, scissors, and more. Discover tools to enhance quilting, embroidery, utility, and decorative sewing projects, offering time-saving solutions and fostering creativity for all skill levels.

lang:fr score:21 filesize: 21.65 M page\_count: 72 document date: 2024-03-11



### [\[pdf\]](#) Quick Start Guide Guide

CAUTION Read this before operating your unit DA 2277 vocopro pg 02 Caution 06 getting Started 07 mic basics1 Digital Key Control Mixer with Dual Rechargeable Wireless Microphone System FEATURES Receiver Base Charges Microphones and Also Serves as a Docking Station 11 Step Controller da2277 da products manuals Manuals

DA-**2277** FEATURES: Wireless Receiver Base Charges Wireless Microphones and Also Serves as a Microphone Docking Station 11-Step Digital Key Controller Professional Digital Echo with Repeat and Delay Controls Vocal Cancel and Vocal Partner Features to Remove Guide Vocals from Multiplex Karaoke Medi...

lang:en score:21 filesize: 969.88 K page\_count: 26 document date: 2005-07-01

 


### [\[pdf\]](#) User Manual Parts List

371U Singer® reference library diamondneedle documents Singer Parts Manual 6 |||

From the library of: Diamond Needle Corp / PARTS BOOK FOR SINGER 371 U P371402 J -- I . b H ... 1 145725-001 2 144504.-QOI I 144505-QOO 1 102716-Q03 I 00 1660-5 13 I 14599 I -Q01 I 5 11091-QOI 2 **12277** 1-Q02 I 009669-412 Assembly No. U-63 Pre-Tension Assembly 145723-QO I NOTE PREF IX ALL NUMBE...

lang:en score:20 filesize: 4.29 M page\_count: 46 document date: 2020-04-02

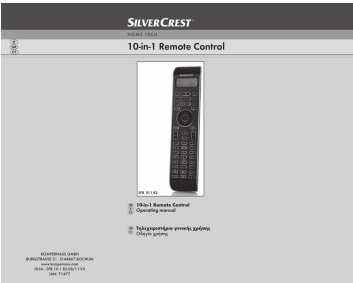

[SilverCrest 10-in-1 Remote Control Operating Manual](#)

Comprehensive operating manual for the SilverCrest 10-in-1 Remote Control (model SFB 10.1 B2). Learn about its features, setup, programming, and usage for various home entertainment devices.

lang:en score:18 filesize: 2.52 M page\_count: 109 document date: 2012-04-24


SINGER® 2277		
English   Spanish   French		
English		
1 STRAIGHT STITCH	Seams	The most common use for the straight stitch is for joining fabrics together with a seam. The machine needle plate has a series of etched markings to the right of the presser foot which serve as guidelines for various widths of seam allowances when sewing with the needle in center position. Line up the raw edges of the fabric with the desired seam allowance guideline to sew a seam.
2 STRAIGHT STITCH	Quilt Piecing	Quilt piecing is done using a 1/4" seam allowance. After sewing, press seams toward the darker of the two fabrics, to help prevent the seam allowance from being visible on the top side of the quilt. It may be helpful to use a Quarter Inch Foot (additional accessory for some machine models).
3 STRAIGHT STITCH	Topstitching	Topstitching is a line of straight stitching on the outside of a garment or project, usually as a decorative embellishment. Set the machine for straight stitch, with a stitch length of 3 to 3.5mm. Sew 1/4" - 3/8" from the edge of the fabric. If sewing with topstitching thread, use a SINGER Topstitching Needle, size 90/14 for medium weight fabrics, or a SINGER Topstitching Needle, size 100/16 for heavier fabrics. A Topstitching Needle (additional accessory) has a longer eye to accommodate thicker threads, such as topstitching thread which gives the stitches a bolder look.
4 STRAIGHT STITCH	Edge Stitching	Edge stitching can be used to add stability to projects like tote bags, or it can be used simply as a decorative embellishment. Set the machine for straight stitch. Sew approximately 1/8" from the edge of the fabric.
5 STRAIGHT STITCH	Basting	Basting stitches are used to temporarily hold fabrics together, for example, when you want to check the fit of a garment before sewing the actual seam. To set the machine for basting, if your machine has adjustable stitch length, select straight stitch with the longest stitch length setting. It is helpful to also slightly reduce the upper thread tension as well (this makes it easier to remove the temporary basting stitches later). Sew the row of basting stitches, and check the fit.

[\[pdf\] Accessories](#)

Untitled SINGER® 2277SINGER 2277 NAsvpworldwide widen net content yko8ami2na SINGER NA u cko5pg |||

English 1 STRAIGHT STITCH 2 STRAIGHT STITCH 3 STRAIGHT STITCH 4 STRAIGHT STITCH 5 STRAIGHT STITCH SINGER **2277** English Spanish French Seams Quilt Piecing Topstitching Edge Stitching Basting The most common use for the straight stitch is for joining fabrics together with a seam. The machine nee...

 lang:en score:18 filesize: 809.96 K page\_count: 80 document date: 2023-11-28

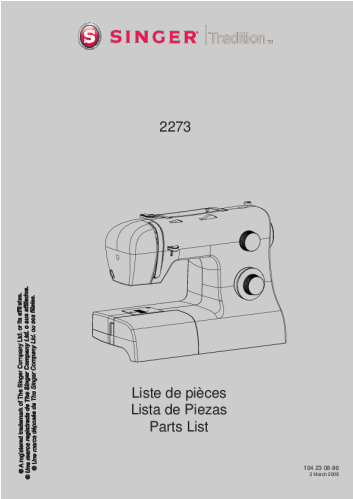


[\[pdf\] User Manual Parts List](#)

2273 partslist indd bernt stahl TraditionTradition SINGERPORT Y singerport singer tradition machine Is the Singer 2277 a portable or can it be installed into sewing cabinet 4 6 This manual comes under category Sewing machines and has been rated by 3 people with an average of 8 5 Tradition Pos Part No Description 1 K6B0243000 Arm shaft 2 003043028 Spring pin 3x28" 003010083 E Ring"ETW 8" Images Uploads MachineFiles |||

Tradition 2273 Liste de pices Lista de Piezas Parts List 104 23 08-96 3 March 2008 A 2 Singer Tradition 2273 Pos Part No. Description 1 K6B0243000 Arm shaft 2 003043028 Spring pin 328 3 003010083 E-Ring ETW-8 4 003043030 Spring pin 330 5 D5A0583000 Arm shaft collar 6 D5A0573003 Arm sh...

 lang:en score:18 filesize: 1.57 M page\_count: 23 document date: 2008-03-03

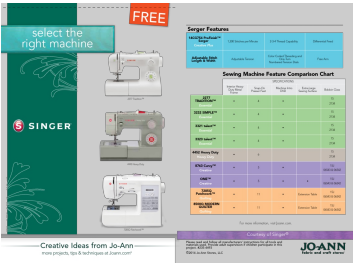


[\[pdf\] Instructions Specifications Catalog](#)

select the right machine JOANN 7285Q Patchwork™ 2277 Tradition™ 4443 Heavy Duty FREE Courtesy of Singer® For more information visit Joann Sewing Machine 4453871P61 joann on demandware static Sites project catalog default dw3c8d4643 images hi res |||

select the right machine FREE **2277** TraditionTM 4443 Heavy Duty 7285Q PatchworkTM Creative Ideas from Jo-Ann more projects, tips techniques at Joann.com Serger Features 14CG754 ProFinishTM Serger Creative Plus 1,300 Stitches per Minute 2-3-4 Thread Capability Differential Feed Adjustable ...

 lang:en score:17 filesize: 393.57 K page\_count: 2 document date: 2014-11-17

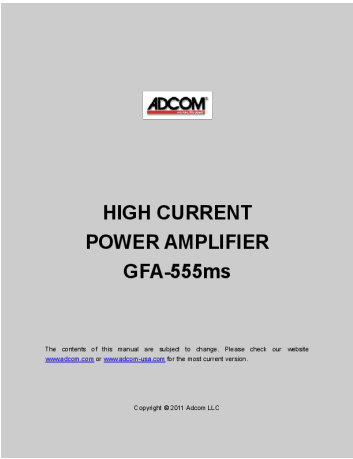

[pdf] User Manual Instructions

GFA 555ms user manual rev2 011911 ADCOM 555MS 01 MANUAL drive google u 0 uc id 1e v4lIT714JmqXgfk5jUGx8XFdJGvd10S export |||


HIGH CURRENT POWER AMPLIFIER GFA-555ms The contents of this manual are subject to change. Please che ... rough Friday PO BOX 54096 9:00AM to 4:00PM Arizona Time PHOENIX, AZ 85078 Phone Number: 480-607-**2277** U.S.A. email: info adcom-usa.com When calling or writing about your GFA-555ms, be sure to n... lang:en **score:17** filesize: 164.53 K page\_count: 22 document date: 2016-12-20



[pdf] User Manual Instructions

Microsoft Word GFA 585se user manual 04 19 2017 docx Timmy Gfa Basic Manual Pdf Gliding Knowledge murraybridgegc adcom |||

 ADVANCED POWER AMPLIFIER GFA-585se The contents of this manual are subject to change. Please check o ... rough Friday PO BOX 54096 9:00AM to 4:00PM Arizona Time PHOENIX, AZ 85078 Phone Number: 480-607-**2277** U.S.A. email: info adcom-usa.com When calling or writing about your GFA-585se, be sure to no... lang:en **score:17** filesize: 595.98 K page\_count: 22 document date: 2017-06-16

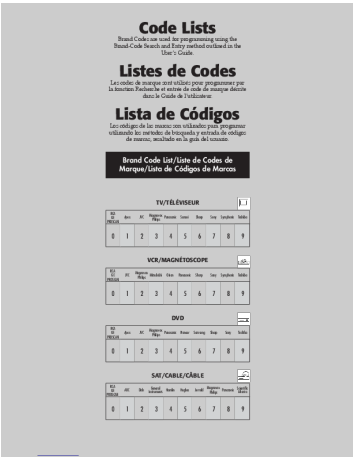

RCA Universal Remote Control Code List

A comprehensive list of brand codes for programming RCA universal remote controls, covering TVs, VCRs, DVD players, satellite receivers, and more.

lang:tl **score:17** filesize: 145.63 K page\_count: 12 document date: 2019-07-23

## Code Lists

Brand Codes are used for programming using the Brand-Code Search and Entry method outlined in the User's Guide.

## Listes de Codes

Les codes de marque sont utilisés pour programmer par la fonction Recherche et entrée de code de marque décrite dans le Guide de l'utilisateur.

## Lista de Códigos

Los códigos de las marcas son utilizados para programar utilizando los métodos de búsqueda y entrada de códigos de marcas, resaltado en la guía del usuario.

### Brand Code List/Liste de Codes de Marque/Liste de Códigos de Marcas

#### TV/TÉLÉVISEUR

Brand Code	Abex	JVC	Magnavox Philco	Panasonic	Samsung	Sharp	Sony	Sylvania	Toshiba
0	1	2	3	4	5	6	7	8	9

#### VCR/MAGNÉSCOPE

Brand Code PSE Code	JVC	Magnavox Philco	Hitachi	Onix	Panasonic	Sharp	Sony	Sylvania	Toshiba
0	1	2	3	4	5	6	7	8	9

#### DVD

Brand Code	Abex	JVC	Magnavox Philco	Panasonic	Philips	Samsung	Sharp	Sony	Toshiba
0	1	2	3	4	5	6	7	8	9

#### SAT/CABLE/CÂBLE

Brand Code	Abex	Onix	General Electronics	Hitachi	Hitachi	Jewell	Magnavox Philco	Panasonic	Sylvania
0	1	2	3	4	5	6	7	8	9

[\[pdf\]](#) Guide

Code Lists Listes de Codes Lista Códigos Brand are used for programming using the Brand-Code Search and Entry method outlined in User s Guide Les codes marque sont utilisés pour programmer par Abex

1172 Admiral 1001 RCR815 OTHER CL rcaaudiovideo docs common

 
Code Lists Brand Codes are used for programming using the BrandCode Search and Entry method outlined ...

.....2274, **2277**

Totevision.....2013, 2014, 2054 TM...

lang:tl score:17 filesize: 169.35 K page\_count: 12 document date: 2009-09-03



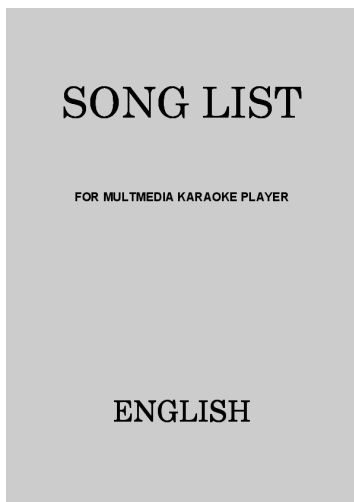

### [Song List for Multimedia Karaoke Player](#)

Comprehensive song list for multimedia karaoke players, featuring a wide range of popular English songs and artists. Ideal for users seeking available tracks for their karaoke system.

lang:en **score:16** filesize: 2.09 M page\_count: 90 document date: 2007-12-19

 


### [\[pdf\] Parts List](#)

1412 PL indd bernt stahl 1 416516101 ARM SHAFT 2 270 V61473000 BALANCE 3 416122101 SET SCREW M4x6 C 4 003043524 PIN 5x24 smscanada Singer Parts |||

1412 Liste de pices Lista de Piezas Parts List 104 23 15-96 6 Nov 2013 A 2 Singer 2273/2277/2282 Pos Part No. 1 416516101 2 270 V61473000 3 416122101 4 270 003043524 5 270 004400080 6 416156301 7 416765101 8 416121001 9 416515201 10 416122401 11 270 G4A0533000 12 416604601 13 416604601 14 ...

lang:de **score:16** filesize: 1.44 M page\_count: 21 document date: 2013-11-06

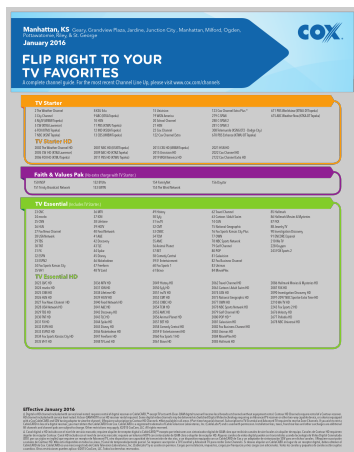

### [\[pdf\] Guide](#)

Channel Lineup Manhattan KS A complete channel guide For the most recent Line Up please visit cox channels 671 PBS Worldview KTWU DT Topeka 675 ABC Weather Now KTKA 2021 HSN HD 2022 Cox 2122 Extra cl manhattan media support print tv cls kansas

Channel Lineup Manhattan, KS Geary, Grandview Plaza, Jardine, JuncMtiaonnhCatittayn,,MKSanhattan, Mi ... Goal Line/Buzzer Beater HD 2269 Univision Deportes HD 2273 Big Ten Network HD 2276 SEC Network HD 2277 SEC Network 2 HD 287 MLB Strikezone 288 World Fishing Channel 2287 MLB Strikezone HD 2288 Worl...

 
lang:en **score:16** filesize: 183.14 K page\_count: 4 document date: 2016-01-29



### [\[pdf\] User Manual Instructions](#)

IB 71477 SFB10 1B2 GB RO BG 21 kompernass 80 admin view manual ||| HOME TECH 10-in-1 Remote Control KOMPERNASS GMBH BURGSTRASSE 21 D-44867 BOCHUM www.kompernass.com ... 2397 2294 2440 2398 2147 2397 2502 1526 2281 2310 2319 2150 2279 2400 2398 2293 2381 2383 2268 2273 2277 2278 2279 2280 2282 2289 2295 2308 2375 2312 1525 1528 1529 2276 2272 2281 2343 2309 2310 2003 ...

lang:en **score:16** filesize: 3.18 M page\_count: 135 document date: 2012-04-24

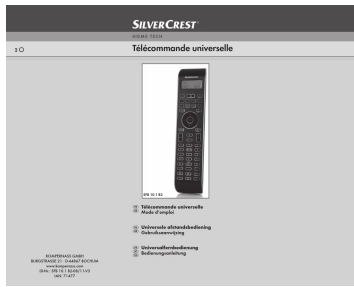


[\[pdf\]](#) User Manual

IB 71477 SFB10 1B2 LB2 4 kompernass 80 admin view manual |||

HOME TECH 2 Tlcommande universelle KOMPERNASS GMBH BURGSTRASSE 21  
D-44867 BOCHUM www.kompernass. ... 2397 2294 2440 2398 2147 2397 2502  
1526 2281 2310 2319 2150 2279 2400 2398 2293 2381 2383 2268 2273 **2277** 2278  
2279 2280 2282 2289 2295 2308 2375 2312 1525 1528 1529 2276 2272 2281 2343  
2309 2310 2003 ...

 
lang:fr score:16 filesize: 3.06 M page\_count: 137 document date: 2012-04-24

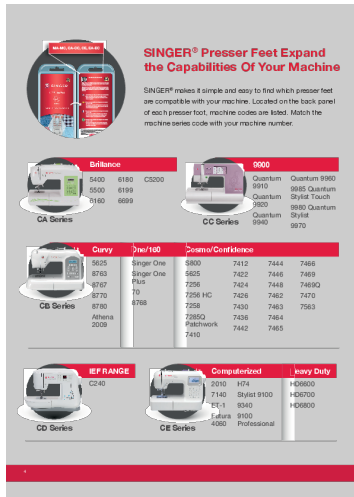

## SINGER Presser Feet Compatibility Guide

Discover compatible SINGER presser feet for your sewing machine. This guide lists machine series codes and corresponding models to help you find the right presser foot for enhanced sewing capabilities.

 lang:de score:16 filesize: 1.16 M page\_count: 2 document date: 2021-02-25

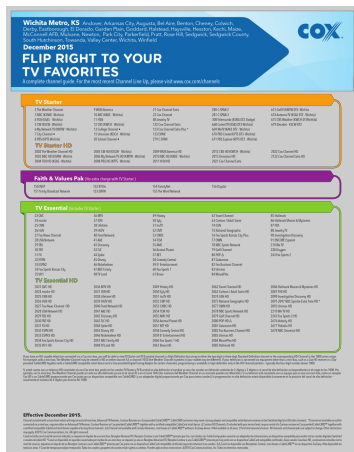

[\[pdf\]](#) Guide

Channel Lineup Wichita Metro A complete channel guide 2012 CBS HD KWCH 2015 Univision 2021 Cox  
Extra 673 GetTV KMTW DT3 674 Antenna TV KSAS DT2 675 Weather DT Wichita 679 Decades KSCW  
cl wichita media cox support print tv cls kansas

Channel Lineup Wichita Metro, Derby, Eastborough, EKI DSorAanddoo,  
vGear,rdAerknaPnlSaains,CGiotyd, ... Goal Line/Buzzer Beater HD 2269 Univision  
Deportes HD 2273 Big Ten Network HD 2276 SEC Network HD **2277** SEC Network 2  
HD 292 beIN Sports 293 beIN Sports en Espanol 2289 Outside TV HD 2290  
Universal...

lang:en score:16 filesize: 184.89 K page\_count: 4 document date: 2015-12-07



### [Certified Pre-Owned Sewing and Embroidery Machines Catalog](#)

Discover high-quality, certified pre-owned sewing and embroidery machines from leading brands. All machines are thoroughly inspected, repaired, and tested, backed by a 1-year mechanical warranty. Find exceptional value and reliable performance for your crafting needs.

lang:en score:16 filesize: 8.95 M page\_count: 15 document date: 2025-05-12