

[manuals.plus](#) /› [Whirlpool](#) /› [Whirlpool FFTDNM229X2BSFR 9kg Heat Pump Tumble Dryer User Manual](#)

Whirlpool FFTDNM229X2BSFR

Whirlpool FFTDNM229X2BSFR 9kg Heat Pump Tumble Dryer User Manual

Model: FFTDNM229X2BSFR

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Whirlpool FFTDNM229X2BSFR 9kg Heat Pump Tumble Dryer. Please read it thoroughly before using the appliance and keep it for future reference.

The Whirlpool FFTDNM229X2BSFR is a 9 kg capacity heat pump tumble dryer designed for energy-efficient and gentle drying of various fabric types. It features advanced technologies such as FreshCare+ for fabric freshness and a user-friendly LED display with tactile controls.



Figure 1: Front view of the Whirlpool FFTDNM229X2BSFR 9kg Heat Pump Tumble Dryer.

2. SETUP AND INSTALLATION

2.1 Unpacking

Carefully remove all packaging materials. Inspect the appliance for any damage during transit. Keep packaging materials out of reach of children.

2.2 Placement

Place the tumble dryer on a firm, level floor. Ensure adequate ventilation around the appliance. Do not install the dryer behind a lockable door, a sliding door, or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

2.3 Electrical Connection

Connect the appliance to a properly earthed electrical outlet. Ensure the voltage and frequency match the specifications on the rating plate. Do not use extension cords or multiple adapters.

2.4 Water Drainage

The heat pump dryer collects condensed water in a removable tank. Ensure the tank is correctly inserted.

For continuous drainage, an optional drainage kit may be available (refer to separate instructions if applicable).



Figure 2: Angled view of the tumble dryer, showing its compact design suitable for various placements.

3. OPERATING INSTRUCTIONS

3.1 Loading Laundry

Open the dryer door and load laundry into the drum. Do not overload the dryer; respect the maximum 9 kg capacity. Close the door firmly.

3.2 Control Panel Overview

The control panel features an LED screen, tactile buttons, and a central dial for program selection.



Figure 3: Detailed view of the control panel, showing the program dial, LED display, and tactile buttons.

3.3 Program Selection

Turn the central dial to select the desired drying program. Available programs include:

- **Cotton:** For robust cotton items.
- **Synthetics:** For synthetic and mixed fabric items.
- **Delicate:** For delicate items requiring gentle care.
- **Mixed:** For mixed loads of cotton and synthetics.
- **Anti-allergy:** Designed to reduce common allergens.
- Other specialized programs may be available depending on the model.

3.4 Special Features

- **FreshCare+:** This technology keeps laundry fresh inside the dryer for up to 6 hours after the cycle ends, preventing creases and odors.
- **Delayed Start:** Allows you to postpone the start of the drying cycle for a convenient time.
- **Heat Pump Technology:** Dries at lower temperatures, protecting fabrics and consuming less energy.

3.5 Starting a Cycle

After selecting the program and any desired options, press the Start/Pause button to begin the drying cycle.



Figure 4: View inside the drum, illustrating the interior design for efficient drying.

4. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your tumble dryer.

4.1 Cleaning the Lint Filter

Clean the lint filter after every drying cycle. Pull out the filter, remove accumulated lint, and rinse under running water if necessary. Reinsert the dry filter.



Figure 5: The lint filter compartment, which should be cleaned after each use to maintain efficiency.

4.2 Emptying the Water Tank

Empty the condensed water tank after each drying cycle. Pull out the tank, pour out the water, and reinsert it. If the tank is full, the dryer will stop operating.



Figure 6: The water collection tank, which needs to be emptied regularly.

4.3 Cleaning the Condenser

The condenser should be cleaned periodically (e.g., every few months) to ensure efficient operation. Refer to the full user manual for detailed instructions on how to access and clean the condenser.

5. TROUBLESHOOTING

If you encounter issues with your tumble dryer, consult the following common troubleshooting tips before contacting customer service.

5.1 Dryer Not Starting

- Ensure the power cord is securely plugged in.
- Check if the door is fully closed.
- Verify that a program has been selected and the Start/Pause button pressed.
- Check the circuit breaker or fuse in your home.

5.2 Laundry Not Drying Properly

- Check if the lint filter is clean.
- Ensure the water tank is empty.
- Avoid overloading the dryer.
- Select the appropriate drying program for the fabric type.
- Clean the condenser if it hasn't been done recently.

5.3 Unusual Noises

- Ensure the dryer is level and stable.
- Check for any foreign objects in the drum.

For persistent issues or error codes displayed on the LED screen, refer to the comprehensive troubleshooting section in your full user manual or contact Whirlpool customer service.

6. SPECIFICATIONS

Feature	Specification
Brand	Whirlpool
Model Number	FFTNDNM229X2BSFR
Type	Heat Pump Tumble Dryer
Capacity	9 kg
Energy Class	A++
Annual Energy Consumption	259 kWh
Noise Level	64 dB
Dimensions (H x W x D)	84.9 x 59.5 x 64.9 cm
Weight	46.5 kg
Key Technologies	Heat Pump, FreshCare+
Features	Delayed Start, LED Display, Tactile Buttons



Figure 7: The energy label, indicating the A++ energy efficiency rating and other key performance metrics.

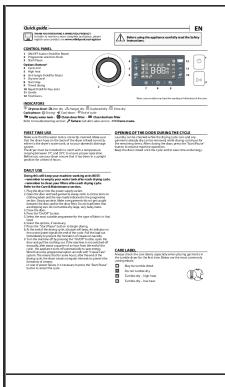
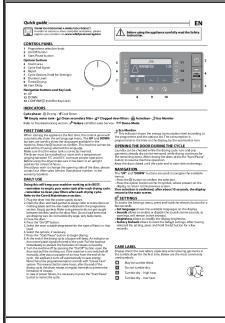
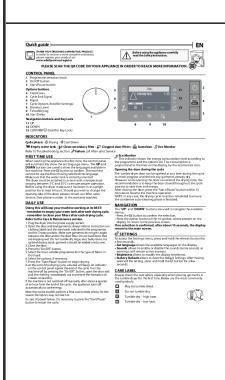
7. WARRANTY AND SUPPORT

This Whirlpool FFTDNM229X2BSFR tumble dryer is covered by a manufacturer's warranty. For specific terms and conditions, please refer to the warranty card included with your appliance or visit the official Whirlpool website.

Our customer service is available to assist you with any questions regarding the installation, use, or maintenance of your appliance. Please have your model number (FTTDNM229X2BSFR) and purchase date ready when contacting support.

For further assistance, please visit the [Whirlpool official website](#) or contact your local service center.

Related Documents - FFTDNM229X2BSFR

	<p>Whirlpool Tumble Dryer Quick Guide and User Manual</p> <p>A comprehensive quick guide for Whirlpool tumble dryers, covering operation, programs, options, maintenance, troubleshooting, and care labels.</p>
	<p>Whirlpool Tumble Dryer Troubleshooting Guide</p> <p>A comprehensive guide to troubleshooting common issues with Whirlpool tumble dryers, including solutions for the dryer not turning on, not starting, garments remaining wet, long drying times, and error indicators.</p>
	<p>Whirlpool Tumble Dryer Quick Guide</p> <p>A comprehensive quick guide for Whirlpool tumble dryers, covering operation, programs, options, maintenance, and troubleshooting. Learn how to use your appliance efficiently and effectively.</p>
	<p>Whirlpool Tumble Dryer Quick Guide</p> <p>This quick guide provides essential information for operating, maintaining, and troubleshooting your Whirlpool tumble dryer, covering control panel functions, programs, options, cleaning procedures, and common issue resolution.</p>
	<p>Whirlpool Tumble Dryer Quick Start Guide & User Manual</p> <p>Get started with your Whirlpool tumble dryer. This quick guide provides essential setup, usage, maintenance, and troubleshooting information for optimal performance. Register your appliance and access full documentation online.</p>
	<p>Whirlpool Tumble Dryer Quick Guide</p> <p>A quick guide to using and maintaining your Whirlpool tumble dryer, covering first-time use, daily operation, cleaning, troubleshooting, and program details.</p>

