

[Manuals.plus](#) /

› [M-Amazup](#) /

› M-Amazup Portable CD Boombox with Bluetooth, FM Radio, USB, and AUX Input - Instruction Manual

M-Amazup C-09-R

M-Amazup Portable CD Boombox (Model C-09-R) - Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your M-Amazup Portable CD Boombox, Model C-09-R. Please read this manual thoroughly before using the device and retain it for future reference.



Image 1: Front view of the M-Amazup Portable CD Boombox.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- CD Player Boombox x1
- AC Power Cord x1
- User Manual x1

3. SETUP

3.1 Power Supply

Your boombox can be powered by either AC power or batteries.

AC Power (Recommended for Home/Office Use)

1. Ensure the boombox is turned off.
2. Connect the supplied AC power cord to the AC IN jack on the back of the boombox.
3. Plug the other end of the AC power cord into a standard wall outlet (AC 100-240V, 50/60Hz).

Battery Power (For Portable Use)

1. Ensure the boombox is turned off and disconnected from AC power.
2. Open the battery compartment cover on the bottom of the unit.
3. Insert 6 x 'C' size batteries (not included) according to the polarity markings (+/-) inside the compartment.
4. Close the battery compartment cover securely.

Dual Power Supply Options Available

AC Powered - Great for Home, Office



Using Battery--6 x C Size(Not included battery)



Image 2: Illustration of dual power supply options: AC adapter and C-size batteries.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

Familiarize yourself with the control panel:

- **FUNC/MODE Button:** Press to switch between CD, Bluetooth, USB, AUX, and FM Radio modes.
- **VOL- / VOL+ Buttons:** Adjust the volume level.
- **PLAY/PAUSE (▶/◀) Button:** Play or pause playback.

- **STOP (■) Button:** Stop playback.
- **PREVIOUS (◀◀) / NEXT (▶▶) Buttons:** Skip tracks/stations or fast forward/rewind.
- **SCAN Button:** In FM mode, press to auto-scan and save stations.
- **SLEEP Button:** Set the sleep timer.



Image 3: Overview of boombox features and controls.

4.2 CD Playback

1. Press the **FUNC/MODE** button to select CD mode. The LCD display will show "CD".
2. Open the CD compartment cover.
3. Place a CD (CD, CD-R, or CD-RW) onto the spindle with the label side facing up.
4. Close the CD compartment cover. The CD will begin playing automatically.
5. Use the **PREVIOUS (◀◀)** and **NEXT (▶▶)** buttons to navigate tracks.
6. Press the **PLAY/PAUSE (▶/◀)** button to pause or resume playback.
7. Press the **STOP (■)** button to stop playback.
8. **Repeat/Shuffle Functions:** Repeatedly press the 'Repeat' or 'Program' button (if available, otherwise refer to

specific model instructions) to cycle through single track repeat, all track repeat, or random play.



Image 4: CD/USB playback options and controls.

4.3 USB Playback

1. Insert a USB flash drive containing MP3 audio files into the USB port.
2. Press the **FUNC/MODE** button to select USB mode. The LCD display will show "USB".
3. Playback will begin automatically. Use the **PREVIOUS** (◀◀) and **NEXT** (▶▶) buttons to navigate tracks.

4.4 Bluetooth Connection

Connect your smartphone, tablet, or other Bluetooth-enabled device wirelessly.

1. Press the **FUNC/MODE** button to select Bluetooth mode. The LCD display will show "BT" and flash, indicating it's ready for pairing.
2. Enable Bluetooth on your external device and search for available devices.
3. Select "M-Amazup Boombox" (or similar name) from the list.
4. Once paired, the "BT" indicator will stop flashing, and you can play audio from your device through the



Image 5: Bluetooth 5.1 connectivity for wireless audio streaming.

4.5 FM Radio Operation

1. Extend the telescopic antenna for optimal reception.
2. Press the **FUNC/MODE** button to select FM Radio mode. The LCD display will show the frequency.
3. Press the **SCAN** button to automatically scan and save available FM stations (87.5-108MHz).
4. Use the **PREVIOUS** (◀◀) and **NEXT** (▶▶) buttons to tune to saved stations.

Portable Radio with Superior Reception

360° swivel antenna ensures stable signal for clear listening at home.



Image 6: The boombox with its telescopic antenna extended for FM radio reception.

4.6 AUX Input

1. Connect an external audio device (e.g., MP3 player) to the AUX IN port using a 3.5mm audio cable (not included).
2. Press the **FUNC/MODE** button to select AUX mode. The LCD display will show "AUX".
3. Control playback from your external device.

4.7 Headphone Jack

For private listening, plug 3.5mm headphones into the headphone jack. Audio will automatically switch from the speakers to the headphones.

Dynamic Stereo Sound

Dual speakers deliver vibrant audio with clarity.
Headphone jack for private listening.



Image 7: Close-up of the headphone jack and USB port.

4.8 Sleep Timer

The sleep timer allows the boombox to automatically power off after a set period.

1. While the boombox is playing, press the **SLEEP** button.
2. Repeatedly press the **SLEEP** button to cycle through available sleep times (e.g., 10, 20, 30, 60, 90 minutes, or OFF).
3. The boombox will automatically turn off after the selected duration.

5. MAINTENANCE

5.1 Cleaning

- Always unplug the boombox from the power source before cleaning.
- Use a soft, dry cloth to wipe the exterior surfaces.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.

- For the CD lens, use a specialized CD lens cleaner disc.

5.2 Storage

- If storing the unit for an extended period, remove all batteries to prevent leakage.
- Store the boombox in a cool, dry place away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your M-Amazup Portable CD Boombox, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	AC cord not properly connected; Batteries depleted or incorrectly inserted.	Check AC cord connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Incorrect mode selected; Headphones connected.	Increase volume; Select correct mode (CD, BT, USB, AUX, FM); Disconnect headphones.
CD skipping or not playing	CD is dirty, scratched, or inserted incorrectly; Unit is vibrating.	Clean or replace CD; Ensure CD is inserted correctly; Place unit on a stable surface.
Bluetooth not connecting	Boombox not in Bluetooth mode; Device too far; Bluetooth not enabled on external device.	Switch boombox to Bluetooth mode; Move device closer; Enable Bluetooth on your device and re-pair.
Poor FM reception	Antenna not extended; Weak signal area.	Fully extend the telescopic antenna; Try repositioning the unit.

If the problem persists after attempting these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Model Number	C-09-R
Brand	M-Amazup
Product Dimensions (L x W x H)	9.01 x 8.23 x 4.29 inches
Item Weight	2.86 pounds
Connectivity Technology	Auxiliary, Bluetooth 5.1, USB
Supported Media	CD, CD-R, CD-RW, USB (MP3)
FM Frequency Range	87.5-108 MHz
Speaker Type	Stereo
Power Source	AC (adapter included) or 6 x 'C' Batteries (not included)

Feature	Detail
Color	Red
Manufacturer	M-Amazup

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official M-Amazup website. Keep your purchase receipt as proof of purchase.