



[Manuals.plus](#) /

> [JREN](#) /

> JREN Tablet for Kids JR-J10 User Manual

## JREN JR-J10

# JREN Tablet for Kids JR-J10 User Manual

Model: **JR-J10** | Brand: **JREN**

## INTRODUCTION

Welcome to the JREN Tablet for Kids JR-J10 user manual. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your new tablet. Designed with children in mind, this 10.1-inch Android 14 tablet features an Octa-core processor, 8GB RAM (4 real + 4 virtual), 64GB storage (expandable to 1TB), Wi-Fi, Bluetooth, and robust parental controls through Google Kids Space and Family Link. Please read this manual thoroughly to ensure optimal use and a safe experience for your child.

# 10 Inch Large Screen

Octa-Core CPU | 4GB RAM+4GB Virtual | 64GB ROM



Image: The JREN Tablet for Kids JR-J10 showcasing its 10-inch large screen and key specifications.

## WHAT'S IN THE BOX

Upon opening your JREN Tablet for Kids package, please verify that all the following items are included:

- 10.1 Inch Kids Tablet
- Charging Cord
- Charger

Your browser does not support the video tag.

Video: An unboxing demonstration of the JREN 10-inch kids Android tablet, showing the contents of the package and initial setup steps.

## SETUP

1. **Power On:** Press and hold the power button located on the side of the tablet until the screen illuminates.
2. **Initial Configuration:** Follow the on-screen prompts to select your language, region, and agree to the terms of service.

3. **Connect to Wi-Fi:** Select your preferred Wi-Fi network from the list and enter the password. A stable internet connection is required for initial setup and app downloads.
4. **Google Account Setup:** Sign in with an existing Google account or create a new one. This is necessary to access the Google Play Store and Google Kids Space.
5. **Google Kids Space Activation:** Follow the instructions to set up Google Kids Space, which provides a safe and curated environment for children.



# Google Kids Space



Safe and educational apps for children

*Image: The JREN Tablet for Kids showing the Google Kids Space interface, designed for safe and educational content for children.*

## OPERATING INSTRUCTIONS

### Basic Navigation

- **Touch:** Tap an icon to open an app or select an item.
- **Swipe:** Slide your finger across the screen to scroll through pages or lists.
- **Pinch-to-Zoom:** Use two fingers to zoom in or out on photos and web pages.

- **Home Screen:** Tap the home button (usually a circle or house icon) to return to the main screen.

## App Management

- **Opening Apps:** Tap an app icon on the home screen or in the app drawer.
- **Downloading Apps:** Access the Google Play Store (within Google Kids Space for children) to download age-appropriate applications.
- **Closing Apps:** Swipe up from the bottom of the screen and swipe the app card away to close it.

## Camera Usage

The tablet features a 2MP front camera and a 5MP rear camera. Open the Camera app to take photos or record videos.



*Image: A child interacting with the JREN Tablet for Kids, with an inset showing the tablet's HD dual camera capabilities (2MP front, 5MP rear).*

Your browser does not support the video tag.

*Video: A demonstration of the JREN 10-inch Android tablet, highlighting its Wi-Fi connectivity and support for the Google Play Store.*

## PARENTAL CONTROL FEATURES

The JREN Tablet for Kids is equipped with Google Kids Space and Google Family Link to provide a secure and controlled digital environment for children. These features allow parents to manage various aspects of the tablet's usage:

- **Screen Time Limits:** Set daily limits for tablet usage and schedule bedtime.
- **Content Filtering:** Control access to websites and apps, ensuring only age-appropriate content is available.
- **App Approvals:** Approve or block app downloads from the Google Play Store.
- **Activity Reports:** Monitor your child's activity on the tablet.
- **Device Lock:** Remotely lock the device if needed.

For detailed instructions on setting up and managing parental controls, please refer to the Google Family Link support documentation.



*Image: Visual representation of the parental control features available on the JREN Tablet for Kids, including time limits, content filtering, child lock, and activity reporting.*

## MAINTENANCE

---

### Cleaning the Tablet

- Use a soft, lint-free cloth to gently wipe the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics. Avoid harsh chemicals.
- Ensure the tablet is powered off and unplugged before cleaning.

### Battery Care

- To prolong battery life, avoid fully discharging the tablet frequently.
- Charge the tablet using the provided charger and charging cord.
- Do not expose the tablet to extreme temperatures. The 6000mAh battery supports up to 12 hours of continuous use.

### Software Updates

Periodically check for system updates in the tablet's settings menu to ensure optimal performance and security. Updates often include bug fixes and new features.

### Kids-Proof Case

The included EVA kids-proof case is designed to protect the tablet from drops and bumps. Keep the case clean by wiping it with a damp cloth. Ensure the tablet is properly seated in the case for maximum protection.

# Kids-proof Case



Image: The JREN Tablet for Kids secured in its robust kids-proof EVA case, designed to withstand drops and impacts.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Tablet does not turn on.	Low battery; system crash.	Charge the tablet for at least 30 minutes. Press and hold the power button for 10-15 seconds to force a restart.
Cannot connect to Wi-Fi.	Incorrect password; router issue; Wi-Fi disabled.	Verify Wi-Fi password. Restart your router. Ensure Wi-Fi is enabled in tablet settings.
Apps are crashing or freezing.	Insufficient memory; app bug; outdated software.	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear Cache). Update the app or tablet software.

Problem	Possible Cause	Solution
Screen is unresponsive.	Temporary software glitch.	Force restart the tablet by holding the power button for 10-15 seconds.
Battery drains quickly.	Too many background apps; high screen brightness; old battery.	Close unused apps. Reduce screen brightness. Check battery usage in settings to identify power-hungry apps.

If problems persist after attempting these solutions, please contact JREN customer support.

## SPECIFICATIONS

Feature	Detail
Model Name	JR-J10
Operating System	Android 14
Processor	Octa-core, 2 GHz
RAM	8GB (4 real + 4 virtual)
Internal Storage	64GB (expandable up to 1TB)
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels HD
Front Camera	2MP
Rear Camera	5MP
Wireless Type	802.11ac (Wi-Fi), Bluetooth
Battery Capacity	6000mAh
Average Battery Life	Up to 12 hours (usage dependent)
Item Weight	1.56 pounds
Product Dimensions	10.5 x 10.5 x 0.6 inches
Color	Black (for this model)

## WARRANTY AND SUPPORT

The JREN Tablet for Kids JR-J10 comes with a **2-year worry-free guarantee**. To activate and extend your warranty, please register your product on the official JREN website. Details for registration can be found in the included User Guide or by visiting [www.jren.us](http://www.jren.us).

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact JREN customer support. Support contact information is typically provided in the packaging or on the official website.

Customer Service: [support@jren.us](mailto:support@jren.us)

