

Victorinox 242042

Victorinox Swiss Army Quartz Watch 242042 User Manual

Model: 242042

1. INTRODUCTION

This manual provides essential information for the proper use, setup, and maintenance of your Victorinox Swiss Army Quartz Watch, model 242042. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Image 1.1: Victorinox Swiss Army Quartz Watch 242042. This image displays the watch's front view, highlighting its blue dial, silver-tone stainless steel case, and mesh bracelet.

2. KEY FEATURES

- **Movement:** Ronda 517 Quartz Day-Date movement for precise timekeeping and calendar organization.
- **Case:** 42mm Stainless Steel Case with a fixed bezel.
- **Water Resistance:** 10 ATM / 100 M / 330 FT, suitable for swimming and snorkeling, but not for diving.
- **Bracelet:** Mesh Stainless Steel with a sliding buckle closure for adjustable fit.
- **Dial:** Blue dial with raised numerals and oversized SuperLuminova® lit hands for enhanced 24-hour readability.
- **Crystal:** Triple-Coated Anti-Reflective Sapphire Crystal for durability and clear visibility.
- **Functions:** Day/Date window located at the 3 o'clock position.
- **Additional Features:** Anti-Shock and Anti-Magnetic properties for increased resilience.



- Raised numerals and oversized hands filled with Swiss Super-LumiNova



- Anti-Shock & Anti-Magnetic With Day-Date Function



Triple-Coated Anti-Reflective Sapphire Crystal

Image 2.1: Detailed view of the watch dial. This image highlights the raised numerals, Super-LumiNova luminescence on hands and markers, the day/date function, and the anti-magnetic feature.

3. SETUP

3.1 Setting Time and Date

1. **Pull out the crown:** Gently pull the crown (located on the right side of the watch case) to position 2 for setting the date, or to position 3 for setting the time.
2. **Set the date:** In position 2, turn the crown clockwise or counter-clockwise to adjust the date.
3. **Set the time:** In position 3, turn the crown to move the hands. Ensure you set the correct AM/PM by observing the date change (the date changes around midnight).
4. **Push in the crown:** Once the time and date are set, push the crown back into position 1 (normal operating position) to start the watch.

3.2 Adjusting the Mesh Bracelet

The mesh bracelet features a sliding buckle closure for a customizable fit. To adjust:

1. **Open the clasp:** Use a small tool or fingernail to lift the locking plate on the clasp.
2. **Slide the clasp:** Once unlocked, slide the clasp along the mesh band to achieve the desired length.

3. **Secure the clasp:** Press the locking plate back down firmly until it clicks into place. Ensure it is securely fastened to prevent accidental opening.

4. OPERATING YOUR WATCH

4.1 Basic Timekeeping

Once the time and date are set, the watch will operate continuously. The quartz movement ensures high accuracy.

4.2 Water Resistance Guidelines

Your watch is water resistant to 10 ATM (100 meters / 330 feet). This rating means it is suitable for:

- Everyday use, including splashes, rain, and showering.
- Swimming in shallow water.
- Snorkeling.

It is **not** suitable for:

- Scuba diving or high-impact water sports.
- Operating the crown or pushers while the watch is wet or submerged.

Always ensure the crown is fully pushed in before exposing the watch to water.



Ronda 517 Quartz Movement

Image 4.1: Victorinox Swiss Army Quartz Watch worn on a wrist. This image demonstrates the watch's appearance during wear and highlights the Ronda 517 Quartz Movement.

5. MAINTENANCE

5.1 Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, damp cloth.
- For the mesh bracelet, use a soft brush and mild soapy water to remove dirt, then rinse thoroughly with clean water and dry completely.
- Avoid using harsh chemicals or abrasive materials.

5.2 Battery Replacement

The watch is powered by a quartz movement requiring a battery. When the watch stops or the second hand begins to jump in 4-second intervals (End-of-Life indicator), the battery needs replacement. It is recommended to have the battery replaced by an authorized Victorinox service center to ensure proper sealing and water resistance.

5.3 Storage

When not wearing your watch, store it in a dry, cool place, away from direct sunlight and extreme temperatures. Keep it away from strong magnetic fields to prevent interference with the movement.

6. TROUBLESHOOTING

- **Watch not running:** Check if the crown is fully pushed in. If it is, the battery may need replacement.
- **Date/Time incorrect:** Refer to Section 3.1 to reset the time and date. Ensure the crown is fully pushed in after setting.
- **Condensation under crystal:** This indicates a loss of water resistance. Immediately take the watch to an authorized service center.
- **Bracelet discomfort:** Adjust the sliding buckle as described in Section 3.2.

For issues not covered here, please contact Victorinox customer support or an authorized service center.

7. SPECIFICATIONS

Model Number	242042
Brand	Victorinox
Movement Type	Ronda 517 Quartz Day-Date
Case Material	Stainless Steel
Case Diameter	42 mm
Case Thickness	10.55 mm
Band Material	Mesh Stainless Steel
Band Width	21 mm

Dial Color	Blue
Crystal	Triple-Coated Anti-Reflective Sapphire Crystal
Water Resistance	10 ATM / 100 Meters / 330 Feet
Clasp Type	Sliding Buckle
Item Weight	145 Grams (5.11 ounces)

8. WARRANTY AND SUPPORT

Your Victorinox Swiss Army Watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including coverage period and service procedures. For technical support, repairs, or warranty claims, please contact an authorized Victorinox service center or visit the official Victorinox website for more information.