

[Manuals.plus](#) /

> [Nisanuki](#) /

> Nisanuki PFD01 Mini Hidden Camera Photo Frame 1080P HD User Manual

Nisanuki PFD01

Nisanuki PFD01 Mini Hidden Camera Photo Frame 1080P HD User Manual

Model: PFD01

1. INTRODUCTION

Thank you for choosing the Nisanuki PFD01 Mini Hidden Camera Photo Frame. This device is designed for discreet indoor surveillance, offering 1080P HD video recording, motion detection, and loop recording capabilities. It functions as a standard photo frame, blending seamlessly into any home or office environment. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.



Image: The Nisanuki PFD01 Mini Hidden Camera Photo Frame, showcasing its discreet design with a family photo displayed. A magnified view highlights the hidden camera lens at the top.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- Nisanuki PFD01 Mini Hidden Camera Photo Frame
- USB Charging Cable
- User Manual
- SIM Ejector Tool (for resetting or accessing small buttons)

- USB Card Reader (may be included for convenient file transfer)



Image: An illustration of the package contents, showing the photo frame, a USB cable, a SIM ejector tool, and a USB card reader.

3. SETUP

The Nisanuki PFD01 does not require Wi-Fi or complex software, making setup straightforward. A Micro SD card is required for recording (not included).

1. **Prepare Micro SD Card:** Insert a formatted (FAT32) Micro SD card (up to 128GB) into the designated slot on the device. Ensure the card is inserted correctly until it clicks into place.
2. **Select Recording Mode:** Locate the mode switch (often labeled 'M' for Motion Detection and 'L' for Loop Recording or similar) and slide it to your desired recording mode.
3. **Power On:** Press and hold the ON/OFF button for approximately 2 seconds until the indicator light illuminates, indicating the device is powered on and ready to record.

Einfacher Einstieg



Schritt 1

Legen Sie eine formatierte (FAT32) Micro SD-Karte ein



Schritt 2

Wählen Sie den Aufnahmemodus



Schritt 3

Drücken Sie die "ON/OFF Taste" für 2 Sekunden

Image: A visual guide demonstrating the three setup steps: inserting a formatted Micro SD card, selecting the recording mode, and pressing the ON/OFF button.

4. OPERATING INSTRUCTIONS

4.1 Recording Modes

- **Continuous Recording (Loop Recording):** In this mode, the camera records continuously. When the Micro SD card memory is full, the oldest video files will be automatically overwritten by new recordings. This ensures uninterrupted surveillance.
- **Motion Detection Recording:** The camera will automatically begin recording when motion is detected within its field of view. Recording stops when motion ceases, conserving storage space and battery life.

Micro SD Karte 2 Aufnahmemodi



Image: This image illustrates the two recording modes: motion detection, depicted by a person in a mask, and continuous recording, shown as a filmstrip of various everyday activities.

4.2 Powering On/Off

- **To Power On:** Press and hold the ON/OFF button for 2 seconds. The indicator light will turn on.
- **To Power Off:** Press and hold the ON/OFF button for 2 seconds. The indicator light will turn off.

4.3 Charging

Connect the device to a power source using the provided USB cable. The built-in rechargeable Lithium-polymer battery allows for approximately 4 hours of continuous recording on a full charge. The camera can also record while charging, ensuring extended operation without interruption.



Image: An icon symbolizing extended recording time, featuring a battery charging symbol alongside the photo frame camera.

5. VIEWING VIDEO FILES

There are two primary methods to view your recorded video files:

1. **Direct USB Connection:** Connect the photo frame camera directly to your computer using the USB cable. The device will appear as a removable disk, allowing you to access and transfer video files.
2. **Micro SD Card Reader:** Remove the Micro SD card from the camera and insert it into a Micro SD card reader (often included). Connect the card reader to your computer to view the files.



Image: This image illustrates two ways to view recorded video files: by connecting the camera directly to a computer via USB, or by using a Micro SD card reader.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the photo frame. Avoid using liquid cleaners or abrasive materials.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, especially if it will be stored for an extended period.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Micro SD Card:** Periodically format the Micro SD card to maintain optimal performance and prevent data corruption. Back up important recordings before formatting.

7. TROUBLESHOOTING

- **Device Not Turning On:** Ensure the battery is charged. Connect the device to a power source and try again. If the issue persists, try resetting the device using the SIM ejector tool if a reset button is available.
- **No Recording:** Verify that a Micro SD card is properly inserted and formatted (FAT32). Check if the card has sufficient free space. Ensure the device is powered on and in the correct recording mode.
- **Poor Video Quality:** Ensure the camera lens is clean and free from obstructions. Check that the device is set to 1080P HD recording if applicable.
- **Battery Not Charging:** Ensure the USB cable and power adapter are functioning correctly. Try a different cable or power source.
- **Files Not Accessible on Computer:** Ensure the USB connection is secure or the Micro SD card is properly inserted into the card reader. Try connecting to a different USB port or computer.

8. SPECIFICATIONS

Feature	Specification
Model Number	PFD01
Video Resolution	1080P HD
Battery Type	Lithium-polymer
Battery Life (Recording)	Approx. 4 hours
Storage	Micro SD Card (up to 128GB, not included)
Recording Modes	Continuous (Loop Recording), Motion Detection
Connectivity	No Wi-Fi, USB for data transfer/charging
Dimensions (L x W x H)	17 x 11.98 x 2 cm (6.69 x 4.72 x 0.79 inches)
Weight	250 grams (0.55 lbs)
Indoor/Outdoor Use	Indoor

9. WARRANTY AND SUPPORT

Nisanuki products are designed for reliability and performance. For specific warranty information, please refer to the documentation included with your purchase or contact your retailer. If you encounter any issues or have questions regarding your Nisanuki PFD01 Mini Hidden Camera Photo Frame, please reach out to the customer support channel provided by your point of purchase.

