

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Ortizan](#) /

> [Ortizan Portable Bluetooth Speaker X10 User Manual](#)

## Ortizan X10

# Ortizan Portable Bluetooth Speaker X10 User Manual

Model: X10

[Introduction](#) [Components](#) [Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [W & Support](#)

## 1. INTRODUCTION

Thank you for choosing the Ortizan Portable Bluetooth Speaker X10. This manual provides essential information for the safe and efficient use of your speaker. Please read it thoroughly before operation and retain it for future reference.

The Ortizan X10 is designed to deliver high-fidelity stereo sound with deep bass, featuring IPX7 waterproofing, vibrant LED lights, and advanced Bluetooth 5.3 connectivity. It supports wireless stereo pairing for an enhanced audio experience and offers up to 30 hours of playtime.

## 2. WHAT'S IN THE Box

Please check the package contents to ensure all items are present:

- 1 x Ortizan Portable Bluetooth Speaker X10
- 1 x USB-C Charging Cable
- 1 x 3.5mm AUX Cable
- 1 x Lanyard
- 1 x Quick Start Guide

## 3. PRODUCT OVERVIEW

Familiarize yourself with the speaker's controls and ports.

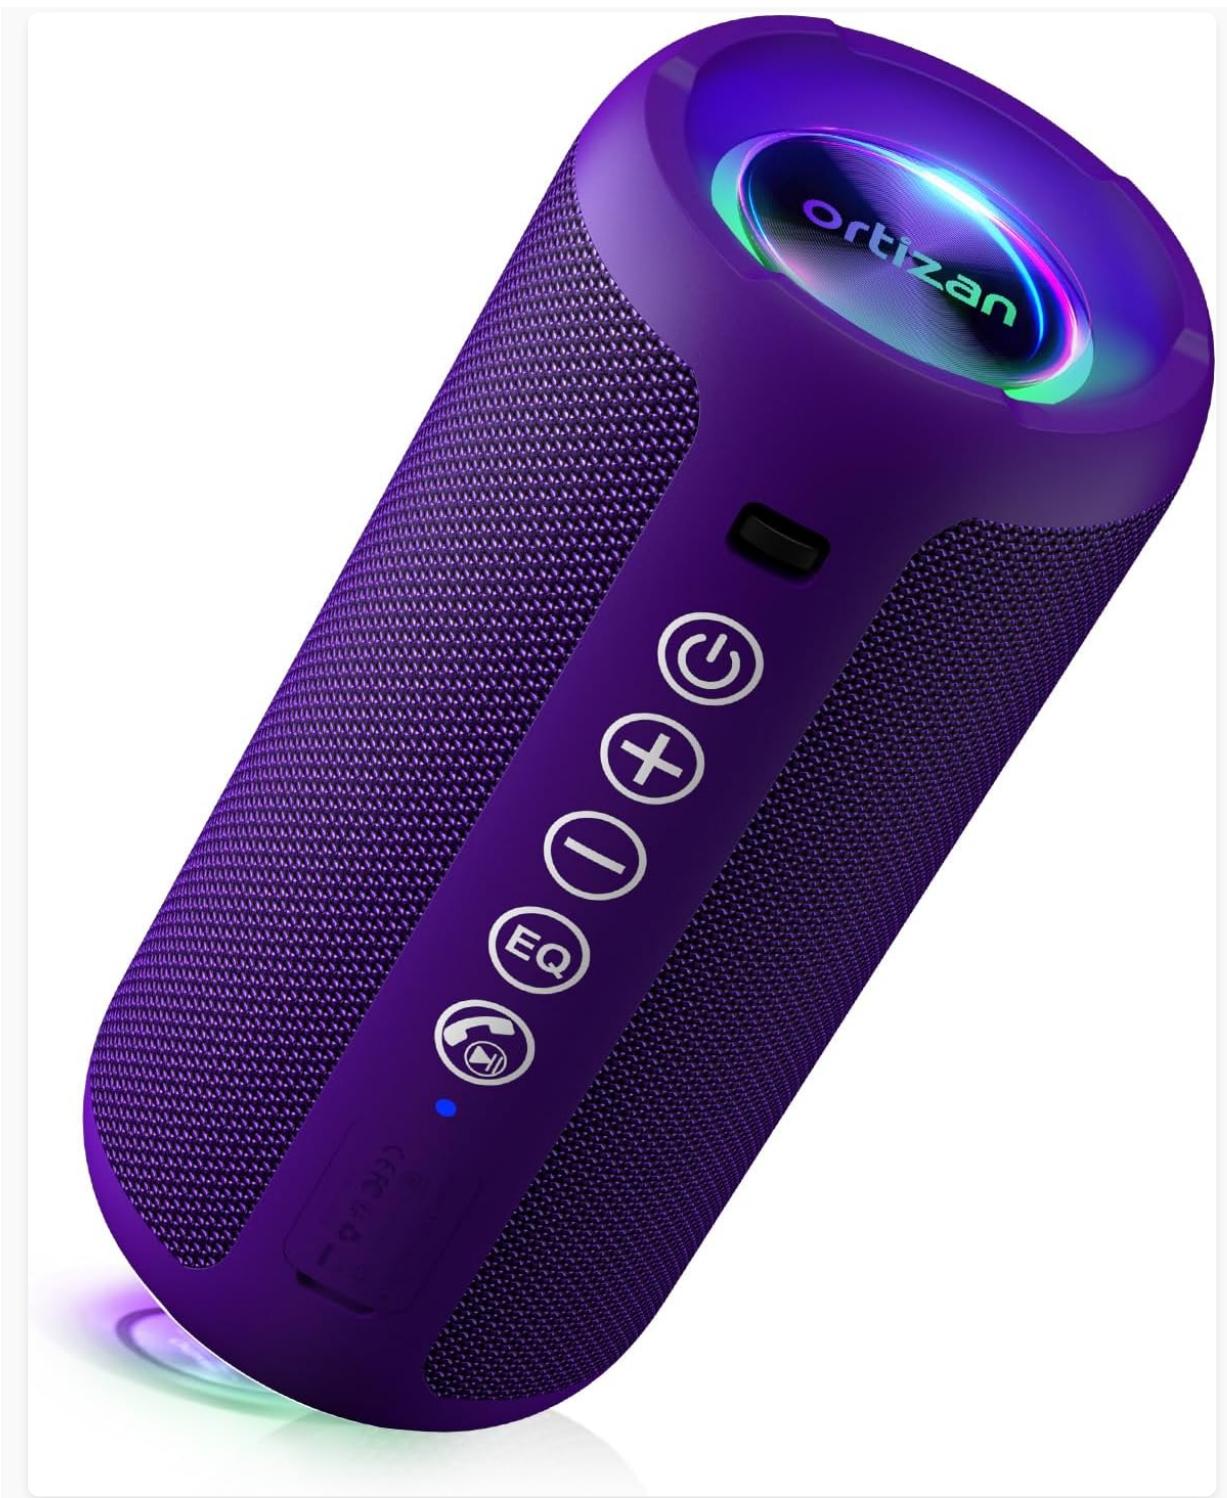


Image: The Ortizan X10 speaker in purple, showing the control panel on the side and the illuminated Ortizan logo on the top.

#### Control Buttons:

- **Power Button ( )**: Press and hold to power on/off. Short press to change LED light modes.
- **Volume Up Button ( )**: Short press to increase volume. Long press for next track.
- **Volume Down Button ( )**: Short press to decrease volume. Long press for previous track.
- **EQ Button (EQ)**: Short press to cycle through different EQ sound modes.
- **Play/Pause/Call Button ( / )**: Short press to play/pause music. Short press to answer/end calls. Long press to reject calls. Double press to activate voice assistant.
- **Bluetooth Indicator Light**: Indicates Bluetooth connection status.

#### Ports:

- **USB-C Charging Port**: For charging the speaker.
- **AUX-in Port**: For wired audio connection using the 3.5mm AUX cable.
- **TF Card Slot**: For playing music directly from a Micro SD card.

## 4. SETUP

### 4.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's USB-C port and the other end to a 5V DC power adapter (not included).

- The charging indicator light will illuminate during charging.
- A full charge takes approximately 3 hours.
- The speaker offers up to 30 hours of playtime on a full charge (at 65dB volume).

### 4.2 Powering On/Off

Press and hold the Power button () for 2-3 seconds to turn the speaker on or off. A sound prompt will indicate the power status.

### 4.3 Bluetooth Pairing

To connect your speaker to a Bluetooth-enabled device:

1. Turn on the speaker. The Bluetooth indicator light will flash, indicating it's in pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "Ortizan X10" from the list.
4. Once connected, the Bluetooth indicator light will remain solid, and you will hear a confirmation sound.

The speaker will automatically attempt to reconnect to the last paired device when powered on.



Image: The Ortizan X10 speaker positioned next to a smartphone, illustrating its multi-functional connectivity for playing music from various

devices.

#### 4.4 True Wireless Stereo (TWS) Pairing

You can pair two Ortizan X10 speakers together for a true stereo sound experience:

1. Ensure both speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button . You will hear a pairing tone.
3. The two speakers will automatically connect to each other. Once connected, you will hear a confirmation sound, and the Bluetooth indicator on the primary speaker will flash, while the secondary speaker's indicator will be solid.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 4.3.



Image: Two Ortizan X10 speakers set up for wireless stereo pairing, enhancing the audio experience for a TV and tablet.

#### 4.5 AUX-in Mode

To use the speaker with a wired connection:

1. Connect one end of the 3.5mm AUX cable to the speaker's AUX-in port.
2. Connect the other end to the audio output jack of your device.
3. The speaker will automatically switch to AUX mode.

#### 4.6 TF Card Mode

To play music from a Micro SD card:

1. Insert a Micro SD card (TF card) with music files into the TF card slot.
2. The speaker will automatically detect the card and begin playing music.

## 5. OPERATING INSTRUCTIONS

### 5.1 Music Playback

- **Play/Pause:** Short press the Play/Pause/Call button ().
- **Volume Up:** Short press the Volume Up button ().
- **Volume Down:** Short press the Volume Down button ().
- **Next Track:** Long press the Volume Up button ().
- **Previous Track:** Long press the Volume Down button ().

### 5.2 Hands-Free Calling

When connected via Bluetooth, you can manage calls directly from the speaker:

- **Answer/End Call:** Short press the Play/Pause/Call button ().
- **Reject Call:** Long press the Play/Pause/Call button ().
- **Activate Voice Assistant:** Double press the Play/Pause/Call button ().

### 5.3 LED Light Modes

The speaker features multiple LED light modes that sync with your music.



Image: The Ortizan X10 speaker displaying its dynamic, colorful LED lights, which flash and change with the music beat. Short press the Power button () to cycle through the available LED light modes or to turn the lights off.

## 5.4 EQ Modes

The speaker offers different Equalizer (EQ) modes to optimize sound for various content. Short press the EQ button to cycle through the available EQ modes (e.g., Bass Boost, Vocal, 3D Sound).

## 6. MAINTENANCE

### 6.1 Cleaning

- Wipe the speaker with a soft, damp cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents, as these may damage the surface.
- Ensure all ports are dry before charging or connecting cables.

### 6.2 Storage

- Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, charge the speaker every 3 months to maintain battery health.

### 6.3 IPX7 Waterproof Rating

The Ortizan X10 speaker is IPX7 waterproof, meaning it can be immersed in water up to 1 meter (3 feet) for 30 minutes. While it is protected against water, it is not designed for continuous underwater use.



Image: The Ortizan X10 speaker shown in a water-splashed setting, highlighting its IPX7 waterproof feature.

- Ensure the charging port and AUX-in port covers are securely closed before exposing the speaker to water.
- After exposure to water, dry the speaker thoroughly before charging.

## 7. TROUBLESHOOTING

If you encounter issues with your speaker, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; Bluetooth disabled on device; device too far.	Ensure speaker is on and flashing Bluetooth indicator. Enable Bluetooth on device. Move device closer (within 66 feet). Forget "Ortizan X10" on your device and re-pair.
No sound.	Volume too low; incorrect input mode; device not playing.	Increase speaker and device volume. Check if in correct mode (Bluetooth, AUX, TF Card). Ensure music is playing on your device.
TWS pairing fails.	Speakers already connected to other devices; incorrect pairing procedure.	Disconnect both speakers from any Bluetooth devices. Follow TWS pairing steps precisely (Section 4.4).
Sound distortion.	Volume too high; low battery; interference.	Reduce volume. Charge speaker. Move away from other electronic devices.

## 8. SPECIFICATIONS

Feature	Detail
Model Name	X10
Bluetooth Version	5.3
Output Power	24W (2 x 12W)
Frequency Response	Up to 20 KHz
Signal-to-Noise Ratio	80 dB
Battery Capacity	2600 mAh
Charging Time	Approx. 3 hours
Playtime	Up to 30 hours (at 65dB volume)
Waterproof Rating	IPX7
Bluetooth Range	Up to 66 feet (unobstructed)
Input Voltage	5V DC
Dimensions (D x W x H)	3" x 3" x 6.69" (7.62cm x 7.62cm x 17cm)
Weight	1.15 pounds (0.52 kg)
Material	Acrylonitrile Butadiene Styrene (ABS), Aluminum
Connectivity	Bluetooth, AUX, TF Card

## 9. WARRANTY AND SUPPORT

### 9.1 Limited Warranty

The Ortizan Portable Bluetooth Speaker X10 comes with a limited warranty. Please refer to the warranty card included in

your package or contact Ortizan customer support for specific terms and conditions.

## 9.2 Customer Support

 
 
If you have any questions, concerns, or require technical assistance, please contact Ortizan customer support through the retailer where you purchased the product or visit the official Ortizan website for contact information.

 
## 10. PRODUCT VIDEOS

No relevant official product videos from the seller were found for embedding in this manual.


© 2025 Ortizan. All rights reserved.

### Related Documents - X10

 Wireless Speaker User Manual Model:X10	<p><a href="#"><u>X10 Wireless Speaker User Manual</u></a></p> <p>User manual for the X10 Wireless Speaker, detailing features, specifications, button configuration, usage instructions, care, and warranty information.</p>
 Wireless Speaker User Manual Model:X8	<p><a href="#"><u>Ortizan X8 Wireless Speaker User Manual</u></a></p> <p>Comprehensive user manual for the Ortizan X8 Wireless Speaker, detailing features, specifications, button configurations, usage instructions for Bluetooth and TWS modes, TF card and AUX-in functionality, auto power-off, charging, care, and warranty information.</p>
 Wireless Speaker User Manual Model:X10	<p><a href="#"><u>Ortizan X10 Wireless Bluetooth Speaker User Manual</u></a></p> <p>User manual for the Ortizan X10 Wireless Bluetooth Speaker. Learn about features, specifications, setup, operation, care, and warranty information for your device.</p>
 Wireless Speaker User Manual Model:X30	<p><a href="#"><u>Ortizan X30 Wireless Speaker User Manual</u></a></p> <p>Explore the features, specifications, and usage instructions for the Ortizan X30 Wireless Speaker. This user manual covers Bluetooth 5.3 connectivity, IPX7 water resistance, 50W output, TWS pairing, and more.</p>
 Wireless Speaker User Guide	<p><a href="#"><u>Ortizan X10 Wireless Speaker User Guide</u></a></p> <p>Comprehensive user guide for the Ortizan X10 wireless speaker, covering package contents, keys and functions, operating modes, technical parameters, and compliance information.</p>

 Wireless Speaker User Manual Mode : S3	<p><a href="#"><u>Ortizan S3 Wireless Speaker User Manual - Bluetooth 5.0, IPX7 Waterproof</u></a></p> <p>Explore the features, specifications, and usage guide for the Ortizan S3 Wireless Speaker. Learn about its Bluetooth 5.0, IPX7 waterproof rating, 24-hour playtime, and T-W-S capabilities.</p>
---	---


Documents - Ortizan – X10

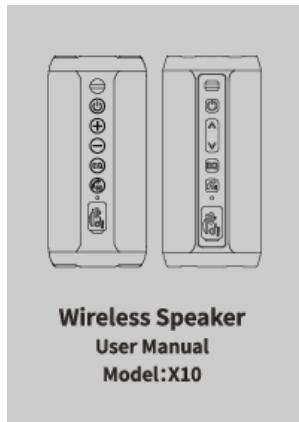

[X10 Wireless Speaker User Manual](#)

User manual for the X10 Wireless Speaker, detailing features, specifications, button configuration, usage instructions, care, and warranty information.

lang: score:31 filesize: 4.66 M page\_count: 56 document date: 2024-04-29

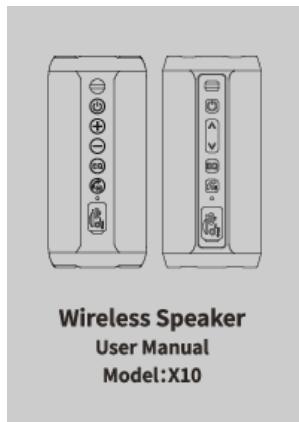

[Ortizan X10 Wireless Bluetooth Speaker User Manual](#)

User manual for the Ortizan X10 Wireless Bluetooth Speaker. Learn about features, specifications, setup, operation, care, and warranty information for your device.

lang: score:18 filesize: 3.36 M page\_count: 56 document date: 2023-05-16