



[Manuals.plus](#) /

> [Mitclear](#) /

> Mitclear Magnetic Window Cleaner Tool User Manual (Model IKU-110535)

Mitclear IKU-110535

Mitclear Magnetic Window Cleaner Tool User Manual

Model: IKU-110535

1. PRODUCT OVERVIEW

The Mitclear Magnetic Window Cleaner Tool is designed for efficient and safe cleaning of single and double-glazed windows. It features an adjustable magnetic force to accommodate various glass thicknesses, allowing users to clean both sides of a window simultaneously from the interior.



Image 1.1: The Mitclear Magnetic Window Cleaner Tool, showing its triangular design and adjustable dial.

2. PACKAGE CONTENTS

Verify that all components are present in the package:

- Magnetic Window Cleaner Tool (two halves)
- Safety Wire Rope (118 inches / 3 meters)
- Large Sponge Cleaning Pads (6 pre-installed, 3 extra sets)
- Rubber Blades (2 extra pieces)
- Window Cleaner Opener (for separating the tool)
- Extra Assemble Buckles (6 pieces)



Image 2.1: Illustration of the magnetic window cleaner and its included accessories, such as extra sponges and rubber blades.

3. SETUP AND PREPARATION

- 1. Familiarization:** Before first use, it is highly recommended to watch any available instructional videos and practice using the tool on an easily accessible window from the inside. This will help you understand its operation and magnetic strength.
- 2. Adjust Magnetic Force:** The tool features a 6-gear adjustable magnetic force dial. Rotate the dial to select the appropriate magnetic strength for your window thickness.
 - Gear 1: Weakest magnetic force, suitable for thinner single-glazed windows.
 - Gear 6: Strongest magnetic force, suitable for thicker double-glazed windows.
 - The tool is designed for window thicknesses between 0.2"-1.4" (5-35mm).



Image 3.1: Close-up of the adjustable magnetic force dial, showing settings from 1 to 6.

3. **Attach Safety Rope:** Securely attach the 118-inch (3-meter) safety wire rope to the exterior half of the cleaner. Loop the other end of the rope around your wrist or a secure fixture inside the room to prevent the exterior half from falling.
4. **Prepare Cleaning Solution:** Apply your preferred window cleaning solution or water to the sponge pads on both halves of the cleaner. Ensure the pads are adequately moist to facilitate smooth gliding and effective cleaning.

4. OPERATING INSTRUCTIONS

1. **Separate the Halves:** Use the provided window cleaner opener tool to carefully separate the two magnetic halves. When separated, the magnetic force automatically returns to Gear 1 (weakest) to prevent accidental pinching.
2. **Position the Cleaner:** Place one half of the cleaner on the inside surface of the window and the other half on the corresponding outside surface. The magnets will attract and hold the two halves together through the glass.
3. **Begin Cleaning:** Hold the interior half of the cleaner firmly by its handle. Move the cleaner across the window surface in a consistent pattern (e.g., S-shape or horizontal/vertical strokes). The exterior half will mirror your movements, cleaning the outside simultaneously.
4. **Ensure Continuous Moisture:** The large sponge pads are designed to hold sufficient water. Reapply cleaning solution to the pads as needed to maintain moisture and prevent streaks.

5. **Corner Cleaning:** The triangular design of the cleaner helps reach corners more effectively. Adjust your movements to ensure thorough cleaning of all window areas.
6. **Finishing:** Once cleaning is complete, carefully separate the two halves. The magnetic force will reduce to Gear 1 upon separation.



Image 4.1: The magnetic window cleaner being used to clean a high-rise window, demonstrating its double-sided action.



Adjustable Magnetic Force

Long Wire Rope Ensures Safety

Separate Rack to Store

Window Cleaner Opener

Image 4.2: A composite image showing the adjustable magnetic force dial, the safety wire rope, how to separate the cleaner halves, and how to open the cleaner for use.

5. MAINTENANCE

- **Cleaning Pads:** The sponge cleaning pads are replaceable. When they become worn or excessively dirty, remove them and replace with new ones from the extra sets provided.
- **Rubber Blades:** The rubber squeegee blades can also be replaced if they show signs of wear or damage, which can affect cleaning performance. Two extra rubber blades are included.
- **Tool Cleaning:** After each use, rinse the magnetic cleaner tool thoroughly with clean water to remove any residual cleaning solution or dirt. Allow it to air dry completely before storing.
- **Storage:** Store the two halves of the cleaner separated, ideally with the plastic divider in place, to prevent them from sticking together at full magnetic force and to protect your fingers.



High-quality Rubber Squeegee

More Cleaning Sponge Pads

Triangular Shape Design

Comfortable Wide Wrist Strap

Image 5.1: Detailed view of the high-quality rubber squeegee, multiple cleaning sponge pads, the triangular shape design, and the comfortable wide wrist strap.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Cleaner halves are difficult to separate.	Magnetic force set too high, or no opener used.	Ensure the magnetic force dial is set to Gear 1 (weakest) before attempting to separate. Use the provided window cleaner opener tool.
Cleaner does not stay attached to the window.	Magnetic force set too low for window thickness.	Increase the magnetic force setting using the dial until the cleaner securely attaches to both sides of the window. Refer to the window thickness guidelines in Section 3.
Leaves streaks or does not clean effectively.	Sponge pads are dry, dirty, or rubber blades are worn.	Ensure sponge pads are adequately moist with cleaning solution. Replace dirty sponge pads or worn rubber blades.

Problem	Possible Cause	Solution
Difficulty maneuvering the cleaner.	Lack of familiarity with the tool.	Practice on an easily accessible window. Watch instructional videos for technique guidance.

7. SPECIFICATIONS

- **Brand:** Mitclear
- **Model Number:** IKU-110535
- **Color:** Gray
- **Style:** Magnetic Window Cleaner
- **Product Dimensions:** 6"W x 5.5"H (15.5 cm W x 14 cm H)
- **Item Weight:** 2.42 pounds (1.1 Kilograms)
- **Blade Material:** Rubber
- **Handle Material:** Polypropylene
- **Blade Length:** 15.5 Centimeters
- **Compatible Window Thickness:** 0.2"-1.4" (5-35mm)
- **Magnetic Force Adjustment:** 6 Gears
- **Safety Feature:** 118" (3m) Safety Wire Rope

8. WARRANTY AND SUPPORT

Specific warranty information for the Mitclear Magnetic Window Cleaner Tool (Model IKU-110535) is not provided in the available product data. For details regarding warranty coverage, please refer to the product packaging or contact the seller directly. For further assistance, technical support, or inquiries about replacement parts, please contact the manufacturer or the retailer from whom the product was purchased.

9. IMPORTANT SAFETY INFORMATION

- Always attach the safety rope to the exterior half of the cleaner and secure it to prevent accidental drops.
- Exercise caution when handling the magnetic halves to avoid pinching fingers due to strong magnetic attraction. The tool is designed to reduce magnetic force to Gear 1 upon separation to minimize this risk.
- Do not use the cleaner on cracked or damaged glass.
- Keep out of reach of children.
- Ensure the magnetic force setting is appropriate for your window thickness to prevent the cleaner from falling or becoming stuck.

10. OFFICIAL PRODUCT VIDEOS

Based on the provided product data, no official product videos from the seller are available for embedding in this manual. Please refer to the product listing page for any available video demonstrations.

